



AG95141P

NO.	DESCRIPTION	NO.	DESCRIPTION
1	UPPER FLANGE	25	BEARING GUARD
2	LOWER FLANGE	26	TAPPING SCREW ST4X75
3	GUARD ASSEMBLY	27	WIND FENDER
5	DUSTPROOF COVER	28	STATOR
6	SCREW M4X13	30	MOTOR HOUSING
7	FRONT COVER	31	BRUSH HOLDER
8	BEARING 6201	32	BRUSH SUPPORT
9	CIRCLIPS FOR HOLE Ø32	33	BRUSH CAP
10	BIG GEAR & OUTPUT SHAFT	36	TAPPING SCREW ST4X22
11	NEEDLE BEARING HK0808	37	TAPPING SCREW ST4X14
12	SELF-LOCK PIN	38N	SWITCH
13	TAPPING SCREW ST5X22	40	CABLE & PLUG
14	FRONT HOUSING	41	TAPPING SCREW ST4X14
15	SELF-LOCK SPRING	42	CABLE CLAMP
16	SELF-LOCK CAP	43	CORD GUARD
18	BEARING 629	44NN	SWITCH HANDLE
19	MIDDLE COVER	45N	PCB
20	NUT M6	47	SIDE HANDLE
21	SMALL GEAR		
22	ROTOR		
23	DUST-PROOF CIRCLE		
24	BEARING 607		

ST20160405-02