



## AG9515E

NO.	DESCRIPTION	NO.	DESCRIPTION
B1	OUTER FLANGE	B28	BEARING 608Z
B2	INNER FLANGE	B29	BEARING BUSH
B3N	PROTECTIVE GUARD	B30	FAN GUIDE
B6	OUTPUT SHAFT	B31	STATOR
B7	KEY 3X10	B32	SCREW ST4.2X65
B8	SCREW M4X16	B33	NAMEPLATE
B9	SPRING WASHER 4	B34	HOUSING
B10	FORE COVER	B35	BRUSH HOLDER
B11	BEARING 6201Z	B36	CARBON BRUSH
B12	CIRCLIP Ø32	B37	BRUSH CAP
B13	BIG GEAR	B38	INDUCTOR
B14	CIRCLIP FOR SHAFT Ø10	B39	VARIABLE SPEED SWITCH
B15	OILED BEARING	B40	SCREW ST4.2X40
B16	"E" RING 6	B41	RIGHT HANDLE
B17	GEAR BOX	B42	SCREW ST4.2X18
B18	SCREW ST4.2X20	B43	LEFT HANDLE
B19	BRAKE SPRING	B44	SWITCH
B20	BRAKE PIN	B45	CAPACITOR
B21	SIDE HANDLE	B46	SCREW ST4.2X14
B22	SMALL GEAR	B47	CORD CLAMP
B23	BEARING 6000Z	B48	CORD SLEEVE
B24	BEARING COVER	B49	CORD & PLUG
B25	SCREW M4X10	B50N	SPANNER
B26	KEY 2.9X10	B51	GRINDING DISC
B27	ROTOR	B52	HEX WRENCH

RU-ST20191010 VER:3.1