



AG9524P

NO.	DESCRIPTION	NO.	DESCRIPTION
1	OUTER FLANGE	31	ROTOR
2	DISC	32	BEARING 608Z
3	INNER FLANGE	33	BEARING BUSH
4N	WHEEL GUARD	34	WIND GUARD
7	ANTI-DUST COVER	35	SCREW
8	SCREW	36	STATOR
9	SPRING WASHER	37	INSERT PIECE
10	FLAT WASHER	38	HOUSING
11	FORE COVER	39	NAME PLATE
12	SPINDLE	40	SCREW
13	KEY	41	CARBON BRUSH HOLDER
14	BEARING 6202Z	42	SCREW
15	BEARING COVER	43	SPRING
16	SCREW	44	CARBON BRUSH
17	GEAR	45	BRUSH COVER
18	CIRCLIP	46	SOFT START
19	NEEDLE BEARING HK101610	47	ROTARY BUTTON
20	HANDLE	48	ROTARY SPRING
21	SCREW	50	CORD SLEEVE
22	SCREW	51	CORD & PLUG
23	SPRING	52	CORD CLAMP
24	LOCK PIN	53	CAPACITOR
25	GEAR BOX COVER	54	SWITCH
26	GEAR BOX	56	SCREW
27	ANTI-LOOSE NUT	57	LABEL
28N	PINION	58	SPANNER
29	BEARING 6201Z	888	HANDLE ASSEMBLE
30	BEARING COVER		

ST-RU20191216