


AU-1730-04

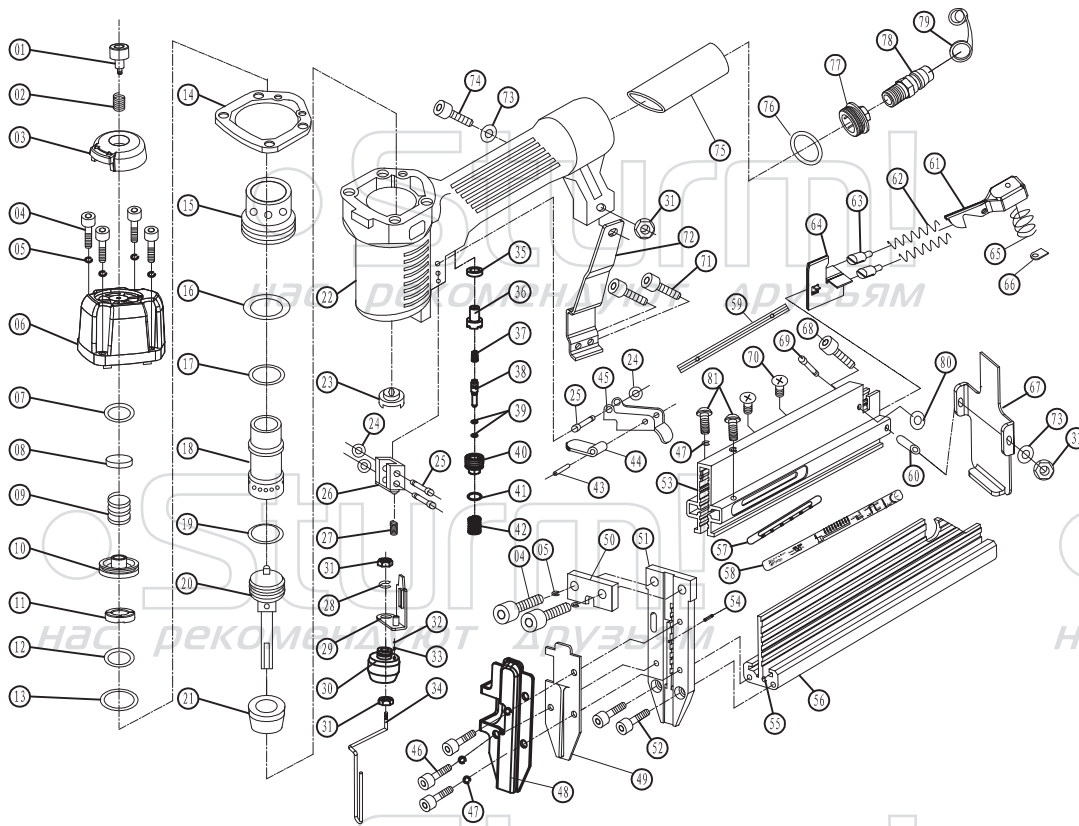

| No. | Description | No. | Description |
|-----|-------------------|-----|-------------------|
| 1 | Bolt | 43 | pin |
| 2 | Deflector Spring | 44 | Safety flap |
| 3 | Air Deflector | 45 | Trigger |
| 4 | Bolt M5x20 | 46 | Bolt M4x10 |
| 5 | Spring Washer | 47 | Spring washer |
| 6 | Cylinder Cover | 48 | Safety cover |
| 7 | O-ring 13.7x2.4 | 49 | Cover plate |
| 8 | Flat Washer | 50 | Base plate |
| 9 | Compressed Spring | 51 | Nail cover |
| 10 | Switch Valve | 52 | Bolt M4x14 |
| 11 | Sealing Washer | 53 | Movable magazine |
| 12 | O-ring 31.2x2.5 | 54 | pin |
| 13 | O-ring 24.8x3.5 | 55 | Inlay Slice |
| 14 | Collar | 56 | Fixed Magazine |
| 15 | Straining ring | 57 | Indicate Label |
| 16 | O-ring 41.7x3 | 58 | magazine |
| 17 | O-ring 26.2x2.4 | 59 | Holding strip |
| 18 | Cylinder | 60 | pipe |
| 19 | O-ring 21x3 | 61 | Magazine switch |
| 20 | Main piston | 62 | spring |
| 21 | Bumper | 63 | pole |
| 22 | Gun Body | 64 | Nail pusher |
| 23 | Rubber Washer | 65 | spring |
| 24 | E-ring ø2.5 | 66 | washer |
| 25 | Step Pin | 67 | Located seat |
| 26 | Safety stand | 68 | Bolt M4X38 |
| 27 | Spring | 69 | Pin |
| 28 | Open collar ring | 70 | Bolt M4X6 |
| 29 | Tip Stand | 71 | Bolt M4X6 |
| 30 | Adj. Nut | 72 | Fixed seat |
| 31 | Nut M4 | 73 | washer |
| 32 | spring | 74 | Bolt M4x20 |
| 33 | Steel ball Dw=2 | 75 | Handle grip |
| 34 | Safety nose | 76 | O-ring 36.3x3.55 |
| 35 | Rectangle gasket | 77 | End plate |
| 36 | Valve bush | 78 | Air Inlet coupler |
| 37 | spring | 79 | Coupler cap |
| 38 | Lockage pole | 80 | O-ring 2.4x1.6 |
| 39 | O-ring 2.5x1.5 | 81 | Bolt M4x14 |
| 40 | Lockage seat | | |
| 41 | O-ring 11.2x2 | | |
| 42 | spring | | |