


BT9543 BT9552

NO.	DESCRIPTION
1	CONNECTING DISC ASSEMBLY
2	HARNESS ASSY
3	HARNESS CLAMP
4	CLAMP
5	THROTTLE ASSY
6	LEFT HANDLE
7	CAP UPPER
8	BRACKER
9	CAP LOWER
10	ALUMINIUM PIPE
11	CONNECT PLATE
12	GEARBOX ASSY
13	3T BLADE
14	LINE PACK
15	80T TCT BLADE
16	GUARD
17	SMALL BLADE
18	STRAIGHT SHAFT
19	OIL BEARINGS
20	SCREW M6X30
21	SCREW M6X25
22	SCREW M5X14
23	SCREW ST4.2X14
24	SCREW M6X25
25	SCREW M5X25
26	SCREW M5X25

BT9543 BT9552-EX-PS-ST22001

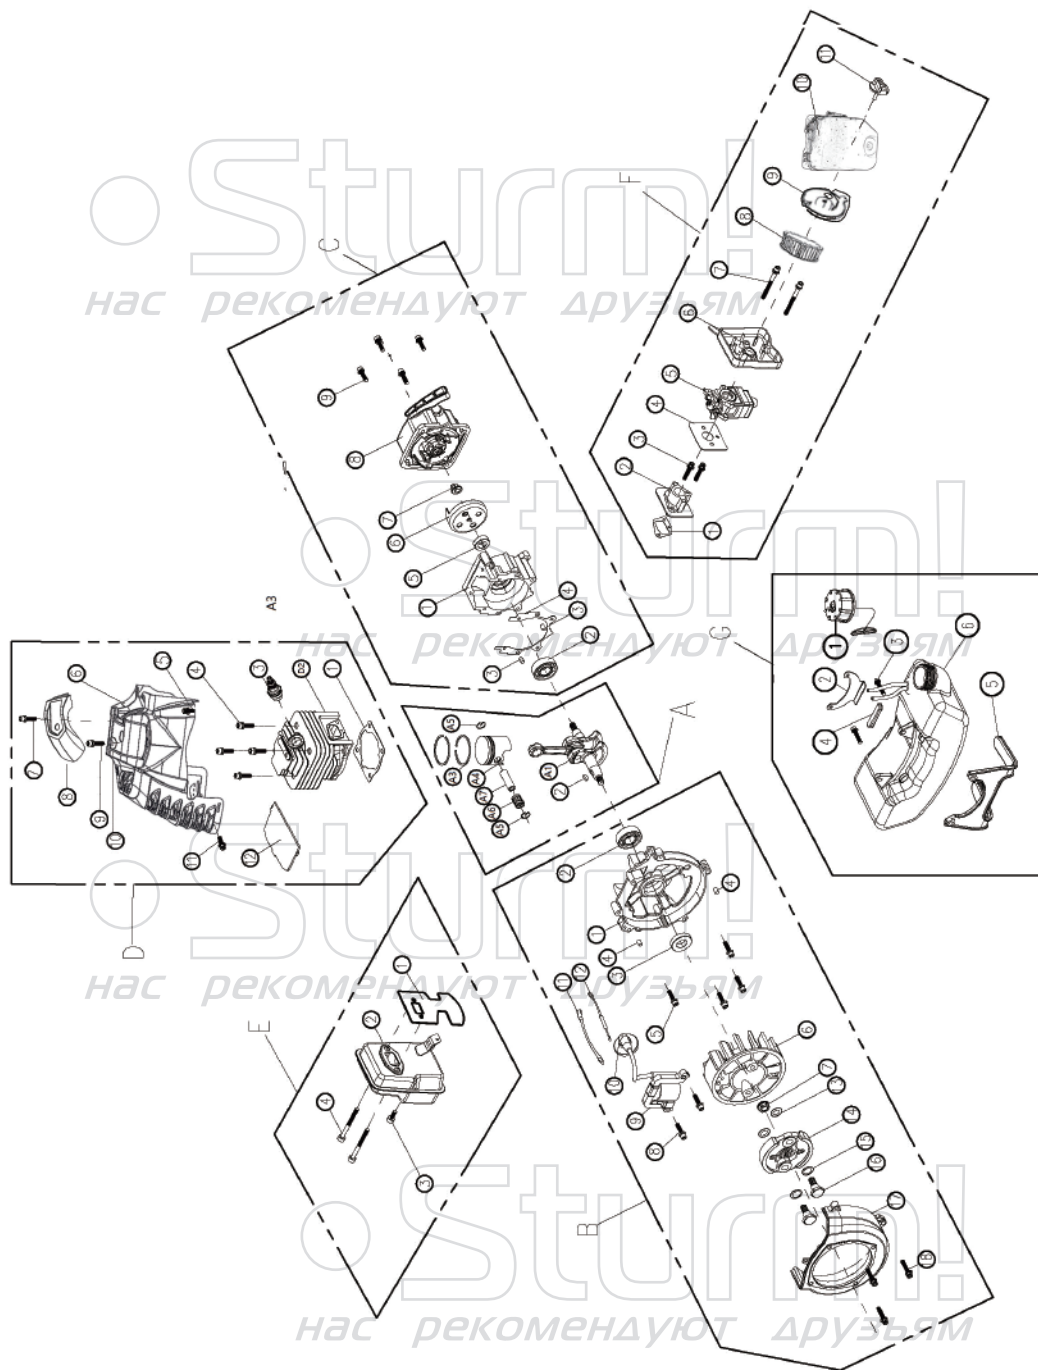

ENGINE FOR BT9543 BT9552

NO.	DESCRIPTION	NO.	DESCRIPTION
A-1	CRANKSHAFT ASSY	D-1	GASKET
A-2	KEY	D-2	CYLINDER
A-3	PISTON RING	D-3	SPARK PLUG
A-4	PISTON	D-4	SCREW
A-5	PISTON PIN RING	D-5	SCREW
A-6	BEARING	D-6	ENGINE COVER
A-7	PISTON	D-7	SCREW
B-1	CRANKSHAFT CASE	D-8	TOP COVER
B-2	BEARING	D-9	SCREW
B-3	OIL SEAL	D-10	SHIM
B-4	PIN	D-11	SCREW
B-5	SCREW	D-12	WIND SCREEN
B-6	FLYING WHEEL	E-1	GASKET
B-7	NUT	E-2	MUFFLER
B-8	SCREW	E-3	SCREW
B-9	COIL	E-4	SCREW
B-10	SPARK PLUG CAP	F-1	GASKET
B-11	OFF LINE	F-2	INLET PIPE
B-12	OFF LINE	F-3	SCREW
B-13	SHIM	F-4	GASKET
B-14	CLUTCH ASSY	F-5	CARBURETOR
B-15	SHIM	F-6	CARBURETOR HOLDER
B-16	SCREW	F-7	SCREW
B-17	SIDE COVER	F-8	SPONGE
B-18	SCREW	F-9	SPONGE COVER
C-1	CRANKSHAFT CASE	F-10	AIR FILTER COVER
C-2	BEARING	F-11	NUT
C-3	PIN	G-1	TANK CAP
C-4	GASKET	G-2	TANK HOLDER
C-5	OIL SEAL	G-3	SCREW
C-6	DRIVING PLATE	G-4	DAMPING
C-7	NUT	G-5	TANK PROTECTOR
C-8	STARTER ASSY	G-6	TANK
C-9	SCREW		

BT9543 BT9552-EX-PS-ST22001