

CC99222

| | NO. | DESCRIPTION | NO. | DESCRIPTION | NO. | DESCRIPTION |
|----|------|--------------------------|------|-----------------------------------|------|------------------------------|
| | 1 | SWITCH PUSH ROD GROUP | 15-3 | SHAFT SLEEVE | 33-1 | VALVE GROUP |
| Ξſ | 21-1 | WHEEL PIN | 15-4 | UMBRELLA GEAR | 33-2 | SEALING RING |
| | 1-2 | SLIDE WHEEL | 15-5 | REAR BEARING 608Z | 33-3 | TANK COVER |
| | 1-3 | SWITCH PUSH ROD | 15-6 | SELF-LOCKING NUT | 33-4 | CAP OF TANK COVER |
| | 3 | SELF –TAPPING SCREW 5*16 | 16 | TANK GROUP | 34 | SELF-TAPPING SCREW |
| | 4 | STRIP | 16-1 | OUTPUT CONNECTOR | 35 | VARIABLE-SPEED BOX |
| | 5 | PUMP GROUP | 16-2 | SPONGE | 36 | SELF-TAPPING SCREW |
| | 5-1 | PUMP FIX BOARD | 16-3 | CHOKE PLUG FOR CONNECTOR | 37 | NUT |
| | 5-2 | WORM GEAR | 16-4 | RUBBER SLEEVE OF CONNECTOR | 38 | SMALL UMBRELLA GEAR |
| | 5-3 | WORM WHEEL | 16-5 | TANK | 39 | ROTOR GROUPWARE |
| | 5-4 | PISTON SLEEVE | 17 | SELF-TAPPING SCREW | 39-1 | FRONT BEARING 6000Z |
| | 5-5 | PISTON SUPPORT | 18 | CHAIN BAR | 39-2 | ROTOR |
| | 5-6 | SEALING RING | 19 | SAW CHAIN | 39-3 | REAR BEARING 627Z |
| | 5-7 | PISTON SLEEVE | 20 | BLADE COVER | 40 | HOUSING GROUPWARE |
| | 5-8 | PUMP BODY | 21 | SPANNER | 40-1 | WIND SCREEN |
| | 5-9 | SELF-TAPPING SCREW | 22 | TENSION NUT | 40-2 | SELF-TAPPING SCREW |
| | 5-10 | OILTUBE | 23 | TENSION SCREW | 40-3 | STATOR |
| | 6 | SELF-TAPPING SCREW | 24 | END CAP GROUP | 40-4 | HOUSING |
| | 7 | BACK PLATE | 24-1 | END CAP SEAL | 40-5 | BRUSH HOLDER |
| | 8 | NOZZLE ASSEMBLY | 24-2 | END CAP | 41 | CAPACITOR |
| | 8-1 | O-RING | 24-3 | BRAND LABEL | 42 | ASSISTANCE HANDLE |
| | 8-2 | OIL CONNECTOR | 24-4 | SHAFT SLEEVE (R) | 42-1 | SELF-TAPPING SCREW |
| | 9 | BRAKING ROD GROUP | 24-5 | FLANGE NUT | 43 | SELF-TAPPING SCREW |
| | 9-1 | MACHINE SCREW | 25 | NUT SHIELD | 44 | REAR HANDLE HOUSING ASSEMBLY |
| | 9-2 | BRAKING WASHER | 26 | MIDDLE COVER GROUP | 45 | SWITCH BUTTON |
| | 9-3 | SPRING LEAF | 26-1 | BEARING 6900Z | 46 | SWITCH |
| | 9-4 | DIVIDER ROD | 26-2 | SEALING RING FOR OUTPUT CONNECTOR | 47 | CARBON BRUSH COVER |
| | 9-5 | WASHER | 26-3 | MIDDLE COVER INSERT | 48 | CARBON BRUSH |
| | 9-6 | BRAKING ROD SPRING | 26-4 | MACHINE SCREW | 49 | PUSH ROD SPRING |
| | 9-7 | BRAKING ROD FIX BOARD | 26-5 | SEAL SHIM | 50 | SELF-TAPPING SCREW |
| | 9-8 | BRAKING ROD | 26-6 | MIDDLE COVER | 51 | SELF-TAPPING SCREW |
| | 10 | CONTROL SWITCH | 26-7 | MACHINE SCREW | 52 | CABLE SLEEVE |
| | 11 | E-CIRCLIP | 27 | SELF-TAPPING SCREW | 53 | CABLE |
| | 12 | SPROCKET | 28 | SELF-TAPPING SCREW | 54 | CABLE PRESSURE BOARD |
| | 13 | SEALING COVER | 29 | SELF-TAPPING SCREW | 55 | SELF-TAPPING SCREW |
| | 14 | SPRING | 30 | BUFFER BOARD | | |
| | 15 | SHAFT GROUP | 31 | CONNECTION WIRE | ۲(۱ | |
| | 15-1 | SHAFT | 32 | SWITCHTRIGGER | | |
| | 15-2 | BRAKING SPRING | 33 | OIL TANK COVER GROUP | | |
| | | | | | | CT20140102 |

POWER • GAS • HAND • TOOLS