



# GC99371B

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
1	CARBURETOR SCREW	55	CLUTCH SPRING	108	IDLE ADJUSTMENT SCREW GUIDE SLEEVE
2	INTAKE ELBOW	56	BLOCK	109	FRONT GUARD
3	PAN HEAD SELF-TAPPING SCREW 4.8 * 16	57	CLUTCH PADS	110	BALANCING WEIGHT
4	CARBURETTOR	58	PASSIVE DISK	111	BUSH
5	CARBURETOR GASKET	59	NEEDLE ROLLER BEARINGS 10 * 13 * 13	112	BAFFLE TUBE
6	INTAKE MANIFOLD	60	WORM	113	SCREW M5 * 40
7	GASKET	61	PAN HEAD SCREWS M4 * 14	114	NUT M8
8	SPARK PLUG	62	OIL PUMP COVER	115	RIGHT HOUSING
9	HEXAGON COMBINATION OF SCREWS M5 * 20	63	OIL PIPE	116	SCREW ST4.2 * 10
10	CYLINDER	64	OIL PUMP	117	GUIDE PLATE
11	SQUARE HEAD SCREWS M5 * 60	65	GROUND WIRE	118	FRONT GUARD SPRING
12	SILENCER GASKET	66	WORM GASKET	119	SPRING SEAT
13	SILENCER	67	NOZZLE	120	BALANCING WEIGHT TORSIONAL SPRING
15	HEXAGON SCREW M5 * 14	68	SCREW M5 * 14	121	NUT M5
16	NUT M5	69	FUEL PIPE	122	GASKET 5.2 * 15 * 1.5
17	CYLINDER GASKET	70	FUEL TUBE SOCKET	123	BRAKE SPRING
18	PISTON RING	71	FUEL FILTER	124	BRAKE SPRING COVER
19	PISTON PIN RETAINER	72	OIL-RETURNING PIPE 1	125	SCREW ST4.2 * 13
20	PISTON	73	OIL-RETURNING PIPE 2	126	VICE LEVER
21	PISTON PIN	74	BALANCER	127	MAIN LEVER
22	NEEDLE BEARING	75	BALANCER SEAT	128	PIN 3 * 14
23	ANTIFRICTION PADS	77	AIR PIPE	129	CYLINDRICAL PIN 3 * 9
24	CHAIN BLOCK	78	OIL NOZZLE JOINTS	130	BRAKE LEVER
25	STUD	79	OIL FILTER	131	BRAKE SPRING
26	HEXAGON SCREW M5 * 12	80	902TR	132	BRAKE STRIP
27	TENSIONING SCREW M5 * 48	81	HANDLE COVER	133	SHROUD
28	TENSIONING BLOCK	82	THROTTLE ROD	134	SHEAVE SPACER
29	OIL OUTLET COVER	83	THROTTLE TRIGGER	135	STARTING DIAL
30	SCREW M4 * 10	84	TRIGGER SPRING	136	STARTING DIAL SPRING
31	FLAT PAD $\phi$ 5	85	TRIGGER CONTROL ARM	137	STARTING DRAWSTRING
32	SEAL 12 * 32 * 5.5	86	BULB	138	STARTING SHEAVE
33	STOP RING $\phi$ 32	87	FLAMEOUT SWITCH	139	STARTING SPRING
34	HEXAGON COMBINATION OF SCREWS M5 * 30	88	TANK	142	STARTER COVER
35	RIGHT CRANKCASE	89	PAN HEAD SCREWS ST4.8 * 25	143	STARTER HANDLE
36	CYLINDRICAL PIN 3 * 8	90	THROTTLE TRIGGER POSITIONING PIN 5 * 28	144	HANDLE SPRING
37	BEARING 6201	91	OIL CAP OFF PREVENTION NETWORK	145	TORSIONAL SPRING COVER
38	CRANKSHAFT CONNECTING ROD ASSEMBLY	92	OIL SEAL GASKET	146	HANDLE
39	WOODRUFF KEY 3 * 3.7 * 11	93	OIL CAP	147	GUIDE
40	CRANKCASE GASKET	94	FUEL TANK CAP	148	CHAIN
42	LEFT CRANKCASE	95	FUEL GASKET	149	GUIDE COVER
43	SEAL 12 * 22 * 7	96	BREAK-AWAY NET	150	T4 HEX
44	IGNITION COIL	97	SPRING	151	T3 HEX
45	FLAMEOUT LINE	98	AIR FILTER LOCK NUT	152	SLEEVE
46	HEXAGON SCREW M4 * 16	99	SHOCK	153	SCREWDRIVER
47	FLANGE NUT M8	100	AIR FILTER COVER	154	FILE
48	MAGNETIC FLYWHEEL	101	AIR FILTER	200	STARTER ASSEMBLY
49	LEFT DUST COVER	102	DAMPER ROD HOLDER	201	OIL CAP ASSEMBLY
50	LEFT SEAT CUSHIONING	103	THROTTLE LEVER	202	FULE CAP ASSEMBLY
51	BASE	104	DUST COVER	203	CLUTCH ASSEMBLY
52	RIGHT SEAT CUSHIONING	105	ANTI-COOL COVER	204	RIGHT COVER ASSEMBLY
53	RIGHT DUST COVER	106	AIR FILTER BUMPERS		
54	RETAINER	107	CYLINDER COVER		