


GC99372B

| NO. | DESCRIPTION | NO. | DESCRIPTION |
|-----|--------------------------|------|----------------------------|
| A1 | RIGHT COVER ASSEMBLY | A40 | WASHER 5 |
| A2 | SHIELD PIN | A41 | START PLATE |
| A3 | SHIELD PIN GLAND | A41A | ROPE COIL PLATE |
| A4 | RING 3 | A42 | START COIL-SPRING |
| A5 | SPACER PIN | A43 | RETURN COIL-SPRING |
| A6 | SECONDARY BRAKE SPRING | A44 | START HANDLE |
| A7 | BRAKE SPRING | A45 | START STRETCHING WIRE |
| A8 | BRAKE CONTROL ROD | A47 | START COVER |
| A9 | SECONDARY PULL-ROD | A48 | FUEL TUBE |
| A10 | PIN 3X9 | A49 | PETROL FILTER COMPONENTS |
| A11 | MAIN LEVEL | A50 | SHOCK RUBBER |
| A12 | TIGHTENER SCREW | A51 | BASE |
| A13 | TENSION BLOCK | A52 | SHOCK RUBBER GLAND |
| A14 | TAPPING SCREW ST4X8 | A53 | SCREW ST5X16 |
| A15 | BRAKE SPRING COVER PLATE | A54 | DUST COVER |
| A16 | SHOCK RUBBER WASHER | A55 | ANTI-DROP PLATE |
| A17 | SHIELD RING 5 | A56 | PACKING WASHING 20X30X2 |
| A18 | WASHER 6 | A57 | OIL COVER |
| A19 | BRAKE TORSION ROD SPRING | A58 | TAPPING SCREW ST4X25 |
| A20 | TENSIONER COVER PLATE | A59 | TRIGGER CONTROL RACK |
| A21 | CHAIN GUIDE DOG | A60 | PINGX30 |
| A22 | RIGHT COVER | A61 | TRIGGER TORSION ROD SPRING |
| A23 | BRAKE STRAP | A62 | TRIGGER |
| A24 | DUST SHIELD | A63 | THROTTLE ROD |
| A25 | SHIELD RING 4 | A64 | HANDLE COVER |
| A26 | SPACING SHIELD | A65 | BALANCER OIL TUBE |
| A27 | SHOCK RUBBER CUSHING | A66 | BALANCER BODY |
| A28 | FRONT DAMPER | A67 | BALANCER RUBBER |
| A29 | LH SHEATHING | A68 | BALANCER COVER |
| A30 | NUT M8 | A69 | FRONT HANDLE ASSEMBLY |
| A31 | AIR FILTER LOCK NUT | A70 | TAPPING SCREW ST5X16 |
| A32 | LOCK NUT WASHER 15X26X1 | A71 | PRIMER BULB |
| A33 | AIR FILTER COVER | A72 | BACK FUEL TUBE |
| A34 | IDLE ADJUSTING GUIDE SET | A73 | FUEL PUMP TUBE |
| A35 | SCREW M5X16 | A74 | TUBE CLIP |
| A36 | UPPER COVER PLATE | A75 | OIL NOZZLE |
| A37 | STARTER ASSEMBLY | A76 | GUIDE BAR |
| A38 | BOSSING | A77 | CHAIN |
| A39 | TAPPING SCREW ST4.8X13 | A100 | OIL FILLER CAP ASSEMBLY |

ST-RU20170113 VER: 2.2

Sturm!
нас рекомендуют друзья

GC99372B ENGINE

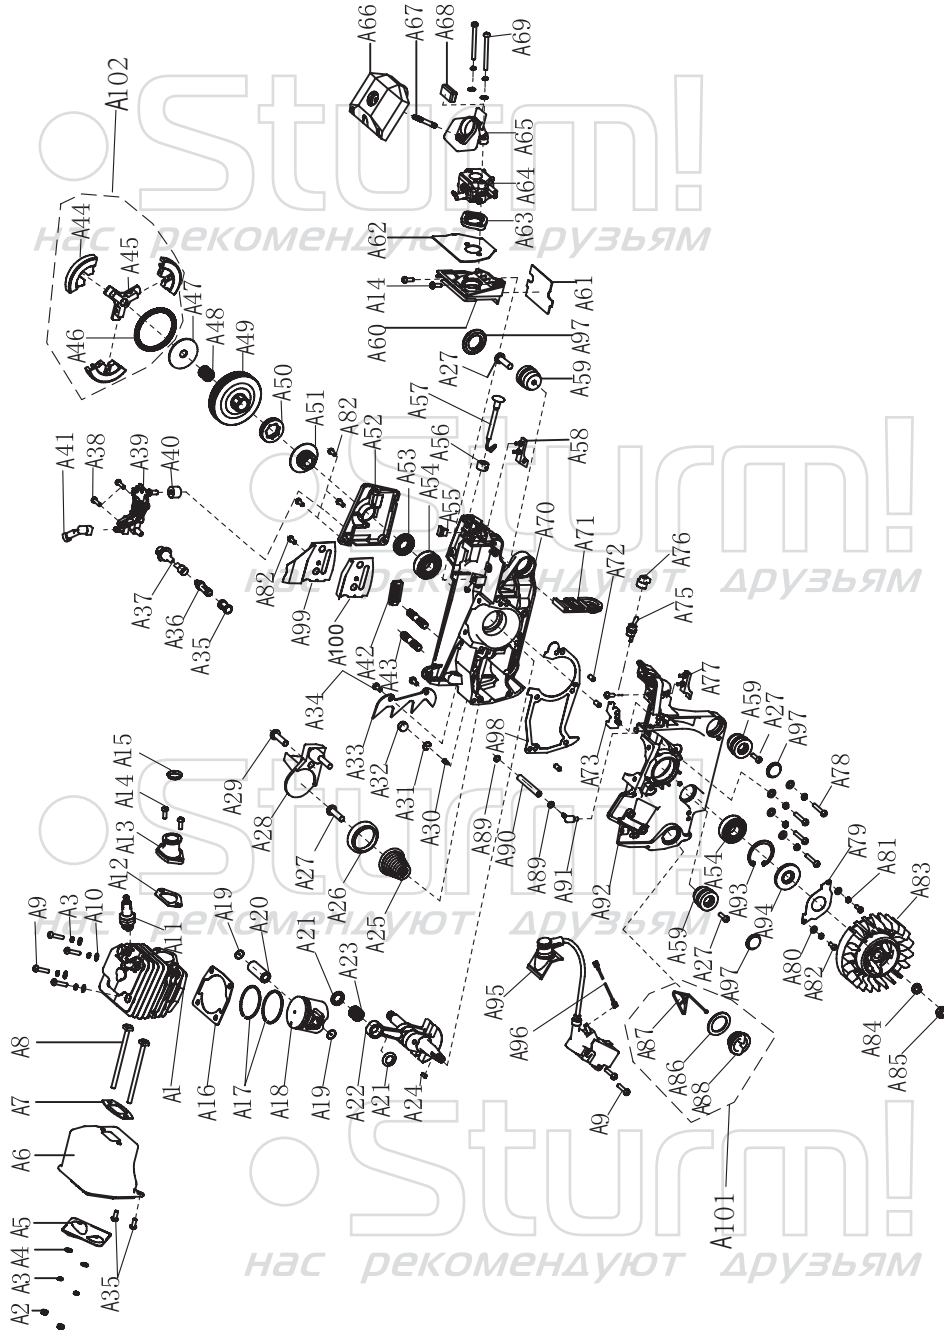

| NO. | DESCRIPTION | NO. | DESCRIPTION |
|-----|--------------------------------------|------|-------------------------------------|
| A1 | CYLINDER BODY | A52 | COVER PLATE |
| A2 | NUT M5 | A53 | OIL SEAL 15X28X4.5 |
| A3 | WASHER 5 | A54 | BEARING 6202 GRADE D 15X35X11 |
| A4 | WASHER 5 | A55 | SHOCK BLOCK 1 |
| A5 | SILENCER COVER PLATE | A56 | THROTTLE LEVER RETAINING BRACKET |
| A6 | SILENCER BODY | A57 | THROTTLE ROD |
| A7 | SILENCER SEALING PLATE | A58 | RIGHT SHOCK BLOCK |
| A8 | MUFFLER CONNECTING SCREW | A59 | CUSHION SOCKET |
| A9 | SCREW M5X20 | A60 | AIR INTAKE SUPPORT |
| A10 | WAHSER 5 | A61 | BACKING BOARD |
| A11 | SPARK PLUG | A62 | SEALING PLATE OF AIR INTAKE SUPPORT |
| A12 | AIR INTAKE TUBE SEALING PLATE | A63 | AIR INTAKE FLANGE |
| A13 | AIR INTAKE TUBE | A64 | CARBURETOR |
| A14 | SCREW M5X12 | A65 | AIR INTAKE SOCKET |
| A15 | HOLD COIL | A66 | AIR FILTER |
| A16 | CYLINDER SEALING PLATE | A67 | DOUBLE-SCREW BOLT GM5-M5X30 |
| A17 | PISTON RING | A68 | CUSHION OF AIR INTAKE SOCKET |
| A18 | PISTON | A69 | NUT M5X50 |
| A19 | PISTON PIN CIRCLIP | A70 | RIGHT CASE BODY |
| A20 | PISTON PIN | A71 | DUST PLATE |
| A21 | NEEDLE BEARING | A72 | PIN 5X10 |
| A22 | CRANKSHAFT CONNECTING BAR COMPONENTS | A73 | SHOE BLOCK 2 |
| A23 | NEEDLE BEARING 11X15X12.5 | A75 | EXTINCTION SWITCH |
| A24 | SEMICIRCULAR KEY 3X3.5X10 | A76 | EXTINCTION SWITCH SOCKET |
| A25 | CONICAL SPREADER SPRING | A77 | LEFT SHOCK BLOCK |
| A26 | CONICAL SPREADER BASE | A78 | SCREW M5X25 |
| A27 | TAPPING SCREW ST5X16 | A79 | OIL SEAL DAMPER |
| A28 | CHAIN CATCHER | A80 | WASHER 4 |
| A29 | SCREW M5X16 | A81 | WASHER 4 |
| A30 | AERATION JET | A82 | SCREW M4X10 |
| A31 | AERATION JET CIRCLIP | A83 | FLYWHEEL |
| A32 | SPONGE TRANSITION BLOCK | A84 | WASHER 8 |
| A33 | BUMPER SPIKES | A85 | NUT M8X1 |
| A34 | SCREW M5X10 | A86 | PACKING WASHING 20X30X2 |
| A35 | OIL FILTER SCREEN | A87 | ANTI-DROP PLATE |
| A36 | OIL FILTER | A88 | OIL COVER |
| A37 | OIL TUBE | A89 | SUCTION TUBE CIRCLIP |
| A38 | SCREW M4X14 | A90 | SUCTION TUBE 2.5X7X105 |
| A39 | OIL PUMP | A91 | SUCTION JET |
| A40 | SPONGE TRANSITION COIL | A92 | LEFT CASE BODY |
| A41 | NOZZLE | A93 | RING35 |
| A42 | CHAIN GUIDE BLOCK | A94 | OIL SEAL 15X35X4.5 |
| A43 | DOUBLE-SCREW BOLT AYM8-M8X26-8.8 | A95 | IGNITER |
| A44 | SHOE BLOCK | A96 | EXTINCTION CONDUCTOR |
| A45 | RETAINER | A97 | DUST COVER |
| A46 | CLUTCH EXTENSION SPRING | A98 | CASE BODY SEALING PLATE |
| A47 | CLUTCH ADJUSTING WASHER | A99 | DAMPER |
| A48 | NEEDLE BEARING 12X15X14.5 | A100 | WASHER |
| A49 | CLUTCH SHELL | A101 | OIL FILLER CAP ASSEMBLY |
| A50 | SPROCKET | A102 | CLUTCH SPRING/BLOCK ASSEMBLY |
| A51 | TURBINE | | |