


GC99452B GC99522B

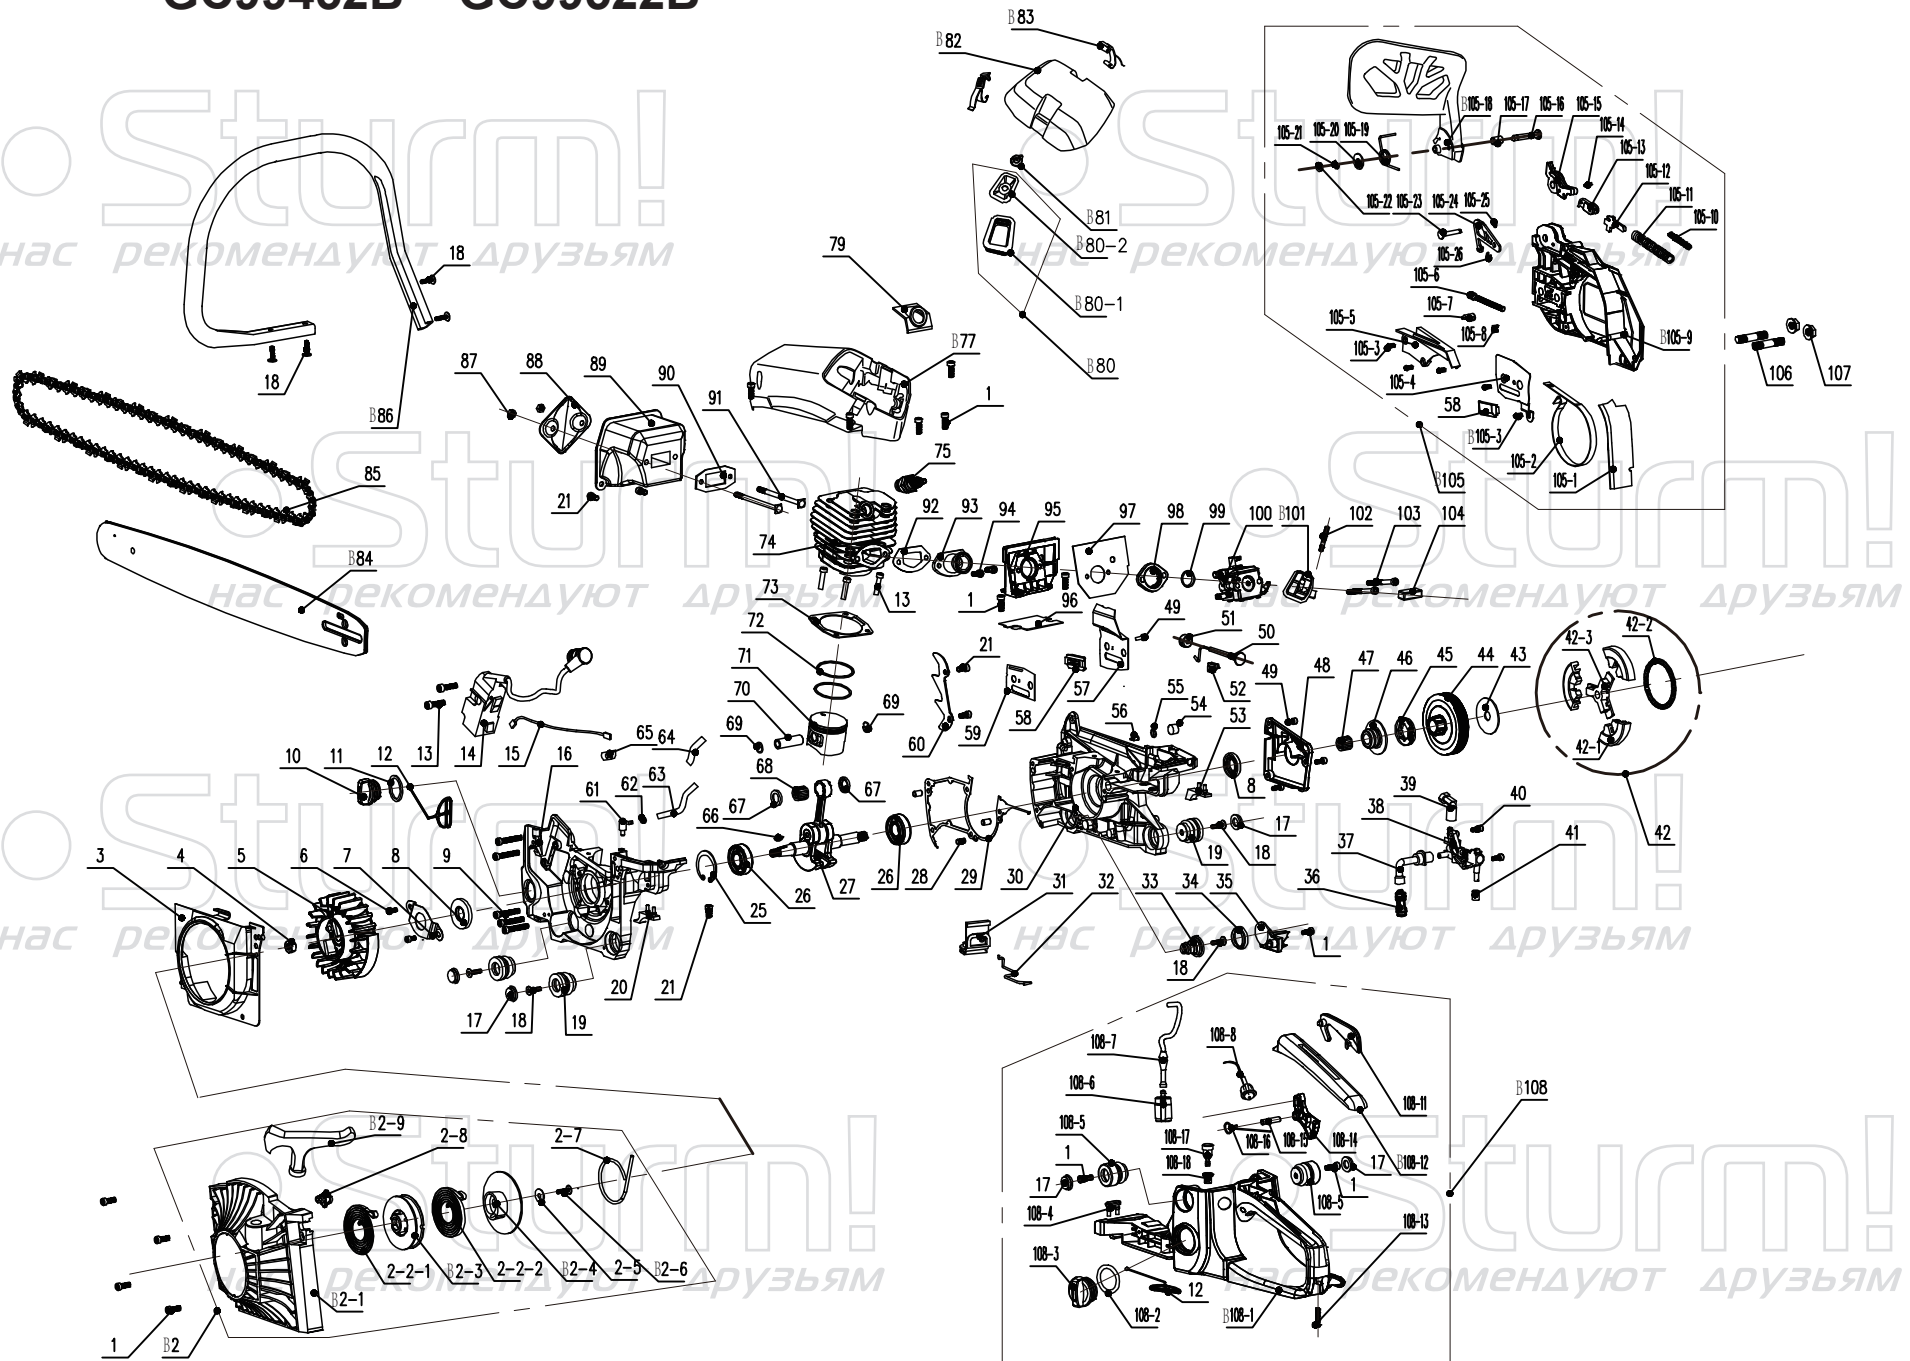

GC99452B GC99522B

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
1	SCREW M5X14	42-3	CLUTCH RETAINER	98	AIR INTAKE TUBE FLANGE
B2	START ASSEMBLY	44	CLUTCH SHELL	99	BUSH
B2-1	START COVER	45	SPROCKET	100	CARBURETOR
2-2-1	SAMLL COIL SPRING	46	WORM	B101	AIR INTAKE BEND TUBE
2-2-2	BIG COIL SPRING	47	NEEDLE BEARING	102	BOLT M5X39
B2-3	BIG ROPE WHEEL	48	COVER PLATE	103	SCREW M5X50
B2-4	SMALL ROPE WHEEL	49	SCREWM4X10	104	SHOCK BLOCK
2-5	PLAIN WASHER	50	CHOKE ROD	B105	BRAKE ASSEMBLY
B2-6	SCREW ST5X14	51	CHOKE ROD FIXATION ROOT	105-1	DUST SHIELD
2-7	START ROPE	52	CHOKE ROD SHOCK BLOCK	105-2	BRAKE STRAP
2-8	WASHER	53	CASE SHOCK BLOCK	B105-3	SCREW ST4X8
B2-9	START HANDLE	54	SPONGE COVER	105-4	TENSIONER COVER PLATE
3	GUIDE FLOW COVER	55	VENT CIRCLIP	105-5	BRAKE SPRING COVER PLATE
4	NUT M8X1	56	VENT	105-6	TENSION SCREW
5	FLY WHEEL	57	DAMPER	105-7	TESNTION BOLT
6	SCREW M4X8	58	CHAIN GUIDE BLOCK	105-8	TENSION BLOCK
7	OIL SEAL COVER	59	TENSIONER COVER PLATE	B105-9	RIGHT SIDE COVER
8	OIL SEAL	60	PINION RACK	105-10	BRAKE SPRING
9	SCREW M5X30	61	SUCTION JET	105-11	BIG BRAKE SPRING
10	OIL COVER	62	SUCTION TUBE CIRCLIP	105-12	BRAKE SPRING SUPPORT
11	OIL COVER SEAL	63	SUCTION TUBE	105-13	BRAKE ROD
12	ANTI-DROP PLATE	64	PROTECTION COVER	105-14	BRAKE ROD PIN
13	SCREW M5X20	66	KEY 3XØ10	105-15	BIG BRAKE ROD
14	IGNITER	67	NEEDLE BEARING RING	105-16	FRONT DAMPER PIN
15	EXTINCTION CONDUCTOR	68	NEEDLE BEARING	105-17	FRONT DAMPER PIN COVER
16	LEFT CRANK CASE	69	PISTON PIN CIRCLIP	B105-18	FRONT DAMPE
17	SHOCK SEATCOVER	70	PISTON PIN	105-19	BRAKE TORSIONAL SPRING
18	TAPPING SCREW ST5X14	71	PISTON	105-20	WASHER
19	SHOCK SEAT	72	PISTON RING	105-21	E CIRCLIP
20	LEFT CASE CUSHING BLOCK	73	CYLINDER SEALING PLATE	105-22	BRAKE BUSH
21	SCREW M5X10	74	CYLINDER	105-23	POSITION BUSH
25	CIRCLIP	75	SPARK PLUG	105-24	POSITION BOARD
26	BEARING 6202	B77	BIG AIR FILTER COVER	105-25	E CIRCLIP
27	CRANK	79	IGNITER COVER	105-26	E CIRCLIP
28	PIN 6X10	B80	AIR FILTER ASSEMBLY	106	BOLT M8X42
29	CASE BODY SEALING PLATE	B80-1	AIR FILTER	107	NUT M8
30	RIGHT CASE	B80-2	AIR FILLTER COVER	B108	BASE ASSEMBLY
31	ANTI-DUST BLOCK	B81	AIR FILTER LOCKING NUT	B108-1	BASE
32	THROTTLE ROD	B82	SMALL COVER	108-2	FUEL COVER SEAL RING
33	CONICAL SPRING	B83	SMALL COVER LOCKING BUTTON	108-3	FUEL COVER
34	CONICAL SPRING BASE	B84	GUIDE BAR	108-4	SHOCK RUBBER
35	CHAIN SHIELD	85	SAW CHAIN	108-5	SHOCK RUBBER GLAND
36	OIL FILTER	B86	HANDLE	108-6	FUEL FILTER
37	OIL TUBE	87	NUT	108-7	FUEL TUBE
38	OIL PUMP	88	MUFFLER COVER	108-8	FLAMEOUT SWITCH
39	NOZZLE	89	MUFFLER	108-11	TRIGGER CONTROL RACK
40	SCREW M4X14	90	MUFFLER WASHER	B108-12	HANDLE COVER
41	SPONGE TRANSITION COIL	91	BOLT M5X84	108-13	SCREW ST4X14
42	CLUTCH	92	AIR INTAKE TUBE WASHER	108-14	TRIGGER
42-1	CLUTCH BLOCK	93	AIR INTAKE TUBE	108-15	TRIGGER PIN
42-2	CLUTCH SPRING	94	SCREW M5X12	108-16	TRIGGER TORSIONAL SPRING
		95	CARBURETOR SUPPORT	108-17	BALANCER
		96	SUPPORT WASHER	108-18	BALANCER ROOT
		97	SEALING PLATE		