



GT3525BH

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
1	NUT M10	40	HANDLE BEND	77	CABLE
2	DUST COVER	41	HANDLE ASSEMBLY	78	CABLE SHEATH
3	UPPER FLANGE	42	BELLOWS	79	NUT M8
4	BLADE	43	NYLON RIBBON	80	FAN
5	DOWN FLANGE	44	FLAT WIRE	81	BEARING CAP
6	CIRCLIP Ø32	45	SCREW	83	CAPACITOR
7	BEARING 6002	46	SCREW	84	SOFT START
8	SPINDLE	47	RIGHT COVER CAP	85	WIRE PRESS PLATE
9	BIG GEAR	48	SCREW	86	SCREW ST3*6
10	BEARING 6000	49	HOUSING ASSEMBLY	87	RUBBER PAD
11	SCREW M5X10	50	LABEL	88	LEFT COVER CAP
12	SPRING WASHER Ø5	51	CONNECTED PIPE	89	LABEL
13	DUST COVER	52	CIRCLIP	90	HARD SHAFT
14	GEAR BOX	53	OUTPUT SHAFT	91	ALU.TUBE
15	SPRING WASHER Ø5	54	WOODRUFF KEY	92	SCREW M5*8
16	SCREW M5X12	55	SCREW ST5*20	93	BELT RING
17	SMALL GEAR	56	GEAR BOX COVER	94	RING
18	BEARING 6000	57	BEARING 6000	95	NUT M5
19	CIRCLIP Ø26	58	WASHER Ø8	96	NUT
20	CIRCLIP Ø10	59	BIG GEAR 29	97	BEHINDALUMINUM PIPE
21	SHAFT CONNECTOR	60	SMALL GEAR 16	98	NUT M5
22	SCREW M5*25	61	SCREW ST5*75	99	FIXED PLATE
23	WASHER Ø5	62	WASHER Ø4	100	SCREW M5*35
24	CIRCLIP Ø5	63	SCREW M4*6	101	SCREW M5*20
25	LOWER COVER	64	CIRCLIP	102	SCREW M5*25
26	HANDLE SEAT	65	WASHER Ø10	103	PROTECT COVER
27	TOP COVER	66	BEARING 606	104	BLADE
28	WASHER Ø5	67	RUBBER	105	SCREW
29	CIRCLIP Ø5	68	BEARING SEAT	106	STRAPS
30	SCREW M5*25	69	STATOR	107	HEX. KEY
31	RUBBER RING	70	BEARING 608	108	ROTARY GRASS HEAD
32	HANDLE BEND	71	ARMATURE	109	SOCKET WRENCH
33	SCREW	72	BEARING 609	201	GEAR BOX ASSEMBLY
34	WIRE PRESS PLATE	73	BEARING SEAT	202	ROD WITH SHAFT ASSEMBLY
36	SWITCH	74	CARBON BRUSH		
37	SWITCH HANDLE COVER	75	SCREW ST3*8		
38	SCREW	76	BRUSH HOLDER		

ST20141113

