


HSG9670B

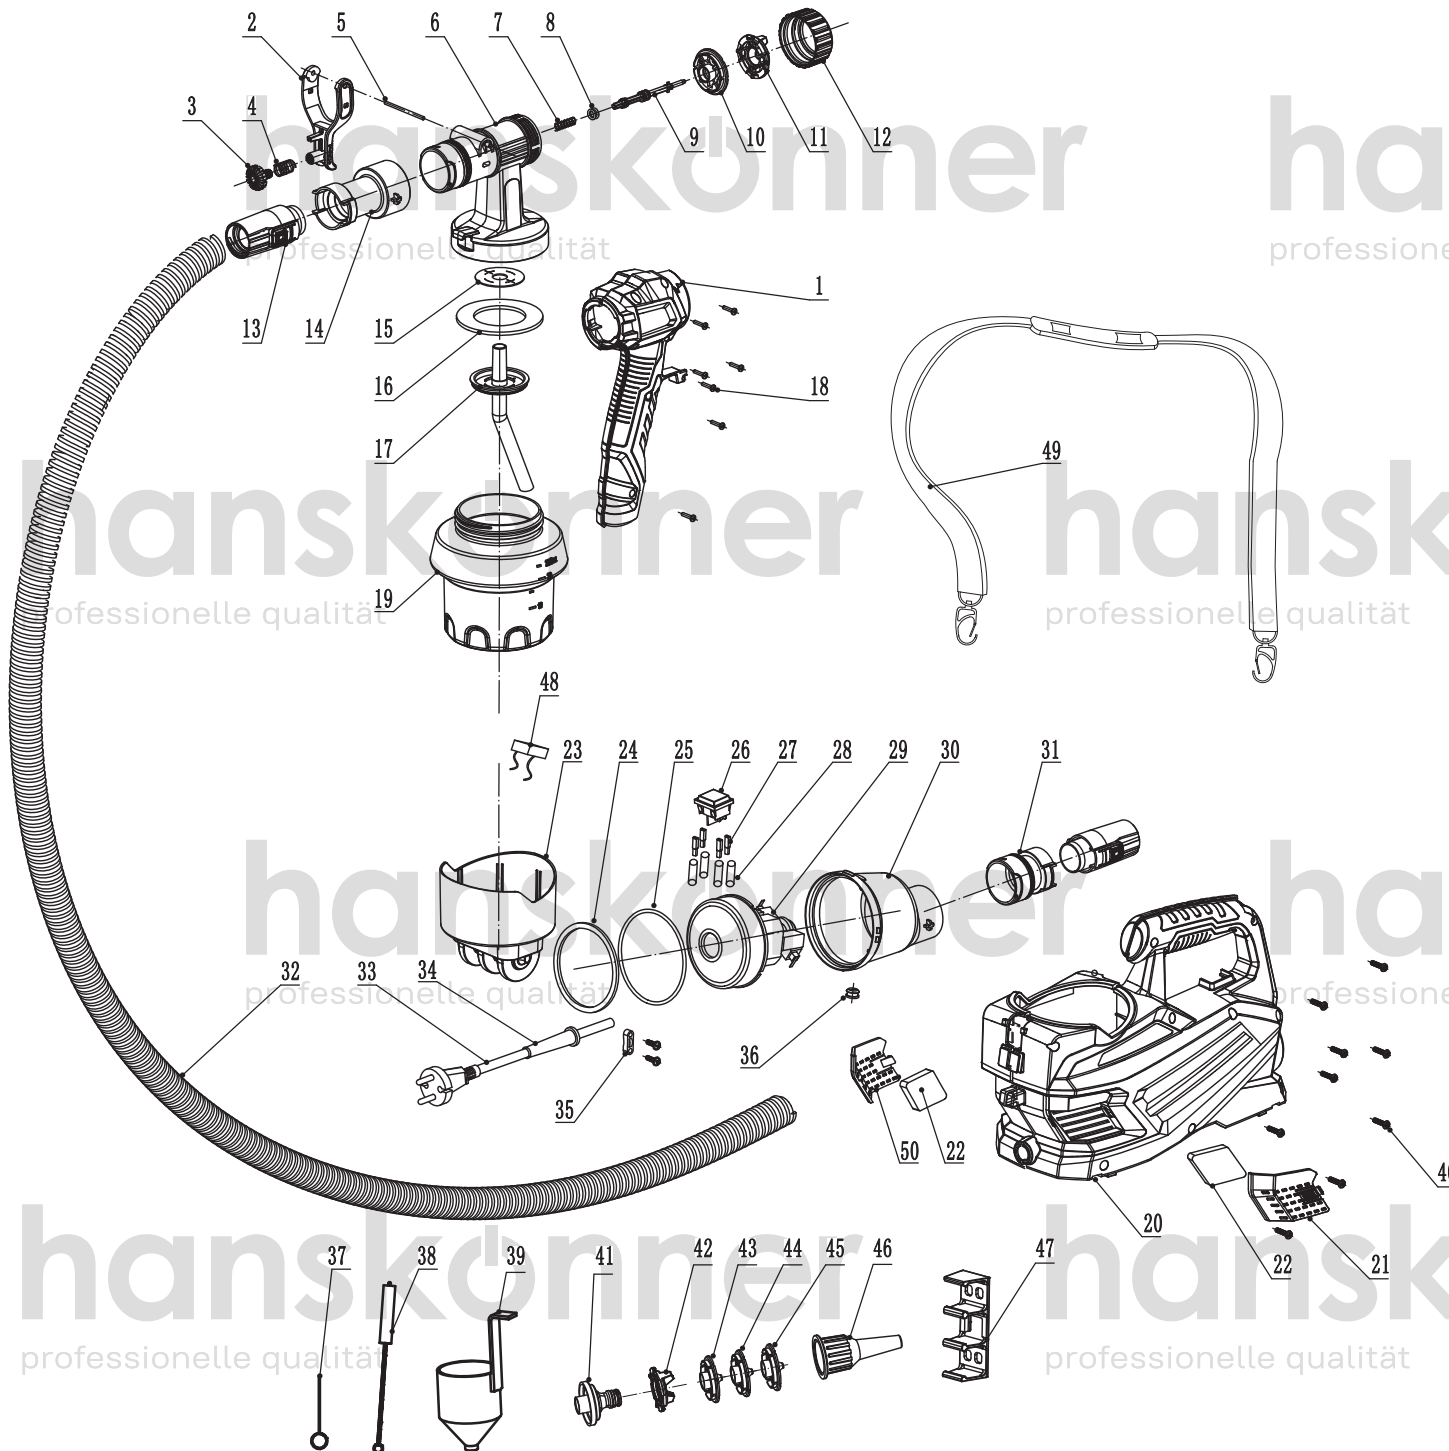

NO.	DESCRIPTION
1	HANDLE
2	TRIGGER
3	ADJUST KNOBS
4	SPRING
5	ADJUST LEVER PIN
6	GUN SEAT
7	SPRING
8	O RING
9	VALVE NEEDLE
10	NOZZLE Ø2.6
11	WIDE AIR CAP
12	UNION NUT
13	HOSE JOINT
14	DOUBLE HEAD JOINT
15	PREVENT BACKFLOW GASKET
16	CONTAINER SEALING GASKET
17	SUCKER
18	SCREW ST3*12
19	CONTAINER
20	HOUSING
21	LEFT WINDOW COVER
22	DUSTPROOF SPONGE
23	STORAGE BUCKET
24	SHOCK PAD
25	MOTOR SEALING RING
26	SWITCH
27	INSERT SPRING
28	HEAT-SHRINKABLE TUBE
29	MOTOR
30	MOTOR SEAT
31	MOTOR SEAT JOINT
32	HOSE
33	CABLE
34	CABLE PROTECTOR
35	CORD ANCHORAGE
36	WIRE PROTECTOR
37	SCREW ST4*16
38	NOZZLE CLEANING NEEDLE
39	CLEANING BRUSH
40	VISCOSITY MEASURING CUP
41	CLEANING JOINT
42	NARROW AIR CAP
43	NOZZLE Ø2.2
44	NOZZLE Ø1.8
45	NOZZLE Ø1.5
46	BLOWING DUST JOINT
47	HOSE HOLDER
48	CAPACITOR
49	STRAP
50	RIGHT WINDOW COVER

HSG9670B-EX-RUS20230306