



JS4085P

NO.	DESCRIPTION	NO.	DESCRIPTION
1	TAPPING SCREW	31	NEEDLE ROLLER BEARING
3	ADJUSTING SCREW	32	LIFTING KNIFE PLATE
4	CONNECTING PLATE	33	BEARING HOLDER
5	BASE PLATE	34	BEARING 629Z
6	CIRCLIP	35	ROTOR
7	METAL PEDULUM SWITCH	36	BRUSH HOLDER
8	ROLLER SPRING	37	CARBON BRUSH
9	WASHER	38	BRUSH BUSHING
10	ROLLING METAL GUIDE	39	BEARING 607Z
11	SAW HOLDER PIN	40	STATOR
12	SUPPORT ROLLER	41	DUST CONNECTION
13	ROLLER PIN	42	CORD SLEEVE
14	BIG GEAR	43	CORD & PLUG
15	ROLLER	44	"O" TYPE RING
16	CIRCLIP	45	TAPPING SCREW
17	SPRING	46	STRAIN RELIEF
18	HOLDER FOR SAW ARM	47	RUBBER PIN
19	SOCKET HEAD SCREW	48	CONNECTING PLATE
20	SOCKET HEAD SCREW	49	PCB
21	SAW HOLER	50	TRANSFORMER
22	SAW ARM	51	CAPACITANCE
23	HOLDER FOR SAW ARM	52	LASER HEAD BUTTON
24	PROTECTING GUARD	53	SCREW
25	PENDULUM SWITCH KNOB	54	LASER COVER
27	PCB	55	LASER HEAD
28	SWITCH	888	HOUSING ASSEMBLE
29	BALANCE BLOCK		

ST20110216-01

