


JS4178P

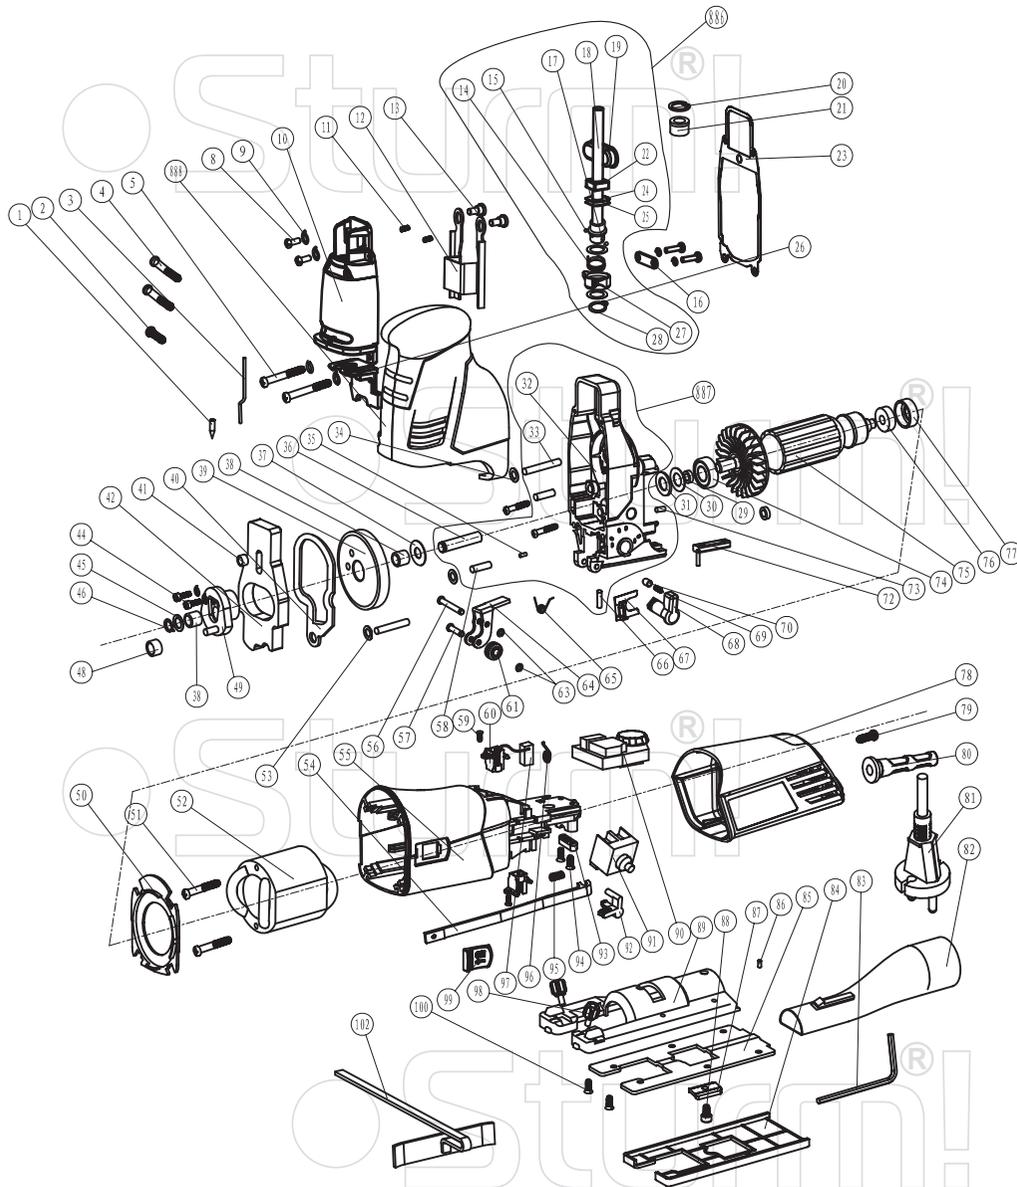

NO.	DESCRIPTION	NO.	DESCRIPTION
1	POINTER	54	DRAW BAR
2	SCREW	55	HOUSING
3	STEEL WIRE	56	BLADE HOLDER PIN
4	SCREW	57	ROLLER PIN
5	SCREW	58	PIN
8	SCREW	59	SCREW
9	SPRING WASHER	60	CARBON BRUSH HOLDER
10	GEAR BOX COVER	61	ROLLER
11	SPRING	63	CIRCLIP
12	RECIPROCATING LEVER BRACKET	64	BLADE HOLDER
13	SCREW	65	TORSIONAL SPRING
14	TORSIONAL SPRING	66	PIN
15	STEEL BALL	67	SNAP-GAUGE
16	PRESS BOARD	68	PENDULUM SWITCH KNOB
17	WASHER	69	SPRING
18	RECIPROCATING LEVER	70	SPRING COVER
19	SLIP ORBIT	72	BASE PLATE LOCATING BLOCK
20	CIRCLIP	73	PIN
21	RECIPROCATING LEVER BUSH	74	BEARING 629Z
22	RECIPROCATING LEVER HOLDER	75	ROTOR
23	SEAL PAPER	76	BEARING 627Z
24	WOOL FELT HOLDER	77	BEARING COVER
25	WOOL FELT	78	REAR COVER
26	FRONT BOARD	79	SCREW
27	QUICK CHANGE WRENCH	80	CABLE SLEEVE
28	CIRCLIP	81	CABLE & PLUG
29	GREASE PROOFING BUSH	82	DUST COLLECTION
30	GREASE PROOFING WASHER 1	83	ALLEN KEY
31	GREASE PROOFING WASHER 2	84	BASE PLATE GUARD
32	GEAR BOX	85	BASE PLATE COVER
33	PIN A	86	RUBBER PIN
34	WASHER	87	BASE PLATE PRESS BOARD
35	PIN	88	SCREW
36	MIDDLE SHAFT	89	BASE PLATE
37	WASHER	90	VARIABLE SPEED SWITCH
38	NEEDLE BEARING HK0810	91	SWITCH
39	GEAR	92	SWITCH FORK
40	LIFTING KNIFE PLATE	93	CABLE CLAMP
41	BUSH	94	SCREW
42	BALANCE BLOCK	95	SPRING
44	SCREW	96	COIL SPRING
45	WASHER	97	CARBON BRUSH
46	CIRCLIP	98	WING NUT
48	BUSH	99	TRIGGER
49	CAM	100	SCREW
50	WIND GUIDE	102	GUIDE RULER
51	SCREW	886	RECIPROCATING LEVER ASSEMBLY
52	STATOR	887	GEAR BOX ASSEMBLY
53	WASHER	888	HOUSING ASSEMBLY