



PW9227

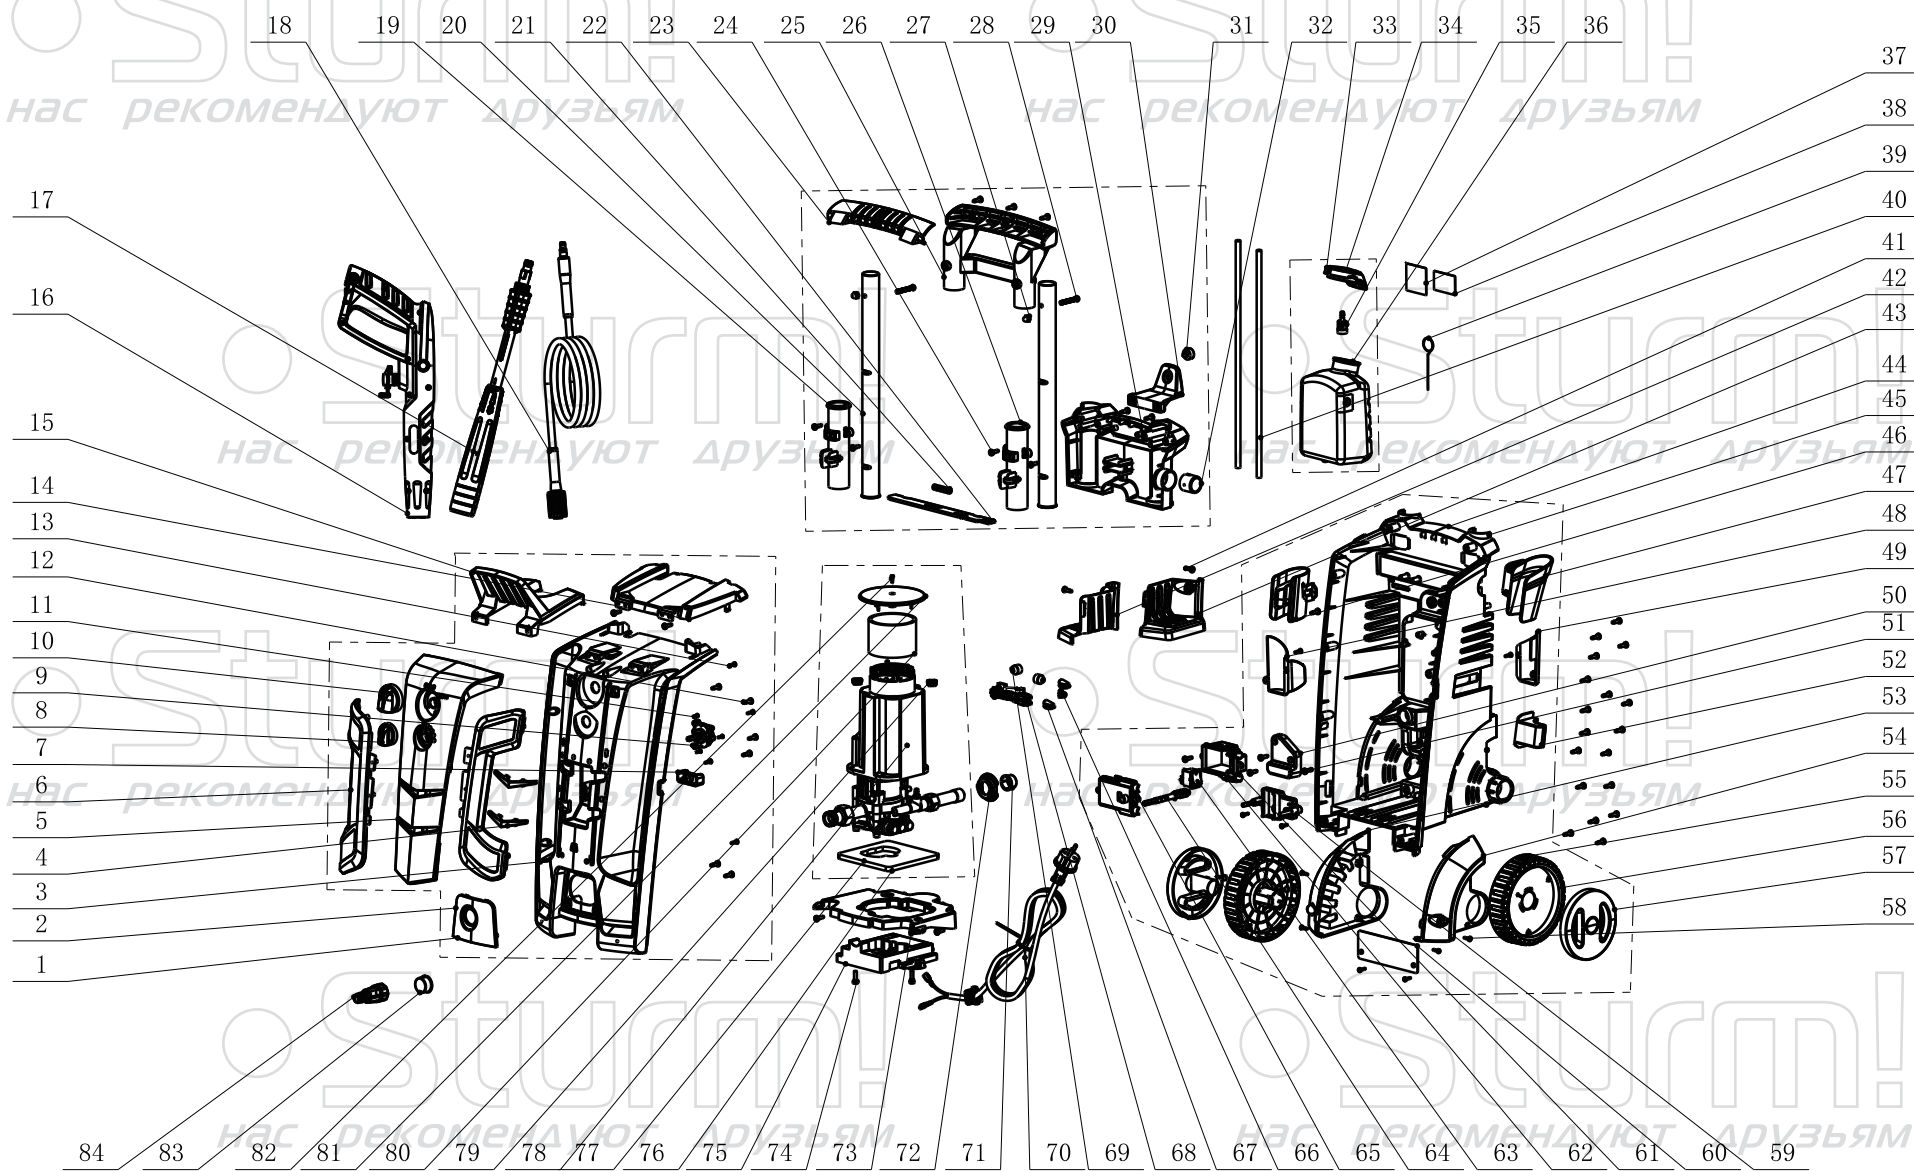

PW9227

NO.	DESCRIPTION	NO.	DESCRIPTION
1	FRONT HOUSING ASS'Y	43	RIGHT GUN STOCK
2	INLET DECORATIVE PLATE	44	BACK HOUSING ASS'Y
3	FRONT HOUSING	45	BACK PLATE
4	SMALL DECORATIVE PLATES	46	GUN HOLDER
5	KNOB DECORATIVE PLATES	47	ACCESSORIES PLATE
6	LEFT AND RIGHT DECORATIVE PLATE ASS'Y	48	LEFT COVER PLATE FOR SOAP BOTTLE
7	FRONT STOP BLOCK	49	RIGHT COVER PLATE FOR SOAP BOTTLE
8	DETERGENT KNOB	50	BACK STOP BLOCK
9	DETERGENT VALVE	51	SCREW
10	SWITCH KNOB	52	DAMPER
11	SCREW	53	LEFT WHEEL BRIM
12	SCREW	54	RIGHT WHEEL BRIM
13	SCREW	55	WHEEL ASS'Y
14	TOP PLATE	56	WHEEL
15	HOSE HOOK	57	WHEEL COVER
16	SPRAY GUN YLG10	58	SCREW
17	SPRAY LANCE YLG10	59	FIXED BRACKET FOR SWITCH BOX
18	5M HIGH PRESSURE HOSE	60	WATER PROOF BOARD
19	HANDLE ASS'Y	61	SWITCH BOX KIT
20	GUIDE PULL	62	SWITCH BOX
21	SPRING	63	SWITCH
22	PULL ROD LOCK	64	SWITCH LEVEL
23	HANDLE COVER	65	SWITCH COVER
24	SCREW	66	WATER PROOF PLUG
25	HANDLE	67	HOLE PLUG
26	GUIDE PULL ROD	68	CAPACITOR & INDUCTANCE ASS'Y
27	NUT	69	WATER PROOF CAP
28	BOLT	70	POWER CABEL & PLUG
29	BACK PLATE	71	WATER OUTLET COVER
30	CABLE HOOK	72	OUTLET DECORATIVE PLATE
31	DAMPNG RING	73	WIND DEFLECTOR
32	LOCK BUTTON	74	SCREW
33	DETERGENT TANK ASS'Y	75	PUMP BASE
34	DETERGENT TANK COVER	76	MOTOR & PUMP ASS'Y
35	TANK SPIGOT & TANK PLUG	77	FRONT FILTER SCREEN FOR FAN COVER
36	DETERGENT TANK	78	PUMP ASS'Y
37	LABEL	79	WATER PROOF COVER
38	WARNING LABEL	80	BACK STRAINER
39	CLEANER	81	FAN HOUSING CAP
40	PIPETTE	82	SCREW
41	SCREW	83	WATER INLET COVER
42	LEFT GUN STOCK	84	INLET WATER NUT ASSY

PUMP FOR PW9227

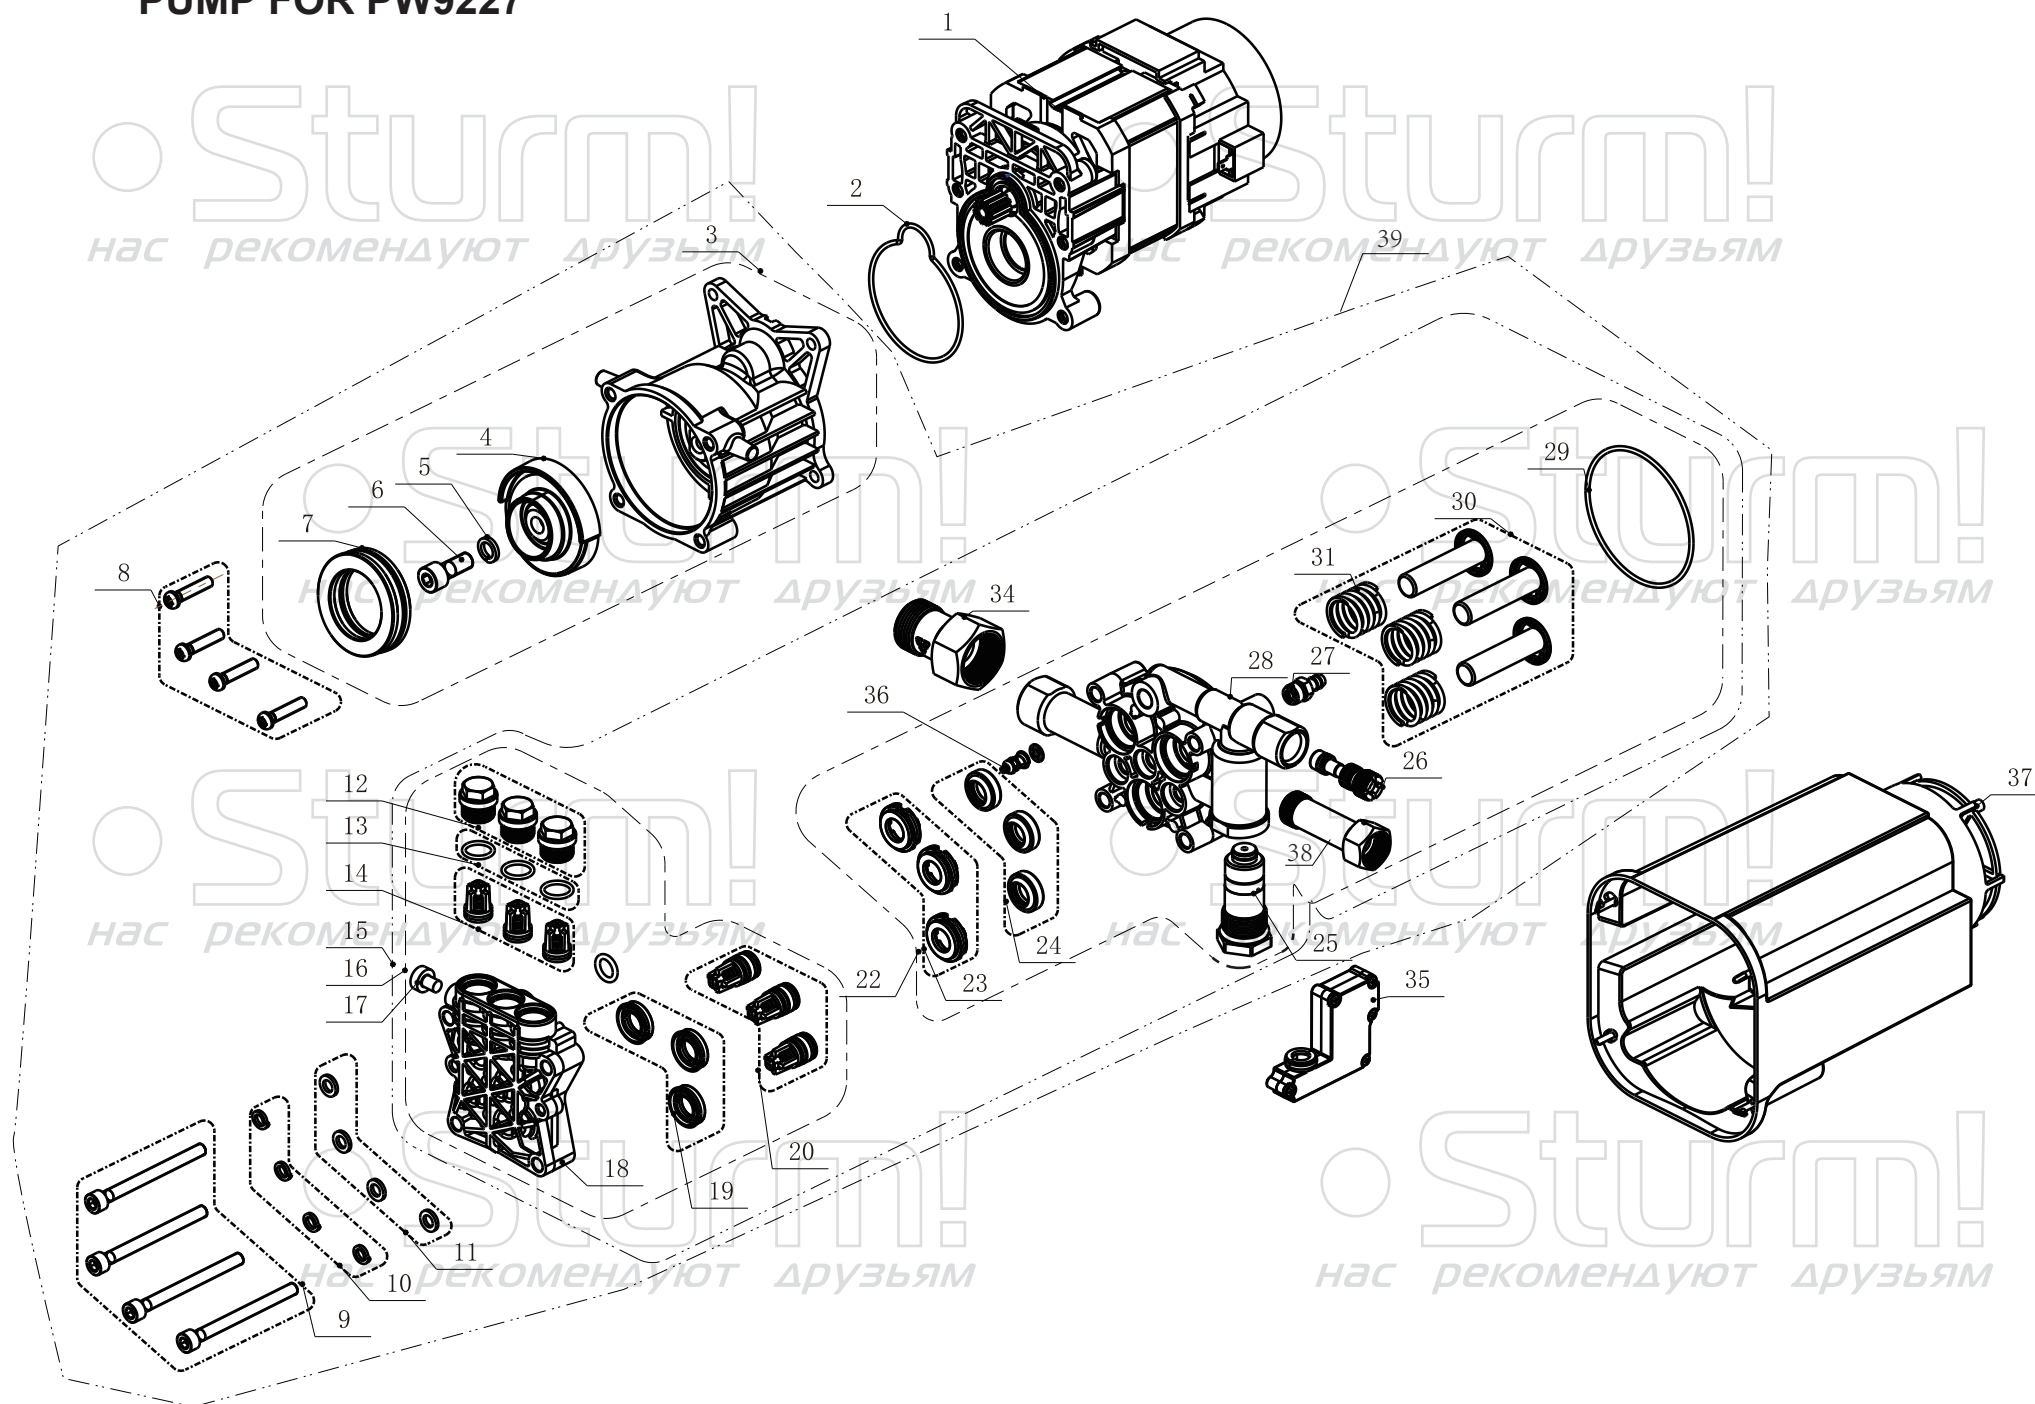

PUMP FOR PW9227

NO.	DESCRIPTION	NO.	DESCRIPTION
1	9650-AL-MOTOR	19	Y-SEAL-COG
2	YLJ08-PEACH-SHAPE-RING	20	YLP08-INLET-VALVE-ASSY
3	YLY08-GEAR-BOX-18-ASSY	22	YLP08-PISTON-GUIDER-26560-ASSY
4	81-DEGREE-M08-WOBBLE-DISC	23	YLP08-WATER-SEAL-SUPPORT-NEW-2
5	SPRING-WASHER-D8	24	PISTON-SEAL-20-12-5
6	BOLT M8X20	25	YLPT-FD-BYPASS-VALVE-19-ASSY
7	THRUST-BALL-BEARING-51107A	26	YLQ105-VENTURI-ASSY-19001
8	SCREW	27	YLQ105-SUCTION-NIPPLE-ASSY
9	SCREW M6X70	28	YLP08-PISTON-GUIDER-S-M22
10	SPRING-WASHER-D6-R2	29	O-RING
11	SMALL-PLAIN-WASHER-D6	30	YLP08-PISTON-ASSY
12	YLP03-CHECK-VALVE-NUT	31	YLP08-PISTON-SPRING
13	O-RING	34	MPX120B-INLET-ASSY
14	YLP03-OUTLET-CHECK-VALVE-ASSY	35	YLP08-MICROSWITCH-BOX-6700
15	YLP08-PUMP-28458-ASSY	36	YLP08-CHIEF-VALVE-700-ASSY
16	YLP08-CYLINDER-HEAD-17001-ASSY	37	YLJ08-MOTOR-COVER-C
17	SCREW M6X8	38	WATER OUTLET
18	YLP08-CYLINDER-HEAD-HC96	39	PUMP ASSY

PW9227 ex-RUS220516