



## RH2526BR

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
1	PROTECTION SLEEVE ASSY	6-5	PIN	16	SCREW M4X12
1-1	PROTECTION CAP	6-6	CLUTCH DISK	17	Φ4 SPRING WASHER
1-2	WASHER	6-7	CIRCLIP	18	PRESSURE PLATE
1-3	CIRCLIP	6-8	ROTARY SLEEVE	19	ROTOR
1-4	LOCATION RING	6-9	GUIDE BUSHING	20	BEARING 607RS
1-5	CIRCLIP 19×2	6-10	O-RING	21	WIND GUIDE
1-6	PROTECTION SLEEVE	6-11	O-RING	22	SCREW ST3.9×16
1-7	WASHER	6-12	DAMPING BUSHING	23	STATOR
1-8	STEEL BALL Ø7.14	6-13	CIRCLIP	24	RUBBER BEARING SLEEVE
1-9	WASHER	7	CYLINDER ASSY	25	HOUSING
1-10	SPRING	7-1	PISTON	26	SWITCH CONTACT
2	DRILL SLEEVE ASSY	7-2	O-RING	27	SCREW ST3.5×12
2-1	DRILL SLEEVE	7-3	CYLINDER	28	CARBON BRUSH HOLDER ASSY
2-2	O-RING	7-4	WASHER	28-1	CARBON BRUSH HOLDER
2-3	OIL SEAL	7-5	PIN	28-2	BRUSH HOLDER
2-4	THRUST RING	8	BRACKET ASSY	28-3	CARBON BRUSH
2-5	IMPACT ROD	8-1	BUSHING	28-4	COIL SPRING
3	SCREW ST4.8×45	8-2	BRACKET	29	INDUCTOR
4	GEAR HOUSING ASSY	8-3	WOOL FELT	30	SWITCH ASSY
4-1	GEAR HOUSING	8-4	O-RING	30-1	SWITCH
4-2	OIL SEAL	8-5	BRACKET PIN	30-2	CORD
4-3	BEARING SLEEVE ASSY	8-6	BALL BEARING 609RS	30-3	CORD GUARD
4-3-1	NEEDLE BEARING HK3012	8-7	BEARING PRESS PLATE	31	CORD CLIP
4-3-2	BEARING SLEEVE	8-8	SCREW M4×10	32	HOUSING COVER
4-4	NEEDLE BEARING HK0709	9	MIDDLE GEAR ASSY	33	SCREW ST4.2×30
4-5	WASHER	9-1	MIDDLE GEAR	34	SCREW ST4.2×18
4-6	SCREW ST4.2×13	9-2	BEARING 699	35	AUXILIARY HANDLE ASSY
5	SELECTOR KNOB ASSY	10	SHIFT FORK	35-1	CLAMPING BAND
5-1	LOCKING BUTTON	11	SNAP RING	35-2	T- BOLT
5-2	SPRING	12	ROCKER BEARING ASSY	35-3	CLAMP HOLDER
5-3	SELECTOR KNOB	12-1	NEEDLE BEARING HK0908	35-4	CLAMP
5-4	O-RING	12-2	ROCKER BEARING	35-5	SPRING
6	ROTARY SLEEVE ASSY	13	CLUTCH	35-6	AUXILIARY HANDLE
6-1	CIRCLIP	14	SPRING	36	DEPTH RULER
6-2	WASHER	15	BEVEL GEAR ASSY	37	O-RING
6-3	SPRING	15-1	BEVEL GEAR	38	PIN
6-4	BIG GEAR	15-2	BEARING 607Z	39	BEARING WASHER