



RH25804BR

NO.	DESCRIPTION	NO.	DESCRIPTION
1	DUST CUP	50	SPRING SUPPORT
2	SPRING RING	51	SPRING
3	LOCKING SLEEVE	52	NEEDLE BEARING HK0609
4	WASHER OF DUST CUP	53	GEAR
5	STEEL BALL	54	BEARING K15
6	WASHER	55	AWAY-POLED BEARING
7	TOWER-SHAPED SPRING	56	NEEDLE BEARING HK0910
8	SELF-TAPPING SCREW	57	CIRCLIP
9	GEAR BOX	58	FORK
10	OIL SEAL	59	BEARING 699Z
11	PULL-THUST SET	60	MID-SHAFT
12	NEEDLE BEARINGHK0709	61	BEARING 609Z
13	WASHER	62	ROTOR
14	SELF-TAPPING SCREW	63	BEARING 607Z
15	SPRING RING	64	WIND GUIDE
16	SLEEVE WASHER	65	SELF-TAPPING SCREW
17	SLEEVE SPRING	66	STATOR
18	BIG GEAR	67	BEARING BUSH
19	O-RING	68	INDUCTOR
20	IRON CORE	69	HOUSING
21	KNOB	70	COPPER REED INSERTS
22	SPRING	71	BRUSH HOLDER
23	LOCKING KNOB	72	TORSIONAL SPRING
25	CIRCLIP	73	SPRING
26	BIT HOLDER	74	CARBON BRUSH (PAIR)
27	PISTON KEY	75	HOUSING COVER
28	POSITION-LIMITED RING	76	SELF-TAPPING SCREW
29	CIRCLIP	77	SELF-TAPPING SCREW
30	OIL SEAL	78	CONNECTING WIRE 98MM
31	POSITION-LIMITED SLEEVE OF SPINDLE	79	SWITCH
32	HAMMER SPINDLE	80	BEARING WASHER
33	SPINDLE SETS	81	INSULATION PIECE
34	O-RING	82	SELF-TAPPING SCREW
35	O-RING	83	CABLE CLAMP
36	LIMITED COVER	84	CABLE
37	PISTON	85	CABLE SLEEVE
38	O-RING	86	HANDLE RING
39	CYLINDER	87	SCREW
40	WASHER	88	KNOB
41	PIN	89	HANDLE COVER
42	BRACKET SLEEVE	90	RULER BOX
43	O-RING	91	NUTM6
44	BRACKET SUPPORT	92	NUT M8
45	BRACKET	93	HANDLE
46	O-RING	94	RULER
47	COVER	19-23	CHANGE KNOB ASSI
48	RUBBER WASHER	86-93	AUXILIARY HANDLE
49	CAM WASHER		