



## WP2008W/WP2009W

NO.	DESCRIPTION	NO.	DESCRIPTION
1	Screw	15	Impeller
2	O ring	16	Inlet ring
3	Nameplate	17	Flow switch
4	Motor housing	18	O ring
5	Screw	19	Pump body
6	Stator and winding	20	Terminal box
7	Flat	21	Rotary switch knob
8	O ring	22	Screw
9	Rotor can	23	Terminal plate
10	Ceramic bearing	24	Screw
11	Rotor	25	Terminal box cover
12	Rotary ring	26	Capacitor
13	Bearing plate	100	Stator assembly
14	Plate gasket		

RU-ST20171117