



NO. DESCRIPTION 1 floater 33 spring tube 2 power cable and VDE plug 34 seal wash 3 screw 35 adapter 4 handle cover 36 seal 5 handle 37 knob 6 adapter 38 O type seal 7 main pump housing 39 valve body 8 O type seal 40 spool 9 cord anchorage 41 adapter 10 cable pressing buckle 42 O type seal 11 capacitor 43 joint 12 capacitor holder 44 adapter 13 screw 45 aluminium tube 14 pressed ling of rear pump housing 46 hook 15 screw 47 adapter 16 rear cover of motor 48 O type seal 17 waved shim 49 aluminium tube <tr< th=""><th></th><th></th><th></th><th></th></tr<>				
2 power cable and VDE plug 34 seal wash 3 screw 35 adapter 4 handle cover 36 seal 5 handle 37 knob 6 adapter 38 O type seal 7 main pump housing 39 valve body 8 O type seal 40 spool 9 cord anchorage 41 adapter 10 cable pressing buckle 42 O type seal 11 capacitor 43 joint 12 capacitor 44 adapter 13 screw 45 aluminium tube 14 pressed ling of rear pump housing 46 hook 15 screw 47 adapter 16 rear cover of motor 48 O type seal 17 waved shim 49 aluminium tube 18 rotor 19 screw 20 adjusting shim 21 shim 22 bearing 23 stator 24 front lining 25 O type seal 27 adjusting shim 28 impeller 29 nut 30 lower base 31 lower baseplate	NO.	DESCRIPTION	NO.	DESCRIPTION
3 screw 35 adapter 36 seal 5 handle 37 knob 6 adapter 38 O type seal 7 main pump housing 39 valve body 8 O type seal 40 spool 9 cord anchorage 41 adapter 10 cable pressing buckle 42 O type seal 11 capacitor 43 joint 12 capacitor 6 hook 15 screw 45 aluminium tube 14 pressed ling of rear pump housing 46 hook 15 screw 47 adapter 16 rear cover of motor 48 O type seal 17 waved shim 49 aluminium tube 18 rotor 19 screw 20 adjusting shim 21 shim 22 bearing 23 stator 24 front lining 25 O type seal 27 adjusting shim 28 impeller 29 nut 30 lower base 31 lower baseplate 17 lover baseplate 18 lower baseplate 19 lower baseplate 19 lower baseplate 10 lower baseplate 10 lower base 10 lowe	1	floater	33	
4 handle cover 36 seal 5 handle 37 knob 6 adapter 38 O type seal 7 main pump housing 39 valve body 8 O type seal 40 spool 9 cord anchorage 41 adapter 10 cable pressing buckle 42 O type seal 11 capacitor 43 joint 12 capacitor holder 44 adapter 13 screw 45 aluminium tube 14 pressed ling of rear pump housing 46 hook 15 screw 47 adapter 16 rear cover of motor 48 O type seal 17 waved shim 49 aluminium tube 18 rotor 19 screw 20 adjusting shim 21 shim 22 bearing 23 stator 24 <	2	power cable and VDE plug	34	seal wash
5 handle 37 knob 6 adapter 38 O type seal 7 main pump housing 39 valve body 8 O type seal 40 spool 9 cord anchorage 41 adapter 10 cable pressing buckle 42 O type seal 11 capacitor 43 joint 12 capacitor 44 adapter 13 screw 45 aluminium tube 14 pressed ling of rear pump housing 46 hook 15 screw 47 adapter 16 rear cover of motor 48 O type seal 17 waved shim 49 aluminium tube 18 rotor 19 screw 20 adjusting shim 21 shim 22 bearing 23 stator 24 front lining 25 O type seal 27 adjusting shim 28 impeller 29 nut 30 lower base 31 lower base	3	screw	35	adapter
6 adapter 38 O type seal 7 main pump housing 39 valve body 8 O type seal 40 spool 9 cord anchorage 41 adapter 10 cable pressing buckle 42 O type seal 11 capacitor 43 joint 12 capacitor holder 44 adapter 13 screw 45 aluminium tube 14 pressed ling of rear pump housing 46 hook 15 screw 47 adapter 16 rear cover of motor 48 O type seal 17 waved shim 49 aluminium tube 18 rotor 19 screw 20 adjusting shim 21 shim 22 bearing 23 stator 24 front lining 25 O type seal 26 lip seal 27 adjusting shim 28 impeller 29 nut 30 lower base 31 lower baseplate	4	handle cover	36	seal
7 main pump housing 8 O type seal 9 cord anchorage 10 cable pressing buckle 11 capacitor 12 capacitor holder 13 screw 14 pressed ling of rear pump housing 15 screw 16 rear cover of motor 17 waved shim 18 rotor 19 screw 20 adjusting shim 21 shim 22 bearing 23 stator 24 front lining 25 O type seal 26 lip seal 27 adjusting shim 28 impeller 29 nut 30 lower base 31 lower baseplate	5	handle	37	knob
8 O type seal 9 cord anchorage 10 cable pressing buckle 11 capacitor 12 capacitor holder 13 screw 14 pressed ling of rear pump housing 15 screw 16 rear cover of motor 19 screw 20 adjusting shim 21 shim 22 bearing 23 stator 24 front lining 25 O type seal 26 lip seal 27 adjusting shim 28 impeller 29 nut 30 lower base 31 lower baseplate	6		38	O type seal
9 cord anchorage 41 adapter 10 cable pressing buckle 42 O type seal 11 capacitor 43 joint 12 capacitor 44 adapter 13 screw 45 aluminium tube 14 pressed ling of rear pump housing 46 hook 15 screw 47 adapter 16 rear cover of motor 48 O type seal 17 waved shim 49 aluminium tube 18 rotor 19 screw 20 adjusting shim 21 shim 22 bearing 23 stator 24 front lining 25 O type seal 26 lip seal 27 adjusting shim 28 impeller 29 nut 30 lower base 31 lower baseplate	7	main pump housing	39	valve body
10 cable pressing buckle 42 O type seal 11 capacitor 43 joint 12 capacitor holder 44 adapter 13 screw 45 aluminium tube 14 pressed ling of rear pump housing 46 hook 15 screw 47 adapter 16 rear cover of motor 48 O type seal 17 waved shim 49 aluminium tube 18 rotor 19 screw 20 adjusting shim 21 shim 22 bearing 23 stator 24 front lining 25 O type seal 26 lip seal 27 adjusting shim 28 impeller 29 nut 30 lower base 31 lower baseplate	8		40	spool
11 capacitor 43 joint 12 capacitor holder 44 adapter 13 screw 45 aluminium tube 14 pressed ling of rear pump housing 46 hook 15 screw 47 adapter 16 rear cover of motor 48 O type seal 17 waved shim 49 aluminium tube 18 rotor 19 screw 20 adjusting shim 21 shim 21 shim 22 bearing 23 stator 24 front lining 25 O type seal 25 O type seal 26 lip seal 27 adjusting shim 28 impeller 29 nut 30 lower base 31 lower baseplate	9	cord anchorage	41	adapter
11 capacitor 43 joint 12 capacitor holder 44 adapter 13 screw 45 aluminium tube 14 pressed ling of rear pump housing 46 hook 15 screw 47 adapter 16 rear cover of motor 48 O type seal 17 waved shim 49 aluminium tube 18 rotor 19 screw 20 adjusting shim 21 shim 21 shim 22 bearing 23 stator 24 front lining 25 O type seal 25 O type seal 26 lip seal 27 adjusting shim 28 impeller 29 nut 30 lower base 31 lower baseplate	10	cable pressing buckle	42	O type seal
13 screw 14 pressed ling of rear pump housing 15 screw 16 rear cover of motor 16 rear cover of motor 17 waved shim 19 screw 20 adjusting shim 21 shim 22 bearing 23 stator 24 front lining 25 O type seal 27 adjusting shim 28 impeller 29 nut 30 lower base 31 lower baseplate	11	capacitor		joint OV2 L GAA
14 pressed ling of rear pump housing 46 hook 15 screw 47 adapter 16 rear cover of motor 48 O type seal 17 waved shim 49 aluminium tube 18 rotor 19 screw 20 adjusting shim 21 shim 22 bearing 23 stator 24 front lining 25 O type seal 27 adjusting shim 28 impeller 29 nut 30 lower base 31 lower baseplate	12	capacitor holder	44	adapter
14 pressed ling of rear pump housing 46 hook 15 screw 47 adapter 16 rear cover of motor 48 O type seal 17 waved shim 49 aluminium tube 18 rotor 19 screw 20 adjusting shim 21 shim 22 bearing 23 stator 24 front lining 25 O type seal 27 adjusting shim 28 impeller 29 nut 30 lower base 31 lower baseplate	13	screw	45	aluminium tube
15 screw 47 adapter 16 rear cover of motor 48 O type seal 17 waved shim 49 aluminium tube 18 rotor 9 screw 20 adjusting shim 21 shim 21 shim 22 bearing 23 stator 24 front lining 25 O type seal 25 26 lip seal 27 adjusting shim 28 impeller 29 nut 30 lower base 31 lower baseplate	14	pressed ling of rear pump housing	46	hook
17 waved shim	15		47	adapter
18 rotor 19 screw 20 adjusting shim 21 shim 22 bearing 23 stator 24 front lining 25 O type seal 26 lip seal 27 adjusting shim 28 impeller 29 nut 30 lower base 31 lower baseplate	16	rear cover of motor	48	O type seal
19 screw 20 adjusting shim 21 shim 22 bearing 23 stator 24 front lining 25 O type seal 26 lip seal 27 adjusting shim 28 impeller 29 nut 30 lower base 31 lower baseplate	17	waved shim	49	aluminium tube
20 adjusting shim 21 shim 22 bearing 23 stator 24 front lining 25 O type seal 26 lip seal 27 adjusting shim 28 impeller 29 nut 30 lower base 31 lower baseplate	18	rotor		
21 shim 22 bearing 23 stator 24 front lining 25 O type seal 26 lip seal 27 adjusting shim 28 impeller 29 nut 30 lower base 31 lower baseplate	19	screw		
22 bearing 23 stator 24 front lining 25 O type seal 26 lip seal 27 adjusting shim 28 impeller 29 nut 30 lower base 31 lower baseplate	20	adjusting shim		
23 stator 24 front lining 25 O type seal 26 lip seal 27 adjusting shim 28 impeller 29 nut 30 lower base 31 lower baseplate	21	shim		
23 stator 24 front lining 25 O type seal 26 lip seal 27 adjusting shim 28 impeller 29 nut 30 lower base 31 lower baseplate	22	bearing		
25 O type seal 26 lip seal 27 adjusting shim 28 impeller 29 nut 30 lower base 31 lower baseplate	23			
25 O type seal 26 lip seal 27 adjusting shim 28 impeller 29 nut 30 lower base 31 lower baseplate	24	front lining		
27 adjusting shim 28 impeller 29 nut 30 lower base 31 lower baseplate	25		5 <i>5</i> 7/V	V
28 impeller 29 nut 30 lower base 31 lower baseplate	26	lip seal		
28 impeller 29 nut 30 lower base 31 lower baseplate	27	adjusting shim		
29 nut 30 lower base 31 lower baseplate	28	impeller		
30 lower base 31 lower baseplate				
31 lower baseplate		lower base		
		lower baseplate		
		screw		

WP9745PR-EX-RUS211018

нас рекомендуют друзьям