

БЕНЗОДВИГАТЕЛЬ ДЛЯ БТ-43 БТ-52 БТ-56

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
9	SCREW M5X20	44	CYLINDER	76	SCREW M5X16
10	GASKET	45	SCREW	77	CLEANER COVER
11	NUT	46	GUIDE COVER ASS'Y	78	OUTLET FUEL PIPE
16	OIL-SEAL	47	SPARK PLUG	79	PLUG
17	CRANK CASE	48	SPRING	80	INLET FUEL PIPE
18	BEARING 6202/P5	49	PLUG COVER	81	FUEL TANK
19	CRANK SHAFT	50	PLUG CAP	82	LID ASS'Y
20	KEY	51	PLUG	82-1	FUEL TANK LID
21	PIN	52	UPPER COVER	82-2	GASKET
22	RUBBER WASHER	53	UPPER COVER	82-3	INLET
23	CRANK CASE	54	GASKET	82-4	INSIDE COVER
24	FLASH PAN	55	MUFFLER	82-5	LID
25	SCREW M5X30	56	SCREW	82-6	CHAIN
26	MAGNETO ROTO COMP	57	BOLT	89	STAND
27	NUT	59	SCREW	90	GUIDE PLATE
28	IGNITION COLL COMP	60	GASKET	91	SCREW M5X20
29	CORD COMP	61	ADMITTING PIPE	93	STARTER PULLEY ASS'Y
30	BOLT M5X20	62	GASKET	93-1	STARTER REEL
31	WASHER B	63	CARBURETOR	93-2	STOP RING
32	SPRING	69	STARTER	93-3	STARTER PAWL SPRING
33	EXPANDER	69-1	SCREW	93-4	STARTER PAWL
34	WASHER	69-2	WASHER	94	CLEANER OUTSIDE COVER
35	SCREW PIN	69-3	START ROPE REEL	95	CLEANER ELEMENT
36	FAN COVER	69-4	ROPE	96	DEFENDER FOR CLEANER ELEMENT
37	BEARING	69-5	RECOIL SPRING	97	SCREW ST4.2X12-F-H
38	RING	69-6	START COVER ASS'Y	98	CHOKE
39	PISTON	69-7	START HANDLE	99	CLEANER INSIDE COVER
40	PISTON PIN	69-8	RING	100	CHOKE HANDLE
41	GASKET	69-9	START RATCHET	101	SCREW M5X55
42	PISTON RING	69-10	EASY START COIL-SPRING		
43	GASKET				

RU-EN20160922-01

