


БТС-9252Л БТС-9256Л

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
A1	GEAR CASE ASSY	A31	HARNESSESS CLAMP	A61	HAND GRIP
A2	STOP RING	A32	CLAMP	A62	SPRING
A3	STOP RING	A33	SCREW M5X20	A63	BOX RIGHT
A4	BEARING 6000Z	A34	NUT M5	A64	SCREW ST2.9X18
A5	PINION	A35	CLUTCH COMP	A65	SCREW M5X30
A6	STEEL PLATE	A36	CLUTCH DRUM COMP	A66	CABLE COMP
A7	CAPSCREW M5X20	A37	STOP RING	A67	TUBE
A8	WASHER	A38	BEARING 6202	A68	STOP BUTTON COMP
A9	SCREW M5X12	A39	STOP RING	A69	HAND GRIP
A10	BOLT M6X12	A40	UNKER	A70	SPRING
A11	WASHER	A41	RUBBER COVER	A71	BOX LEFT
A12	GEAR CASE	A42	SCREW M5X20	A72	NYLON CUTTER HAND
A13	BLADE COVER	A43	SCREW M5X12	A73	CASE
A14	BEARING 6000Z	A44	STOP RING	A74	LEFT NUT
A15	GEAR	A46	CLAMP	A75	WASHER
A16	SHAFT	A47	WIRE CLAMP BAND	A76	SPRING
A17	BEARING6002	A48	HARNESSESS ASSY	A77	NYLON CORD
A18	STOP RING	A49	BOLT M5X25	A78	CORD HOLDER
A19	HOLDER	A50	CAPLOWER	A79	PLATEN
A20	HOLDER	A51	BRACKET	A80	COVER
A21	HOLDER	A52	HANDLE	A81	BRACKET
A22	LEFT NUT	A53	GRIP LEFT	A82	SCREW M5X30
A24	3T BLADE	A54	CAP OPPER	A83	SAFETY GUARD
A25	PIPE COMP	A55	HANDLE	A84	WASHER
A26	RUBBER COVER	A56	LEVER ASSY	A85	SCREW M5X16
A27	OIL BEARING	A57	SCREW ST2.9X13	A87	GUARD
A28	DRIVE SHAFT	A58	BUTTON	A88	BLADE
A29	PIPE	A59	SPRING	A89	GUARD ASSY
A30	HOLDER ASSY	A60	CLOCK PIN		

SO-RU20151124 VER:2.1



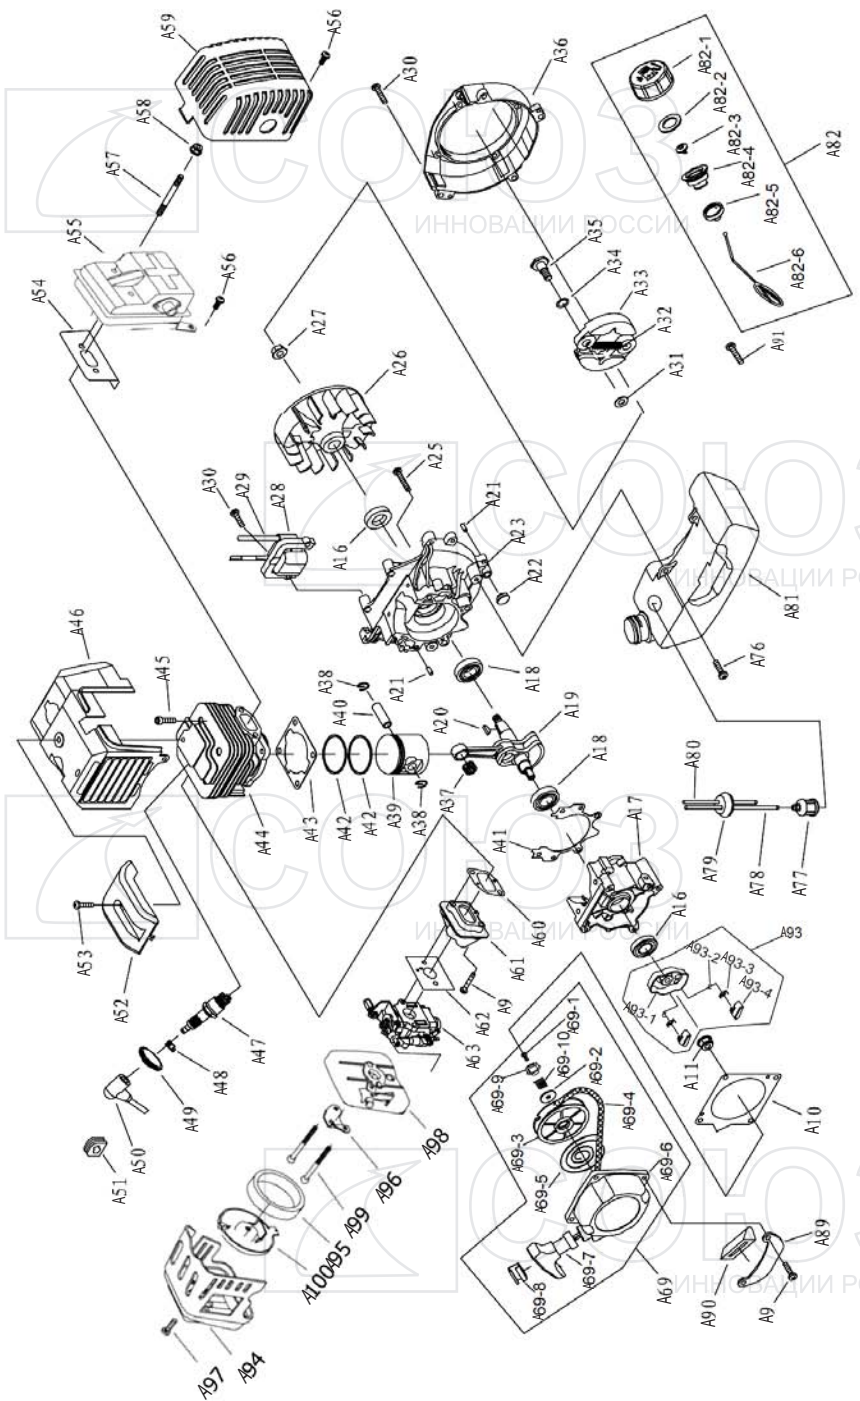

ЭЛЕКТРОДВИГАТЕЛЬ ДЛЯ БТС-9252Л БТС-9256Л

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
A9	SCREW M5X20	A44	CYLINDER	A69-10	EASY START COIL SPRING
A10	GASKET	A45	SCREW	A76	SCREW M5X16
A11	NUT	A46	GUIDE COVER ASSY	A77	CLEANER COVER
A16	OIL SEAL	A47	SPARK PLUG	A78	OUTLET FUEL PIPE
A17	CRANK CASE	A48	SPRING	A79	PLUG
A18	BEARING 6202	A49	PLUG COVER	A80	INLET FUEL PIPE
A19	CRANKSHAFT	A50	PLUG CAP	A81	FUEL TANK
A20	KEY	A51	PLUG	A82	LID ASSY
A21	PIN	A52	UPPER COVER	A82-1	FUEL TANK LID
A22	RUBBER WASHER	A53	SCREW	A82-2	GASKET
A23	CRANK CASE	A54	GASKET	A82-3	INLET
A25	SCREW M5X30	A55	MUFFLER	A82-4	INSIDE COVER
A26	MAGNETO ROTOR COMP	A56	SCREW	A82-5	LID
A27	NUT	A57	BOLT	A82-6	CHAIN
A28	IGNITION COLL COMP	A58	NUT	A89	STAND
A29	CORD COMP	A59	MUFFLER COVER	A90	RUBBER COVER
A30	BOLT M5X20	A60	GASKET	A91	SCREW M5X20
A31	WASHER	A61	ADMITTING PIPE	A93	STARTER PULLEY ASSY
A32	SPRING	A62	GASKET	A93-1	STARTER REEL
A33	EXPANDER	A63	CARBURETOR	A93-2	STOP RING
A34	WASHER	A69	STARTER	A93-3	STARTER PAWL SPRING
A35	SCREW PIN	A69-1	SCREW	A93-4	STARTER PAWL
A36	FAN COVER	A69-2	WASHER	A94	AIRFILTER COVER
A37	BEARING 10X14X16	A69-3	START POPE REEL	A95	AIR CLEANER
A38	RING	A69-4	POPE	A96	AIRFILTER COVER SEAT
A39	PISTON	A69-5	RECOIL SPRING	A97	SCREW
A40	PISTON PIN	A69-6	START COVER ASSY	A98	CHOKE SEAT ASSY
A41	GASKET	A69-7	START HANDLE	A99	SCREW
A42	PISTON RING	A69-8	RING	A100	CIRCULAR COVER
A43	GASKET	A69-9	START RATCHET		

SO-RU20151124 VER:2.1

