



## ДУ-900<sup>®</sup>

NO.	DESCRIPTION	NO.	DESCRIPTION
1	CHUCK SCREW	20	STATOR
2	KEY CHUCK	21	SCREW
3	SPINDLE	22	HOUSING
4	KEY	24	INDUCTANCE
5	STEEL BALL	25	DIRECTION LEVEL
6	BEARING 6002Z	26A	SWITCH WITH SPEED WHEEL
7	CIRCLIP	27	CAPACITOR
8	GEAR	28	SCREW
9	SPRING	29	CABLE CLAMP
10	NEEDLE BEARING HK0710	30	CABLE SLEEVE
11	CENTRAL SUPPORT	31	CABLE
12	IMPACT/DRILL CHANGE PLATE	32	BOLT
13	IMPACT/DRILL CHANGE BUTTON	33	AUXILIARY HANDLE
14	BEARING 609Z	34	DEPTH RULER
15	ROTOR	35	KEY
16	BEARING 626Z	100	SPINDLE ASSEMBLY
17	BRUSH HOLDER		
18	CARBON BRUSH		

RU-EN20161028-01