

ДШ-12Л, ДШ-14Л, ДШ-18Л

NO.	DESCRIPTION	NO.	DESCRIPTION
1	CHUCK SCREW	26	THE FIRST PLANETARY GEAR
2A	CHUCK	27	INNER GEAR RING
3	TORQUE ADJUSTMENT RING	28	MOTOR GEAR
4	TORQUE ADJUSTMENT NUT	29	WASHER
5	SPRING	30	SCREW
6	WASHER	31	MOTOR PRESS BOARD
7A	SPINDLE	32	MOTOR
8	BEARING 688Z	33	INTERNAL CABLE
9	STEEL BALL	34	LED PCB
10	PIN	35	TORQUE SPRING
11	GEAR BOX	36	DIRECTION LEVER
12	BEARING 688Z	37	SWITCH
13	CIRCLIP	38	HOUSING
14A	THE THIRD PLANET BRACKET	39	SCREW
15	GEAR RING	40	STRAP
16	WASHER	41	BATTERY PACK
17	THE THIRD PLANETARY GEAR	42	CHARGER
18	THE SECOND PLANETARY GEAR CARRIER	43	SPRING PIECE
19	THE SECOND PLANETARY GEAR	44	LOCK RING
20	TWO SPEED CHANGE GEAR RING	45	LOCK PIN
21	PLASTIC GEAR RING	46	TRIANGLE BLOCK
22	SCREW	888A	GEAR BOX ASSEMBLY
23	TWO SPEED CHANGE BUTTON	889	MOTOR ASSEMBLY
24	SPRING		
25	THE FIRST PLANETARY GEAR CARRIE		

RU-EN20171123-1
VER:1.2

