



## ДШС-3312Л, ДШС-3314Л, ДШС-3318Л

NO.	DESCRIPTION	NO.	DESCRIPTION
1	CHUCK SCREW	23	TWO SPEED CHANGE BUTTON
2	CHUCK	24	SPRING
3	TORQUE ADJUSTMENT RING	25	THE FIRST PLANETARY GEAR CARRIER
4	TORQUE ADJUSTMENT NUT	26	THE FIRST PLANETARY GEAR
5	SPRING	27	INNER GEAR RING
6	WASHER	28	MOTOR GEAR
7	SPINDLE	29	WASHER
8	BEARING 688Z	30	SCREW
9	STEEL BALL	31	MOTOR PRESS BOARD
10	PIN	32	MOTOR
11	GEAR BOX	33	INTERNAL CABLE
12	BEARING 688Z	34	LED PCB
13	CIRCLIP	35	TORQUE SPRING
14	THE THIRD PLANETARY GEAR CARRIER	36	DIRECTION LEVER
15	GEAR RING	37	SWITCH
16	WASHER	38	HOUSING
17	THE THIRD PLANETARY GEAR	39	SCREW
18	THE SECOND PLANETARY GEAR CARRIER	40	STRAP
19	THE SECOND PLANETARY GEAR	41	BATTERY PACK
20	TWO SPEED CHANGE GEAR RING	42	CHARGER
21	PLASTIC GEAR RING	888	GEAR BOX ASSEMBLY
22	SCREW	889	MOTOR ASSEMBLY

RU-SO20160311\_01