



## ДШС-3312Л, ДШС-3314Л, ДШС-3318Л

NO.	DESCRIPTION	NO.	DESCRIPTION
1	CHUCK SCREW	27	the first planet gear
2	CHUCK	28	the first planet gear ring
B3	TORQUE ADJUSTMENT RING	29	motor gear
4	TORQUE ADJUSTMENT NUT	30	press board
5	SPRING	B31	screw
6	WASHER	B32	motor press board
B7	SPINDLE	33	motor
8	BEARING 688Z	B34	internal cable
9	STEEL BALL	B35	switch
10	PIN	B36	direction switch
11	GEAR BOX	B37	buckle
12	BEARING 688Z	B38	screw
13	CIRCLIP	B39	screw bits holder
14	THE THIRD PLANETARY GEAR CARRIER	B40	screw bits
15	GEAR RING	B41	spring
16	WASHER	B42	decoration cover
17	THE THIRD PLANETARY GEAR	B43	housing
18	THE SECOND PLANETARY GEAR CARRIER	44	screw
19	THE SECOND PLANETARY GEAR	B45	rope
20	TWO SPEED CHANGE GEAR RING	B46	magnet (only for ДШС-3314Л/ДШС-3318Л)
21	PLASTIC GEAR RING	B47	battery pack
22	SCREW	48	charger
23	shrapnel for two speed change button	888B	gear box assembly
24	two speed change button		
25	spring for two speed change button		
26	the first planet carrier		

RU-SO20181220 VER1.3