



## ПЦС-9922

NO.	DESCRIPTION	NO.	DESCRIPTION
1	NUT	28	OIL TUBE
2	SIDE COVER	29	SCREW
3	NUT	30	OIL PUMP CLAMP PLATE
4	SPRING WASHER	31	OUTLET TUBE
5	WASHER	32	OIL PUMP
6	WASHER	33	MIDDLE COVER
7	CHAIN WHEEL	34	BEARING6201
8	ADJUST PIN	35	ROTOR
9	SCREW	36	BEARING6200
10	SAW CHAIN	37	FAN GUARD
11	GUIDE BAR	38	SCREW
12	SCREW	39	STATOR
13	GEAR BOX	41	SCREW
14	BOLT	42	BRUSH HOLDER
15	SCREW	43	CARBON BRUSH
16	GUARD PLATE	44	BRUSH COVER
17	SCREW	45	NUT
18	HANDLE	46	SWITCH
19	BEARING6202	47	HOUSING ASSEMBLY
20	WOODRUFFE KEY	48	SCREW
21	OUTPUT SHAFT	49	SCREW
22	GEAR	50	CORD CLAMP
23	WASHER	51	CORD SLEEVE
24	CIRCLIP	52	POWER CORD
25	BEARING6001	53	CAPACITOR
26	TANK CAP	54	SCREW
27	OIL TANK		

RU-SO20141128