



ПЦС-9926

NO.	DESCRIPTION	NO.	DESCRIPTION
1	NUT	29	SCREW
2	SIDE COVER	30	OIL PUMP CLAMP PLATE
3	NUT	31	OUTLET TUBE
4	SPRING WASHER	32	OIL PUMP
5	WASHER	33	MIDDLE COVER
6	WASHER	34	BEARING6201
7A	CHAIN WHEEL	35	ROTOR
8	ADJUST PIN	36	BEARING6200
9	SCREW	37A	FAN GUARD
10	SAW CHAIN	38	SCREW
11	GUIDE BAR	39	STATOR
12	SCREW	41	SCREW
13	GEAR BOX	42A	BRUSH HOLDER
14	BOLT	43	CARBON BRUSH
15	SCREW	44	BRUSH COVER
16	GUARD PLATE	45	NUT
17	SCREW	46A	SWITCH
18	HANDLE	47A	HOUSING ASSEMBLY
19	BEARING6202	48	SCREW
20	WOODRUFFE KEY	49	SCREW
21	OUTPUT SHAFT	50	CORD CLAMP
22	GEAR	51	CORD SLEEVE
23	WASHER	52	POWER CORD
24	CIRCLIP	53	CAPACITOR
25	BEARING6001	54	SCREW
26	TANK CAP	55	SPRING
27	OIL TANK	56	TRIGGER
28	OIL TUBE		

RU-SO20170908
Ver:1.2