



BT18

NO.	DESCRIPTION	NO.	DESCRIPTION
1	REAR AUXILIARY HANDLE	29	RIGHT SPRING POSITION BLOCK
2	AUXILIARY HANDLE LOCKING POLE	30	LEFT MOTOR HOUSING
3	SPRING	31	RIGHT MOTOR HOUSING
4	ROTARY GEAR RING	32	MOTOR
5	MOVING RING	33	ANTI-VIBRATION RING
6	SPRING	A34	SHAFT
7	POSITION RING	35	MOTOR SEAT
8	LEFT HANDLE	36	CUTTING LINE
9	FRONT AUXILIARY HANDLE	37	SPOOL
10	SPRING	38	FAN
11	LENGTH ADJUSTMENT LOCKING POLE	39	SPRING
12	POSITION PIN	40	CUTTING LINE RELEASE BUTTON
13	UPPER CONNECTION COVER	41	SPOOL COVER
14	HEAD ANGLE LOCKING KNOB	42	GUARD
15	SPRING	43	SPRING
16	CONNECTION RING	44	BLADE
17	DOWN CONNECTION COVER	45	STEEL WIRE
18	SCREW	46	RIGHT HANDLE
19	PCB	47	SCREW
20	SWITCH	48	RIGHT BATTERY PACK HOLDER
21	SAFETY SWITCH	49	CONNECTION PIECE
22	TRIGGER	50	RUBBER PIN
23	ALUNINUM TUBE PLUG	51	LEFT BATTERY PACK HOLDER
24	INNER TUBE	52	BATTERY PACK
25	ALUNINUM TUBE	53	WHEEL
26	CABLE	54	WASHER
27	LEFT SPRING POSITIOIN BLOCK	55	BEARING 608Z
28	SPRING	56	WHEEL SEAT
AC	CHARGER	57	SCREW

BT18-EX-RU250909-1 VER 2.1

Sturm!
нас рекомендуют друзья