



## BT36

NO.	DESCRIPTION	NO.	DESCRIPTION
1	Right case	32	Protector damping
2	Top cover	33	Protector pressplate
4	Battery pin	34	Rivet
5	battery damping	35	Gear box Assy
6	battery stander (R)	36	Screw
7	wire	37	Screw
8	battery stander (L)	38	Blade (4T)
9	Right/left damping	39	spool
10	UP/down damping	40	screw
11	controller assy	41	nut
12	Motor	42	Ring (small)
13	Left case	43	Ring (big)
14	SCREW	44	Right handle assy
15	Screw	45	handle cover (R)
16	screw	46	Trigger
17	Frount damping	47	Button
18	Connector	48	Trigger controller
19	Bearing	49	handle cover (L)
20	Shaft	50	Switch wire assembly
21	Screw	51	Spring
22	Handle holder (down)	52	Handle Damping
23	Holder damping (down)	53	Right handle alu pipe
24	Holder damping (up)	54	Switch
25	Handle holder (middle)	55	Left handle
26	Handle holder (up)	56	Belt
27	ALU pipe	57	Screwdriver (tools kit)
28	Protector	58	sleeve (tools kit)
29	Screw	59	Hex Key Wrench (tools kit)
30	Kinfe	60	Hex Key Wrench (tools kit)
31	Nut		

BT36-EX-20201117

Sturm!  
нас рекомендуют друзья