


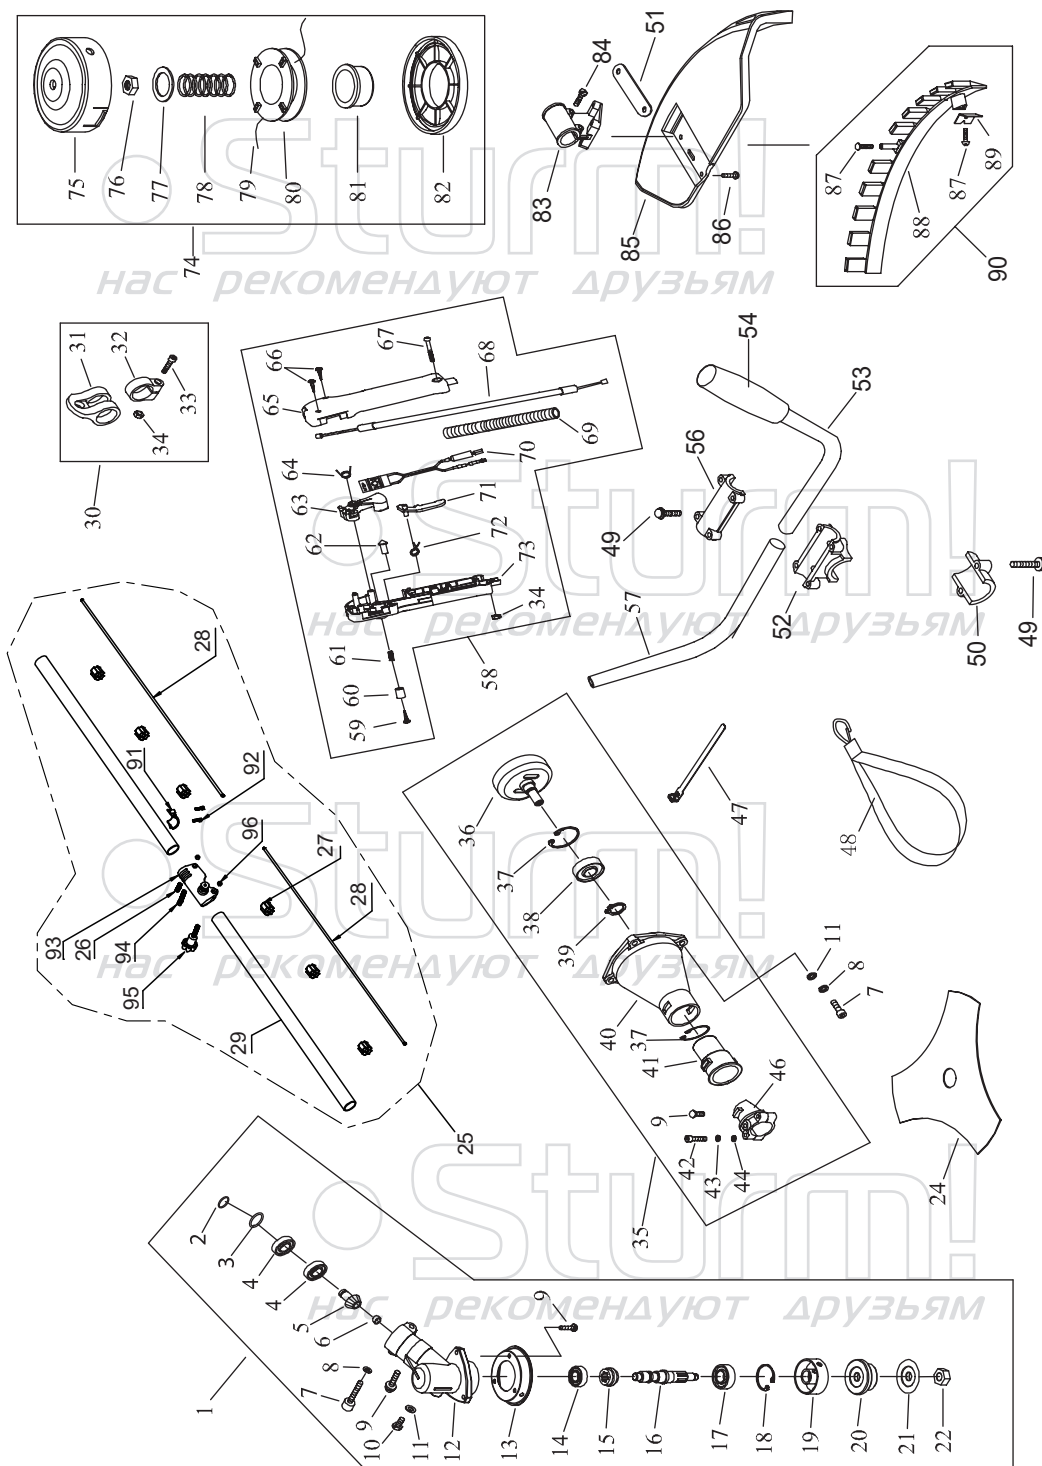


BT9133S BT9143S BT9152S BT9156S

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
1	GEAR CASE ASS'Y	33	SCREW M5X20	66	SCREW ST2.9X18
2	STOP RING	34	NUT	67	SCREW M5X30
3	STOP RING	35	CLUTCH COMP.	68	CABLE COMP.
4	BEARING 6000-2RS/P5	36	CLUTCH DRUM COMP.	69	TUBE
5	PINION	37	STOP RING	70	STOP BUTTON COMP.
6	STEEL PLATE CAP	38	BEARING 6202-2RS/P5	71	HANDGRIP
7	SCREW M6X20	39	STOP RING	72	SPRING
8	WASHER	40	LINKER	73	BOX,LEFT
9	SCREW M5X12	41	RUBBER COVER	74	NYLON CUTTER HEAD
10	BOLT M6X12	42	SCREW	75	CASE
11	WASHER	43	WASHER	76	LEFT NUT
12	GEAR CASE	44	WASHER	77	WASHER
13	BLADE COVER	46	CLAMP	78	SPRING
14	BEARING 6000/P5	47	WIRE CLAMP BAND	79	NYLON CORD
15	GEAR	48	HARNESS ASS'Y	80	CORD HOLDER
16	GEAR SHAFT	49	SCREW M5X2	81	PLATEN
17	BEARING 6002-2RS/P5	50	CAP,LOWER	82	COVER
18	STOP RING	51	WASHER	83	BRACKET
19	HOLDER	52	BRACKET	84	SCREW M5X30
20	HOLDER	53	HANDLE	85	SAFETY GUARD
21	HOLDER	54	GRIP LEFT	86	SCREW M5X16
22	LEFT NUT	56	CAP,UPPER	87	SCREW ST4.2X16
24	BLADE	57	HANDLE	88	GUARD
25	PIPE COMP.	58	LEVER ASS'Y	89	BLADE
26	M5X12 BOLT	59	SCREW ST2.9X13	90	GUARD ASS'Y
27	OIL-BEARING	60	BUTTON	91	HANDLE HOLDER (BASE)
28	DRIVE SHAFT	61	SPRING	92	M5X15 BOLT
29	PIPE	62	CLOCK PIN	93	HANDLE HOLDER (COVER)
30	HOLDER ASS'Y	63	HANDGRIP	94	M5X35 BOLT
31	HARNESS CLAMP	64	SPRING	95	THUMB SCREW
32	CLAMP	65	BOX,RIGHT	96	NUT

ST-XW2208RUS V1.3

Sturm!
нас рекомендуют друзья

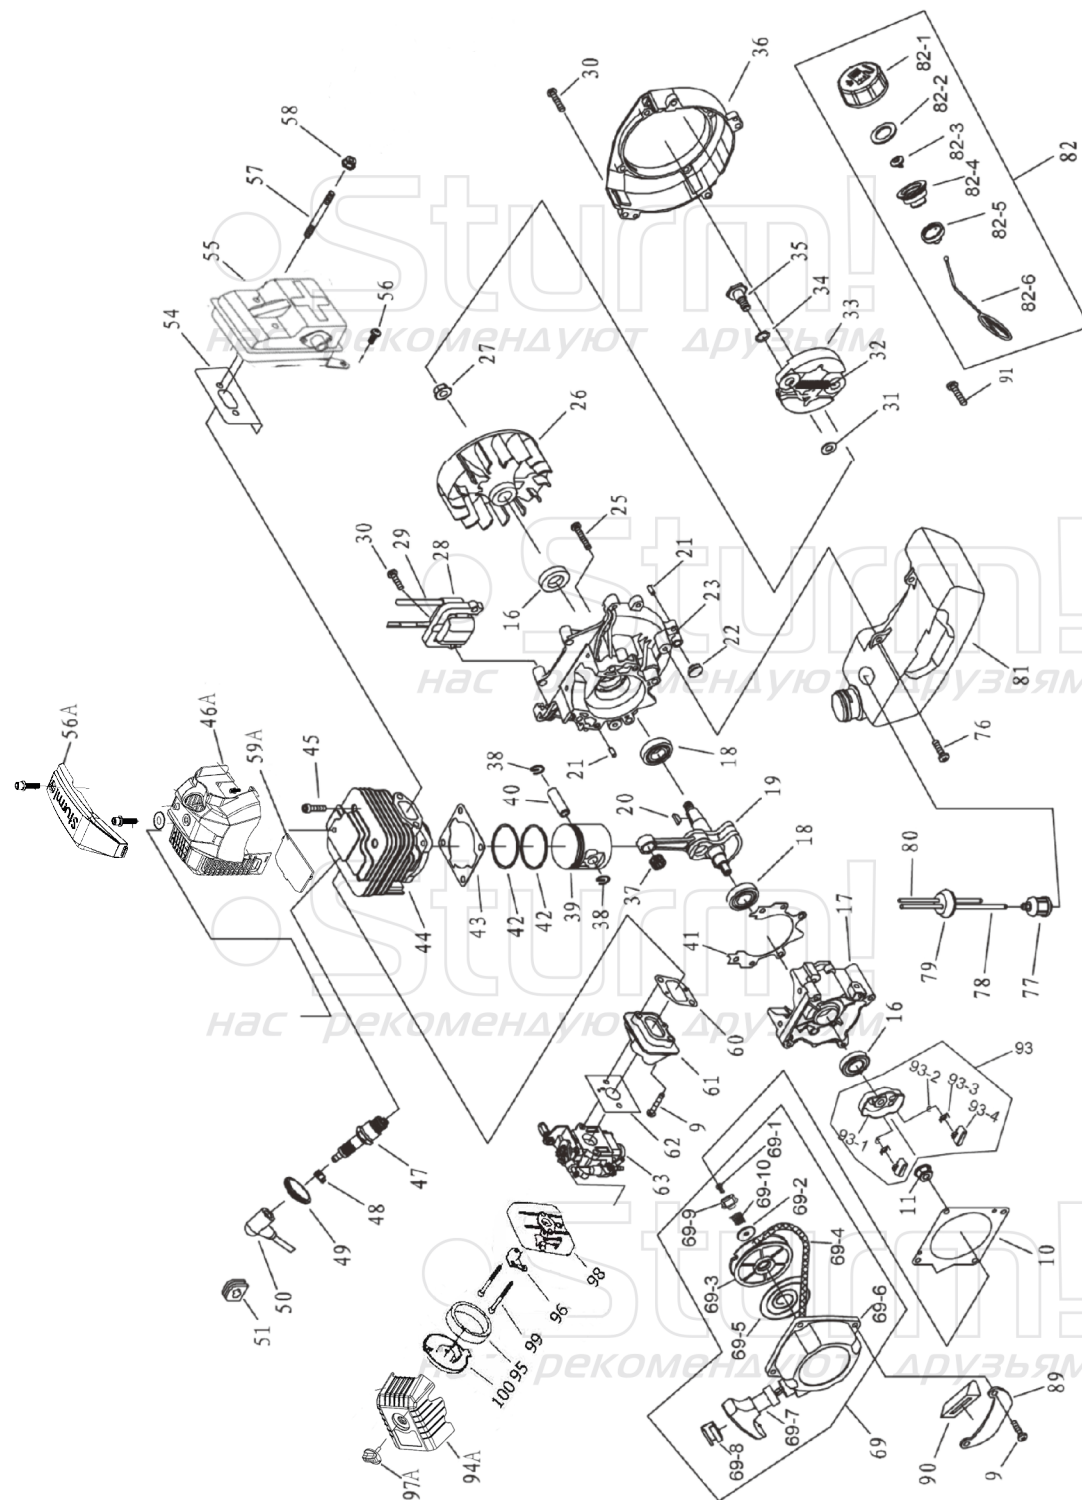

ENGINE FOR BT9133S BT9143S BT9152S BT9156S

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
9	SCREW M5X20	44	CYLINDER	69-10	EASY START COIL SPRING
10	GASKET	45	SCREW	76	SCREW M5X16
11	NUT	46A	GUIDE COVER ASSY	77	CLEANER COVER
16	OIL SEAL	47	SPARK PLUG	78	OUTLET FUEL PIPE
17	CRANK CASE	48	SPRING	79	PLUG
18	BEARING 6202	49	PLUG COVER	80	INLET FUEL PIPE
19	CRANKSHAFT	50	PLUG CAP	81	FUEL TANK
20	KEY	51	PLUG	82	LID ASSY
21	PIN	54	GASKET	82-1	FUEL TANK LID
22	RUBBER WASHER	55	MUFFLER	82-2	GASKET
23	CRANK CASE	56A	TOP COVER	82-3	INLET
25	SCREW M5X30	57	BOLT	82-4	INSIDE COVER
26	MAGNETO ROTOR COMP	58	NUT	82-5	LID
27	NUT	59A	WIND DEFLECTOR	82-6	CHAIN
28	IGNITION COLL COMP	60	GASKET	89	STAND
29	CORD COMP	61	ADMITTING PIPE	90	RUBBER COVER
30	BOLT M5X20	62	GASKET	91	SCREW M5X20
31	WASHER	63	CARBURETOR	93	STARTER PULLEY ASSY
32	SPRING	69	STARTER	93-1	STARTER REEL
33	EXPANDER	69-1	SCREW	93-2	STOP RING
34	WASHER	69-2	WASHER	93-3	STARTER PAWL SPRING
35	SCREW PIN	69-3	START POPE REEL	93-4	STARTER PAWL
36	FAN COVER	69-4	POPE	95	SPONGE
37	BEARING 10X13X16	69-5	RECOIL SPRING	96	HASP
38	RING	69-6	START COVER ASSY	99	SCREW
39	PISTON	69-7	START HANDLE	100	CIRCULAR COVER
40	PISTON PIN	69-8	RING	94A	AIR FILTER COVER
41	GASKET	69-9	START RATCHET	97A	SCREW NUT
42	PISTON RING			98	CARBURETOR HOLDER
43	GASKET				

ST-XW2208RUS V1.3

Sturm!
наш рекомендуют друзья