


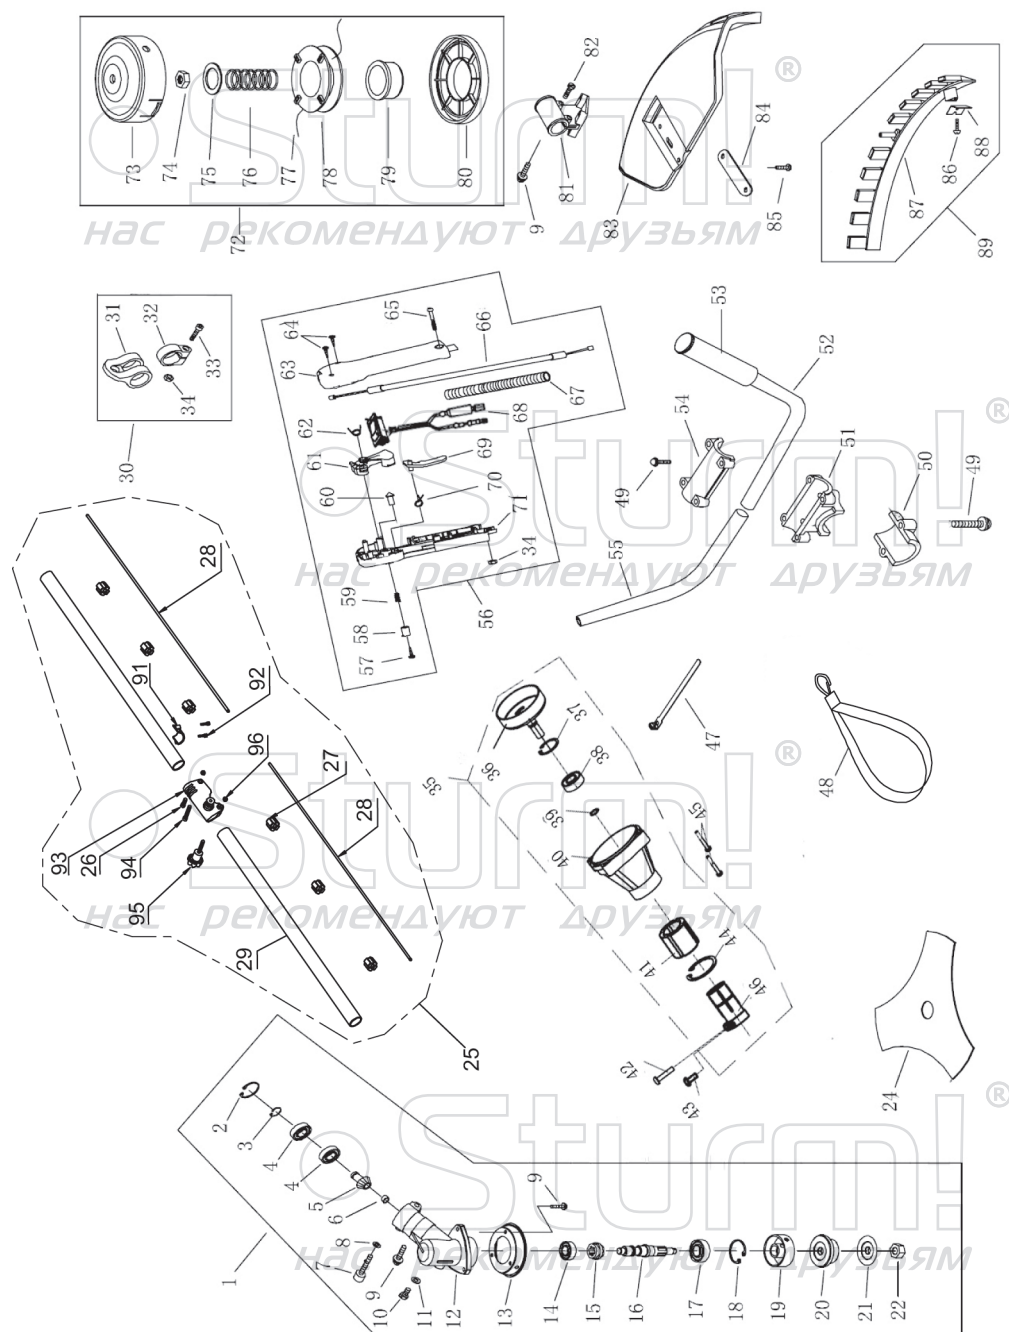


BT9133S

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
1	GEAR CASE ASSY	33	SCREW M5X20	65	SCREW M5X30
2	STOP RING	34	NUT M5	66	CABLE COMP
3	STOP RING	35	CLUTCH COMP	67	TUBE
4	BEARING 6000Z	36	CLUTCH DRUM COMP	68	STOP BUTTON COMP
5	PINION	37	STOP RING	69	HAND GRIP
6	STEEL PLATE	38	BEARING 6202	70	SPRING
7	CAPSCREW M5X20	39	STOP RING	71	BOX LEFT
8	WASHER	40	UNKER	72	NYLON CUTTER HAND
9	SCREW M5X12	41	RUBBER COVER	73	CASE
10	BOLT M6X12	42	SCREW M5X20	74	LEFT NUT
11	WASHER	43	SCREW M5X12	75	WASHER
12	GEAR CASE	44	STOP RING	76	SPRING
13	BLADE COVER	46	CLAMP	77	NYLON CORD
14	BEARING 6000Z	47	WIRE CLAMP BAND	78	CORD HOLDER
15	GEAR	48	HARNESS ASSY	79	PLATEN
16	SHAFT	49	BOLT M5X25	80	COVER
17	BEARING6002	50	CAPLOWER	81	BRACKET
18	STOP RING	51	BRACKET	82	SCREW M5X30
19	HOLDER	52	HANDLE	83	SAFETY GUARD
20	HOLDER	53	GRIP LEFT	84	WASHER
21	HOLDER	54	CAP OPPER	85	SCREW M5X16
22	LEFT NUT	55	HANDLE	87	GUARD
24	3T BLADE	56	LEVER ASSY	88	BLADE
25	PIPE COMP	57	SCREW ST2.9X13	89	GUARD ASSY
26	M5X12 BOLT	58	BUTTON	91	HANDLE HOLDER (BASE)
27	OIL BEARING	59	SPRING	92	M5X15 BOLT
28	DRIVE SHAFT	60	CLOCK PIN	93	HANDLE HOLDER (COVER)
29	PIPE	61	HAND GRIP	94	M5X35 BOLT
30	HOLDER ASSY	62	SPRING	95	THUMB SCREW
31	HARNESS CLAMP	63	BOX RIGHT	96	NUT
32	CLAMP	64	SCREW ST2.9X18		

RU-ST20160922

Sturm!
нас рекомендуют друзья

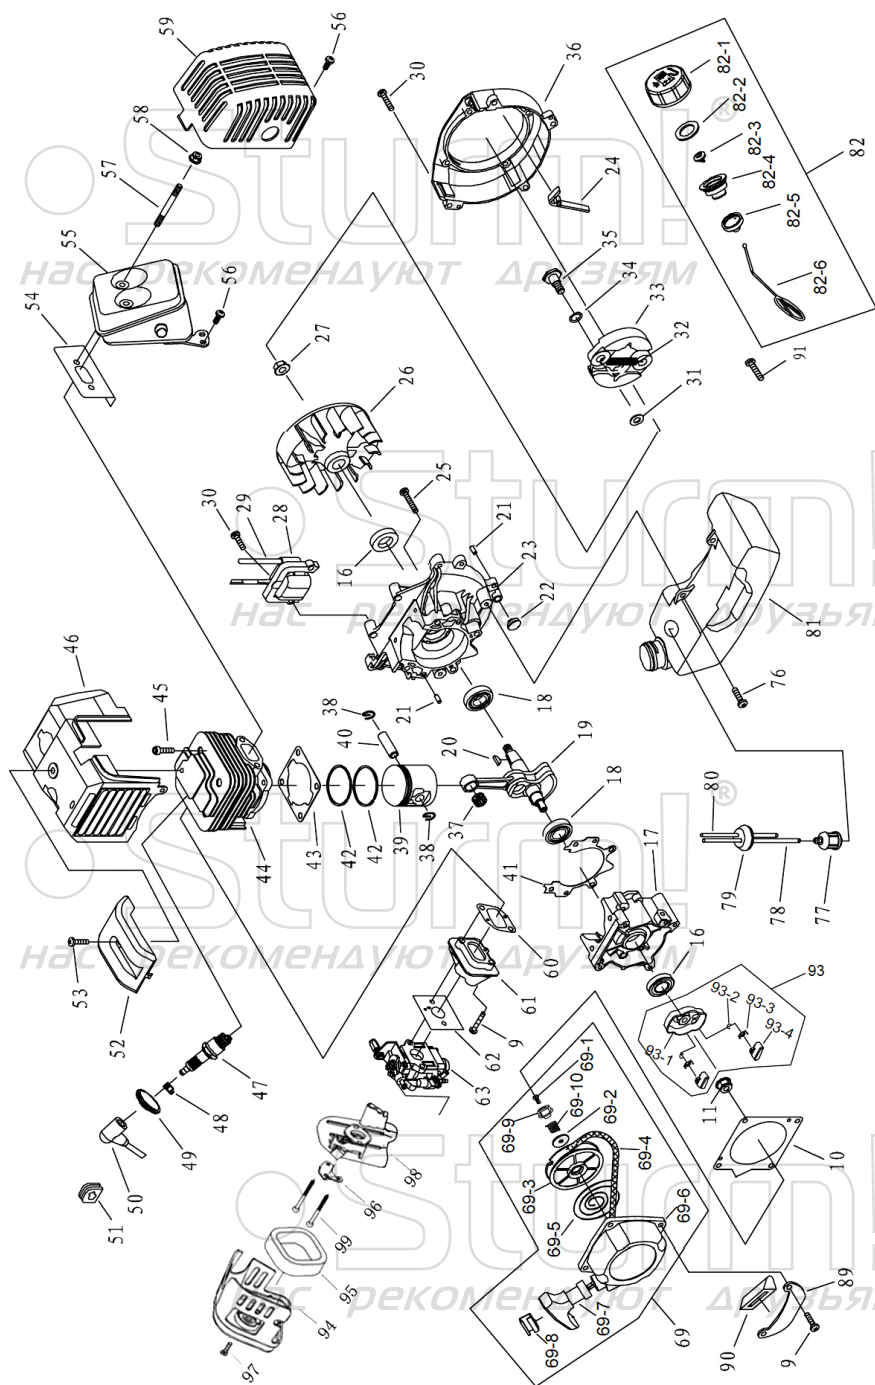

ENGINE FOR BT9133S

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
9	SCREW M5X20	44	CYLINDER	76	SCREW M5X16
10	GASKET	45	SCREW	77	CLEANER COVER
11	NUT	46	GUIDE COVER ASSY	78	OUTLET FUEL PIPE
16	OIL SEAL	47	SPARK PLUG	79	PLUG
17	CRANK CASE	48	SPRING	80	INLET FUEL PIPE
18	BEARING 6201	49	PLUG COVER	81	FUEL TANK
19	CRANK SHAFT	50	PLUG CAP	82	LID ASSY
20	KEY	51	PLUG	82-1	FUEL TANK LID
21	PIN	52	UPPER COVER	82-2	GASKET
22	RUBBER WASHER	53	SCREW	82-3	INLET
23	CRANK CASE	54	GASKET	82-4	INSIDE COVER
24	FLASH PIN	55	MUFFLER	82-5	LID
25	SCREW M5X30	56	SCREW	82-6	CHAIN
26	MAGNETO ROTOR COMP	57	BOLT	89	STAND
27	NUT	58	NUT	90	RUBBER COVER
28	IGNITION COLL COMP	59	MUFFER COVER	91	SCREW M5X20
29	CORD COMP	60	GASKET	93	STARTER PULLEY ASSY
30	BOLT M5X20	61	ADMITTING PIPE	93-1	STARTER REEL
31	WASHER	62	GASKET	93-2	STOP RING
32	SPRING	63	CARBURETOR	93-3	STARTER PAWL SPRING
33	EXPANDER	69	STARTER	93-4	STARTER PAWL
34	WASHER	69-1	SCREW	94	AIRFILTER COVER
35	SCREW PIN	69-2	WASHER	95	AIR CLEANER
36	FAN COVER	69-3	START POPE REEL	96	AIRFILTER COVER SEAT
37	BEARING 9X12X12	69-4	POPE	97	SCREW
38	RING	69-5	RECOIL SPRING	98	CHOKE SEAT ASSY
39	PISTON	69-6	START COVER ASSY	99	SCREW
40	PISTON PIN	69-7	START HANDLE		
41	GASKET	69-8	RING		
42	PISTON RING	69-9	START RATCHET		
43	GASKET	69-10	EASY START COIL SPRING		

RU-ST20160922

Sturm!
нас рекомендуют друзья