


CC2616SL

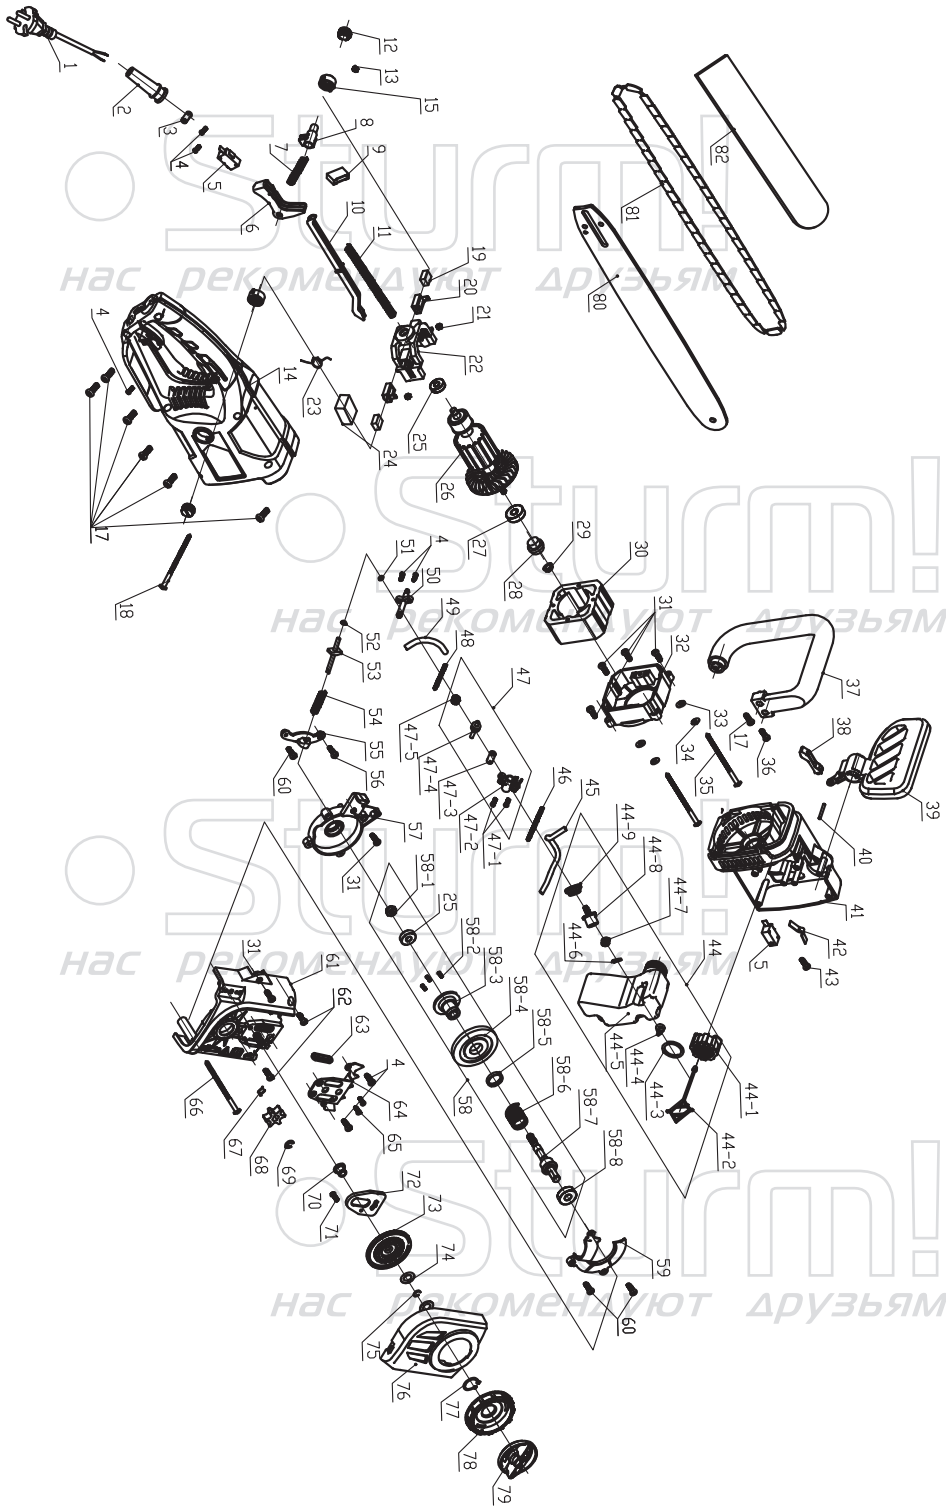

NO.	DESCRIPTION	SPEC	NO.	DESCRIPTION	SPEC
1	CABLE		45	TUBING	
2	CABLE PROTECTOR		46	SPRING	
3	CABLE ANCHORAGE		47	OIL PUMP COMPONENTS	
4	SCREW	ST4*12	47-1	SCREW	ST3*8
5	SWITCH		47-2	PUMP BODY	
6	SWITCH TRIGGER		47-3	PISTON BUSH	
7	SPRING		47-4	TURBINE ROD	
8	SAFETY LOCKING BUTTON		47-5	TURBINE TOOTH	
9	CAPACITOR		48	SPRING	
10	PUSH ROD		49	TUBING	
11	SPRING		50	OUT OF THE NOZZLE	
12	BRUSH CAP		51	O-RING	
13	NUT M4		52	WASHER	Φ4
14	HANDLE		53	BRAKE LEVER	
15	CARBON BRUSH HOLDER		54	SPRING	
17	SCREW	ST5*16	55	BRAKE FIXING PLATE	
18	SCREW	M4*70	56	SCREW	ST4*22
19	CARBON BRUSH		57	SUPPORT PLATE	
20	BRUSH HOLDER		58	GEAR ASSEMBLY	
21	NUT M4		58-1	NUT	M8
22	MOTOR BACK BRACKET		58-2	SCREW	M4*10
23	INDUCTOR		58-3	GEAR MOLD INSERT	
24	SOFT START		58-4	BIG BEVEL GEAR	
25	BEARING	608RS	58-5	SHAFT SLEEVE	
26	ROTOR		58-6	BRAKE TORSION SPRING	
27	BEARING 6000RS	6000RS	58-7	OUTPUT SHAFT	
28	SMALL BEVEL GEAR		58-8	BEARING	608RS
29	NUT M6	M6	59	DUST COVER	
30	STATOR		60	SCREW	ST4*20
31	SCREW	M4*16	61	GEAR BOX COVER	
32	MOTOR FRONT BRACKET		62	SCREW	ST5*30
33	WASHER	Φ4	63	RUBBER RING	
34	SPRING WASHER	Φ4	64	BUMPER SPIKE	
35	NON-STANDARD SCREW	M4*65	65	SCREW	ST4*10
36	SCREW	M5*40	66	SCREW	ST5*70
37	AUXILIARY HANDLE		67	SPRING	
38	CONNECTING ROD		68	CHAIN WHEEL	
39	PROTECTIVE PLATE		69	CIRCLIP	Φ7
40	PIN	Φ3X12	70	SHAFT SLEEVE	
41	GEAR BOX		71	GUIDE BAR SCREW	
42	LEAF SPRING		72	KNOCKOUT PLATE	
43	SCREW	ST3*8	73	CIRCLING ROUND WHEEL	
44	OIL TANK ASSEMBLY		74	WASHER	Φ11XΦ20X1
44-1	OIL TANK COVER		75	CIRCLIP	
44-2	POTHOOK		76	CHAIN COVER	
44-3	O-RING		77	CIRCLIP	Φ19
44-4	CHECK VALVE		78	TENSIONING KNOB	
44-5	OIL TANK		79	COMPRESS KNOB	
44-6	PLUG		80	GUIDE BAR	
44-7	SPONGE		81	CHAIN	
44-8	FUEL TANK JOINT		82	SCABBARD	
44-9	SEALING RING				