


CSC1811BL

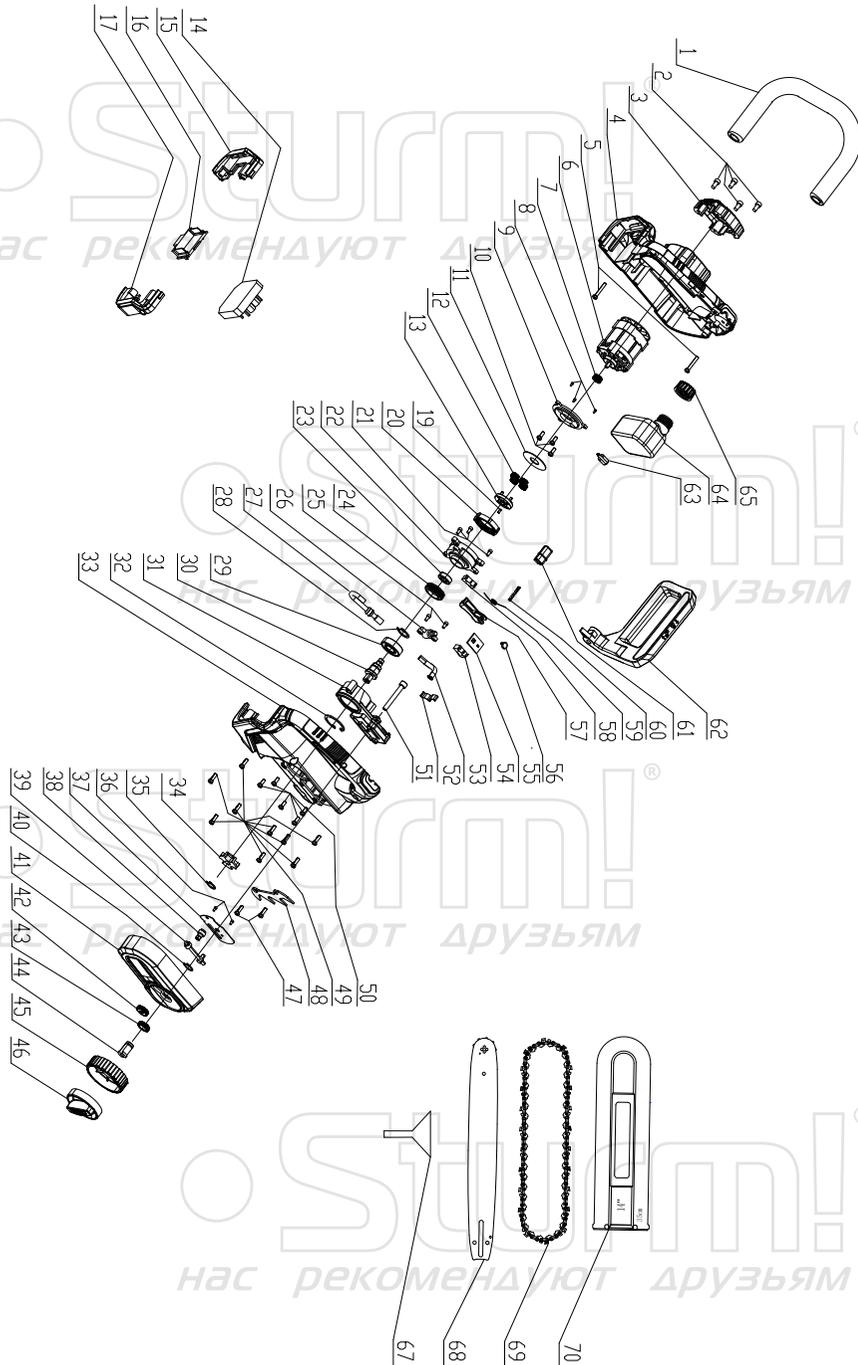

NO	DESCRIPTION	NO	DESCRIPTION
1	HANDLE	37	ADJUSTMENT SCREW COVER
2	SCREW	38	MAIN ADJUSTMENT NUT
3	LEFT SIDE COVER	39	SECONDARY ADJUSTMENT SCREW
4	LEFT BOX	40	CASS SPRING
5	SCREW	41	RIGHT SIDE COVER
6	BRUSHLESS MOTOR	42	SECONDARY ADJUSTMENT GEAR
7	MOTOR GEAR	43	MAIN ADJUSTMENT GEAR
8	SCREW	44	ADJUSTMENT SCREW PIN
9	GEAR BOX TOP COVER	45	ADJUSTMENT WHEEL
10	SCREW	46	ADJUSTMENT KNOB
11	GEAR GASKET	47	SCREW
12	TRANSMISSION GEAR	48	INSERT WOOD TEETH
13	OUTPUT BRACKET	49	SCREW
14	PCB	50	SCREW
15	BATTERY HODLER(L)	51	SCREW
16	BATTERY SEAT	52	SPRING
17	BATTERY HODLER(R)	53	OUTLET OIL PIPE
19	PIN	54	BRACKER SWITCH
20	EXTERNAL GEAR	55	POWER SWITCH CIRCUIT BOARD
21	SCREW	56	BUTTON
22	GEAR BOX UNDER COVER	57	TRIGGER
23	BEARING 609	58	WORKING SWITCH
24	OIL PUMP TURBINE	59	TRIGGER SPRING
25	SCREW	60	TRIGGER CONTROLLER SPRING
26	OIL PUMP	61	TRIGGER CONTROLLER
27	INLET PIPE	62	BRACKE PLATE
28	CASS SPRING	63	OIL FILTER
29	BEARING 6000	64	TANK
30	OUTPUT SHAFT	65	TANK CAP
31	MAIN BRACKET	67	FUNNEL
32	CASS SPRING	68	BAR
33	RIGHT BOX	69	CHAIN
34	SPROKET	70	BAR COVER
35	CASS SPRING		
36	SCREW		