


## GC99372B

NO.	DESCRIPTION	NO.	DESCRIPTION
A1	RIGHT COVER ASSEMBLY	A40	WASHER 5
A2	SHIELD PIN	A41	START PLATE
A3	SHIELD PIN GLAND	A41A	ROPE COIL PLATE
A4	RING 3	A42	START COIL-SPRING
A5	SPACER PIN	A43	RETURN COIL-SPRING
A6	SECONDARY BRAKE SPRING	A44	START HANDLE
A7	BRAKE SPRING	A45	START STRETCHING WIRE
A8	BRAKE CONTROL ROD	A47	START COVER
A9	SECONDARY PULL-ROD	A48	FUEL TUBE
A10	PIN 3X9	A49	PETROL FILTER COMPONENTS
A11	MAIN LEVEL	A50	SHOCK RUBBER
A12	TIGHTENER SCREW	A51	BASE
A13	TENSION BLOCK	A52	SHOCK RUBBER GLAND
A14	TAPPING SCREW ST4X8	A53	SCREW ST5X16
A15	BRAKE SPRING COVER PLATE	A54	DUST COVER
A16	SHOCK RUBBER WASHER	A55	ANTI-DROP PLATE
A17	SHIELD RING 5	A56	PACKING WASHING 20X30X2
A18	WASHER 6	A57	OIL COVER
A19	BRAKE TORSION ROD SPRING	A58	TAPPING SCREW ST4X25
A20	TENSIONER COVER PLATE	A59	TRIGGER CONTROL RACK
A21	CHAIN GUIDE DOG	A60	PINGX30
A22	RIGHT COVER	A61	TRIGGER TORSION ROD SPRING
A23	BRAKE STRAP	A62	TRIGGER
A24	DUST SHIELD	A63	THROTTLE ROD
A25	SHIELD RING 4	A64	HANDLE COVER
A26	SPACING SHIELD	A65	BALANCER OIL TUBE
A27	SHOCK RUBBER CUSHING	A66	BALANCER BODY
A28	FRONT DAMPER	A67	BALANCER RUBBER
A29	LH SHEATHING	A68	BALANCER COVER
A30	NUT M8	A69	FRONT HANDLE ASSEMBLY
A31	AIR FILTER LOCK NUT	A70	TAPPING SCREW ST5X16
A32	LOCK NUT WASHER 15X26X1	A71	PRIMER BULB
A33	AIR FILTER COVER	A72	BACK FUEL TUBE
A34	IDLE ADJUSTING GUIDE SET	A73	FUEL PUMP TUBE
A35	SCREW M5X16	A74	TUBE CLIP
A36	UPPER COVER PLATE	A75	OIL NOZZLE
A37	STARTER ASSEMBLY	A76	GUIDE BAR
A38	BOSSING	A77	CHAIN
A39	TAPPING SCREW ST4.8X13	A100	OIL FILLER CAP ASSEMBLY

ST-RU20151208 VER: 2.1

Sturm!  
нас рекомендуют друзья

# GC99372B ENGINE

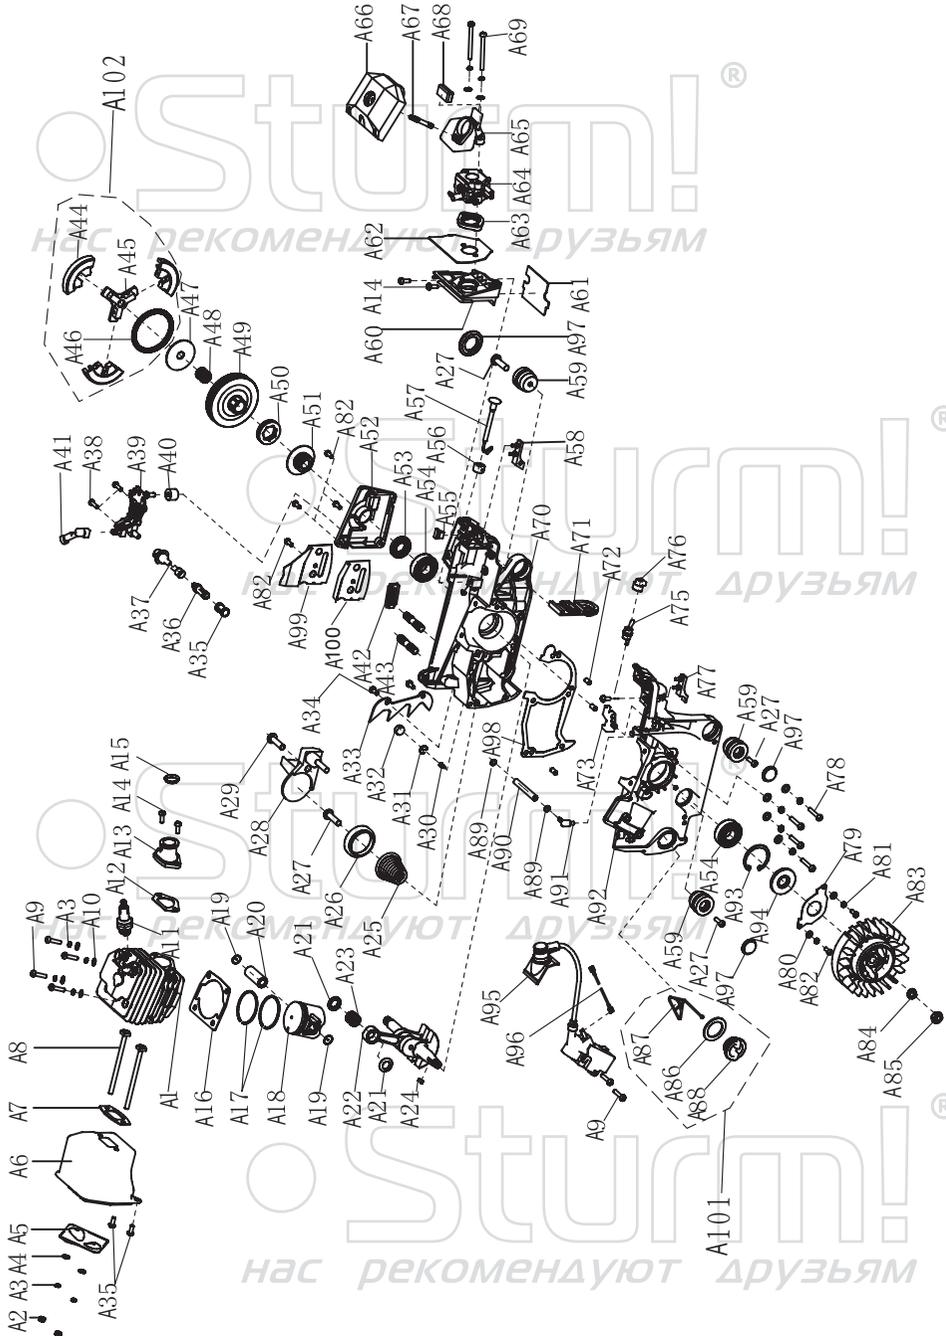

NO.	DESCRIPTION	NO.	DESCRIPTION
A1	CYLINDER BODY	A52	COVER PLATE
A2	NUT M5	A53	OIL SEAL 15X28X4.5
A3	WASHER 5	A54	BEARING 6202 GRADE D 15X35X11
A4	WASHER 5	A55	SHOCK BLOCK 1
A5	SILENCER COVER PLATE	A56	THROTTLE LEVER RETAINING BRACKET
A6	SILENCER BODY	A57	THROTTLE ROD
A7	SILENCER SEALING PLATE	A58	RIGHT SHOCK BLOCK
A8	MUFFLER CONNECTING SCREW	A59	CUSHION SOCKET
A9	SCREW M5X20	A60	AIR INTAKE SUPPORT
A10	WAHSER 5	A61	BACKING BOARD
A11	SPARK PLUG	A62	SEALING PLATE OF AIR INTAKE SUPPORT
A12	AIR INTAKE TUBE SEALING PLATE	A63	AIR INTAKE FLANGE
A13	AIR INTAKE TUBE	A64	CARBURETOR
A14	SCREW M5X12	A65	AIR INTAKE SOCKET
A15	HOLD COIL	A66	AIR FILTER
A16	CYLINDER SEALING PLATE	A67	DOUBLE-SCREW BOLT GM5-M5X30
A17	PISTON RING	A68	CUSHION OF AIR INTAKE SOCKET
A18	PISTON	A69	NUT M5X50
A19	PISTON PIN CIRCLIP	A70	RIGHT CASE BODY
A20	PISTON PIN	A71	DUST PLATE
A21	NEEDLE BEARING	A72	PIN 5X10
A22	CRANKSHAFT CONNECTING BAR COMPONENTS	A73	SHOE BLOCK 2
A23	NEEDLE BEARING 11X15X12.5	A75	EXTINCTION SWITCH
A24	SEMICIRCULAR KEY 3X3.5X10	A76	EXTINCTION SWITCH SOCKET
A25	CONICAL SPREADER SPRING	A77	LEFT SHOCK BLOCK
A26	CONICAL SPREADER BASE	A78	SCREW M5X25
A27	TAPPING SCREW ST5X16	A79	OIL SEAL DAMPER
A28	CHAIN CATCHER	A80	WASHER 4
A29	SCREW M5X16	A81	WASHER 4
A30	AERATION JET	A82	SCREW M4X10
A31	AERATION JET CIRCLIP	A83	FLYWHEEL
A32	SPONGE TRANSITION BLOCK	A84	WASHER 8
A33	BUMPER SPIKES	A85	NUT M8X1
A34	SCREW M5X10	A86	PACKING WASHING 20X30X2
A35	OIL FILTER SCREEN	A87	ANTI-DROP PLATE
A36	OIL FILTER	A88	OIL COVER
A37	OIL TUBE	A89	SUCTION TUBE CIRCLIP
A38	SCREW M4X14	A90	SUCTION TUBE 2.5X7X105
A39	OIL PUMP	A91	SUCTION JET
A40	SPONGE TRANSITION COIL	A92	LEFT CASE BODY
A41	NOZZLE	A93	RING35
A42	CHAIN GUIDE BLOCK	A94	OIL SEAL 15X35X4.5
A43	DOUBLE-SCREW BOLT AYM8-M8X26-8.8	A95	IGNITER
A44	SHOE BLOCK	A96	EXTINCTION CONDUCTOR
A45	RETAINER	A97	DUST COVER
A46	CLUTCH EXTENSION SPRING	A98	CASE BODY SEALING PLATE
A47	CLUTCH ADJUSTING WASHER	A99	DAMPER
A48	NEEDLE BEARING 12X15X14.5	A100	WASHER
A49	CLUTCH SHELL	A101	OIL FILLER CAP ASSEMBLY
A50	SPROCKET	A102	CLUTCH SPRING/BLOCK ASSEMBLY
A51	TURBINE		