


HAG1812BLE

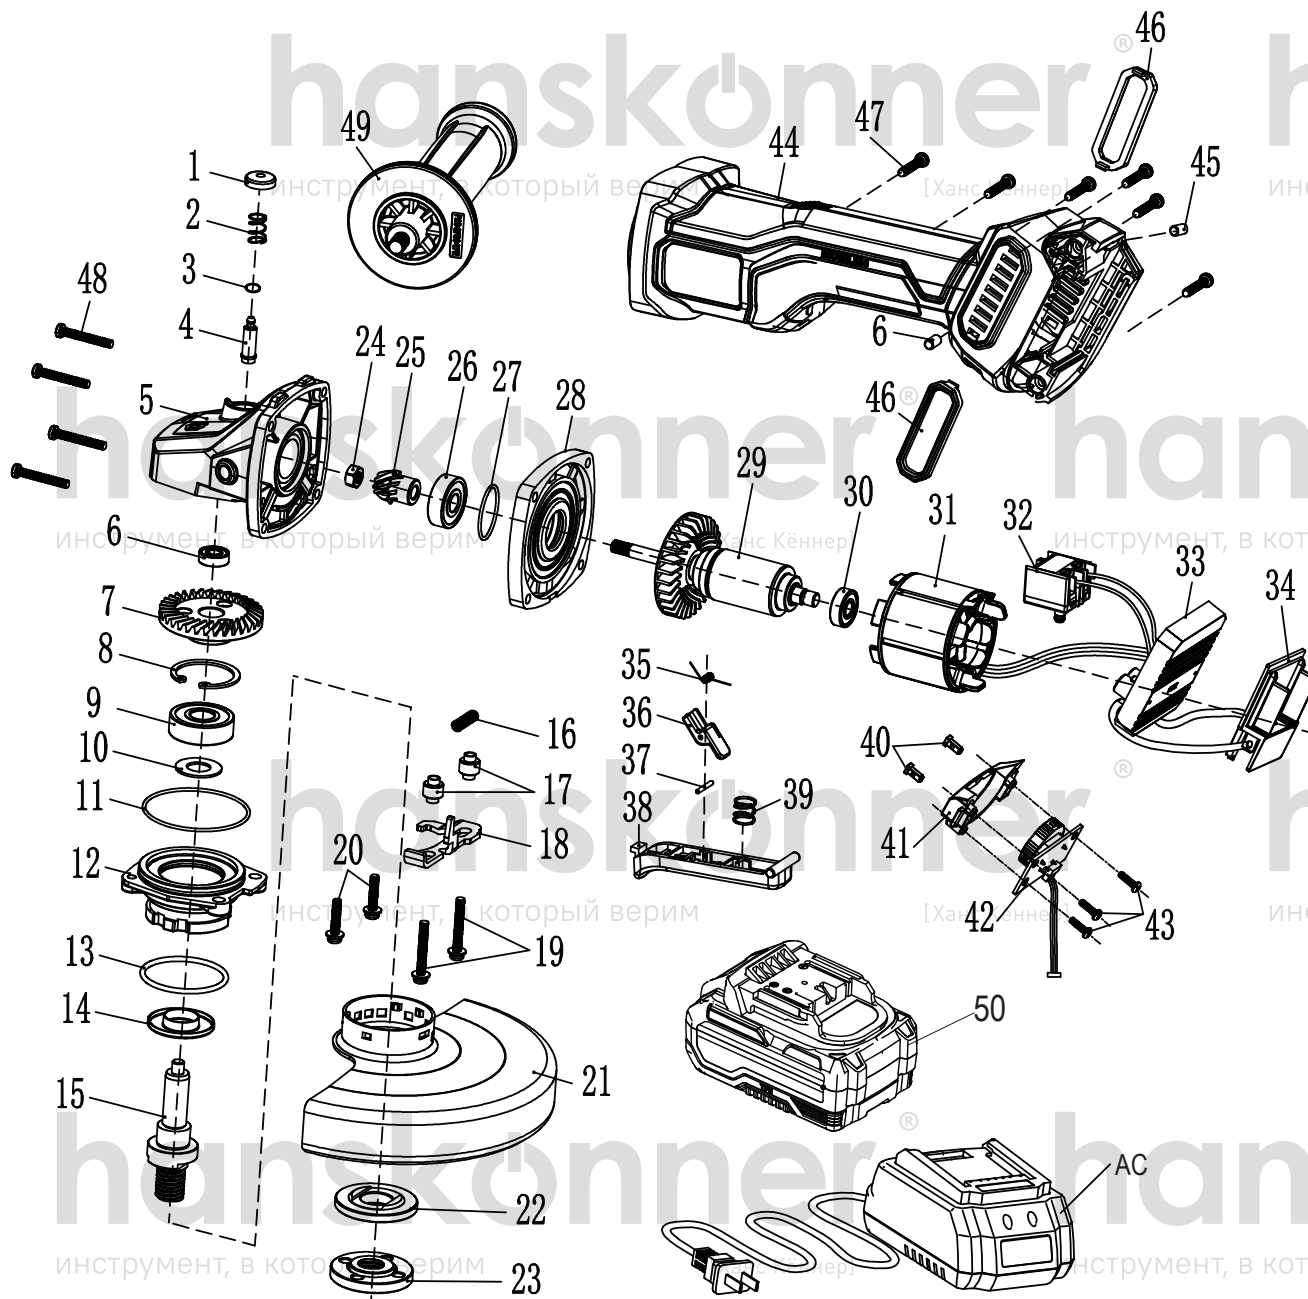

NO.	DESCRIPTION
1	PIN CAP
2	COMPRESSION SPRING
3	O RING
4	PIN
5	GEARCASE ASSEMBLY
6	BEARINGS696Z
7	SPIRAL BEVEL GEAR
8	RETAINING RING
9	BEARINGS6201RS
10	FRONT COVER GASKET
11	O RING
12	FRONT COVER
13	O RING
14	DUST COVER
15	SPINDLE
16	SPRING
17	GUIDE PILLAR
18	WHEEL GUARD QUICK-CHANGE LEVER
19	SCREWM4X30
20	SCREWM4X14
21	WHEEL GUARD
22	INNER FLANGE
23	OUTER FLANGE
24	HEX. NUT
25	SPIRAL BEVEL GEAR
26	BEARINGS629RS
27	O RING
28	MIDDLE COVER
29	ROTOR
30	BEARINGS607RS
31	STATOR
32	SWITCH
33	CONTROL BOARD
34	BATTERY CONNECTOR BLOCK
35	SPRING
36	SHUTTLE
37	PIN
38	SWITCH TRIGGER
39	SPRING
40	LIGHT GUIDE PILLAR
41	SPEED SELECT BOARD
42	SPEED SELECT WITH PCB
43	SCREWST3X10
44	HOUSING COVER
45	RUBBER COLUMN
46	WINDSHIELD
47	SCREWST4X20
48	SCREWST4X28
49	AUXILIARY HANDLE
50	BATTERY PACK
AC	CHARGER