

HBS14127M



NO.	DESCRIPTION	NO.	DESCRIPTION
1	SUB HANDLE	49	BEARING PRESS SLEEVE
2	SCREW	50	BEARING
3	ANTI - LOOSE SCREW	51	CLASS II GEAR SHAFT
4	HANDLE BASE	52	GEAR BOX
5	SCREW	53	SCREW
6	LIGHT BACK COVER	54	GEAR BOX SLEEVE
7	LED LIGHT	55	SCREW
8	LED COVER	56	HOLDER
9	LIGHT BASE	57	SLIDE BLOCK
10	SCREW	58	ADJUSTING SUPPORT
11	LEFT HANDLE	59	SCREW
12	SPEED CONTROLLER	60	WHEEL
13	SWITCH	61	EXTENSION SPRING
14	CAPACITOR	62	MOVABLE SUPPORT
15	RIGHT HANDLE	63	DRIVING SHAFT
16	SLEEVE	64	LOCATING SLEEVE
17	CABLE	65	DRIVE PLATE
18	CABLE PLATE	66	NON - SLIP BAND
19	SCREW	67	COPPER BUSH
20	SCREW	68	DUST - PROOF WASHER
21	ADJUSTABLE WRENCH	69	CIRCLIP Φ 16
22	ADJUSTING SHAFT	70	DRIVE PLATE COVER
23	SCREW	71	NEDDLE BEARING
24	SCREW	72	CLASS II GEAR
25	ROUND PIN	73	CLASS III GEAR SHAFT
26	SCREW	74	CLASS III GEAR
27	SUPPORT SLEEVE	75	COLLAR Φ 35
28	SUPPORT	76	BARING
29	BRUSH CAP	77	GEAR BOX COVER
30	CARBON BRUSH	78	OUTPUT SHAFT
31	BRUSH HOLDER	79	SCREW
32	HOUSING	80	DRIVE PLATE
33	STATOR SLEEVE	81	COUPLING PIECE
34	TENSION SPRING	82	PRESS PLATE
35	STATOR	83	SCREW
36	SCREW	84	SCREW
37	ANTI - WIND RING	85	LOCATING BLOCK II
38	BEARING SLEEVE	86	LOCATING BLOCK I
39	BEARING	87	BEARING
40	ROTOR	88	PIN
41	SCREW	89	BEARING
42	O RING	90	SPECIAL SCREW
43	MIDDLE COVER	91	BLADE HOLDER
44	NEDDLE BEARING	92	BRUSH
45	GEAR	93	BLADE
46	GEAR SHAFT	94	SCREW M4X8
47	BEARING	95	WRENCH S6
48	CLASS I GEAR	96	WRENCH S4