


HRS1830PRO

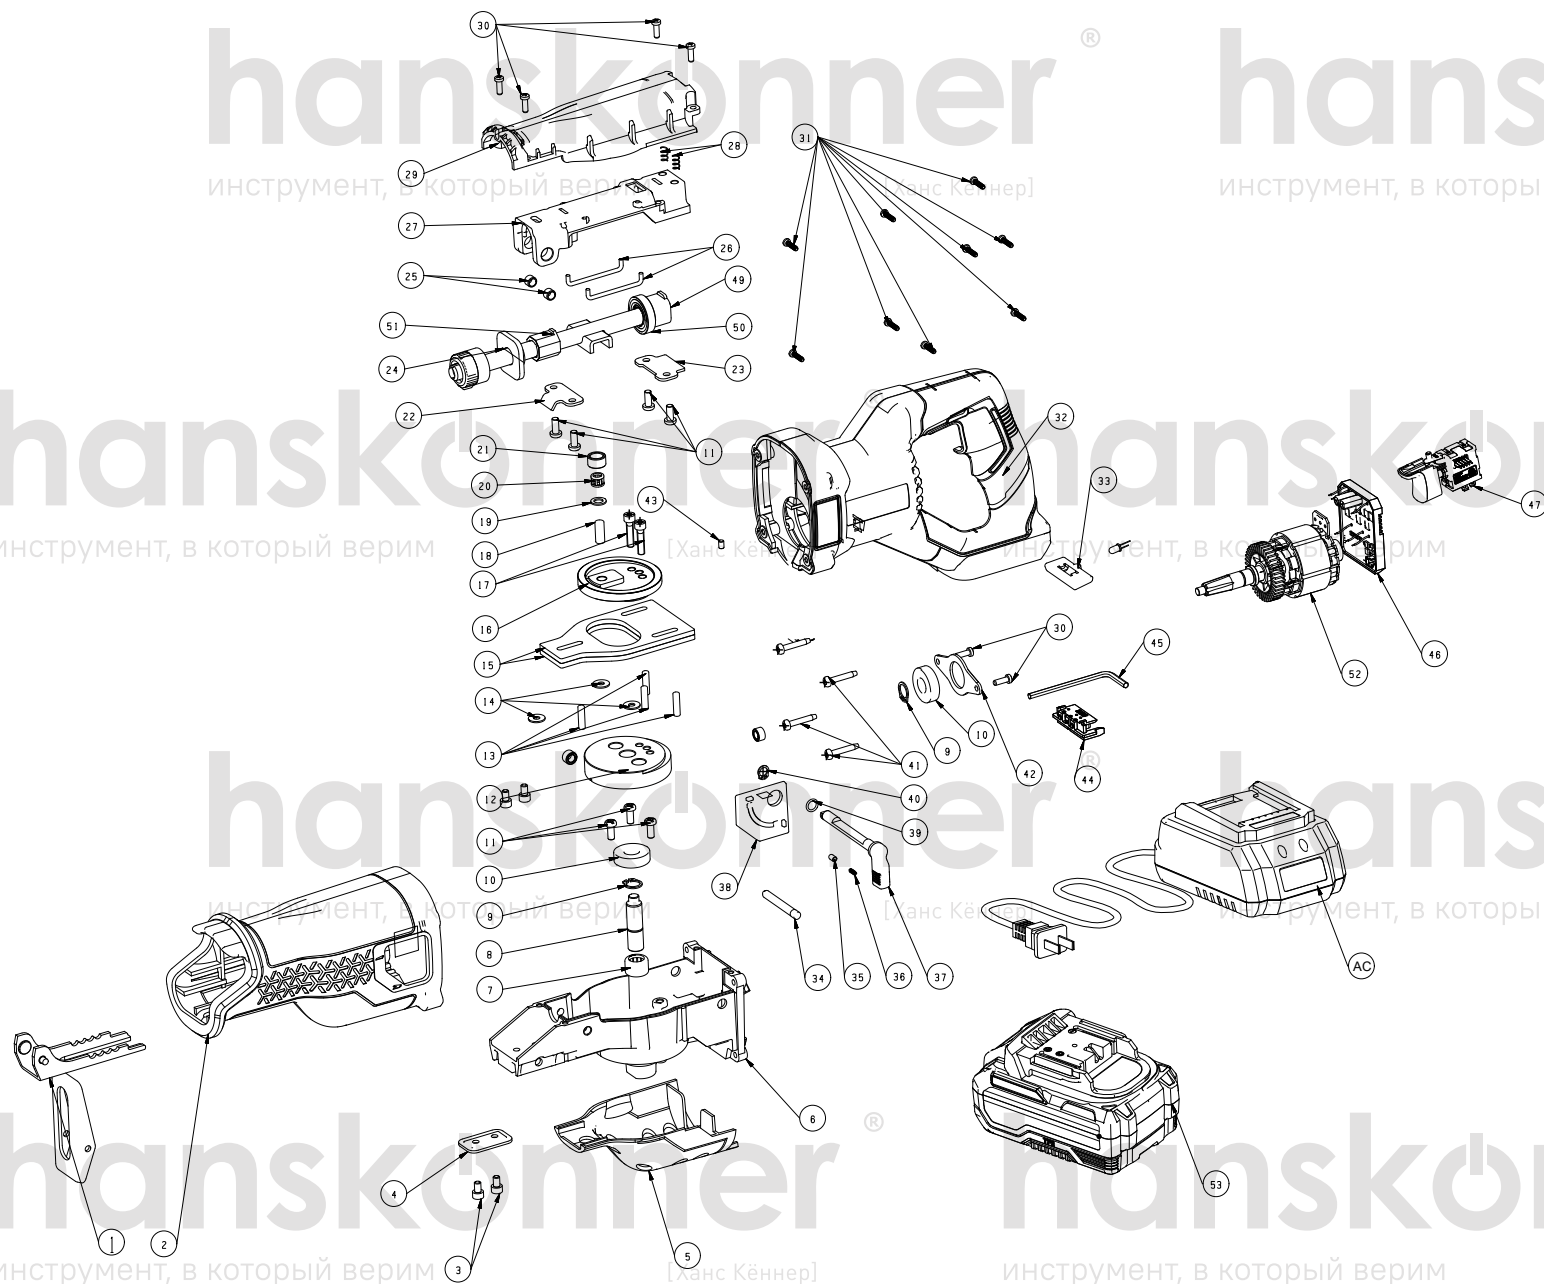

NO	DESCRIPTION
1	FRONT BRACKET
2	FRONT HANDLE
3	BOLT M5X10
4	SUPPORT PLATE
5	LOWER INNER HOUSING
6	GEAR BOX
7	NEEDLE ROLLER BEARING HK121812
8	BIG GEAR SHAFT $\Phi 12 \times 45.5$
9	CIRCLIP $\Phi 12$
10	BEARING 6001Z
11	SCREW ST5X12
12	BIG GEAR
13	GUIDE PIN $\Phi 5 \times 19$
14	WASHER $\Phi 11 \times \Phi 5 \times 1$
15	BALANCE BLOCK
16	ECCENTRIC WHEEL
17	BOLT M5X22
18	PIN $\Phi 7 \times 17.5$
19	WASHER $\Phi 7.2 \times \Phi 12 \times 1$
20	NEEDLE ROLLER BEARING HK071008
21	ROLLING SLEEVE
22	FRONT BEARING PRESSURE PLATE
23	REAR BEARING PRESSURE PLATE
24	RECIPROCATATE ROD ASSEMBLY
25	SHAFT SLEEVE
26	STEEL WIRE
27	ROTATING BRACKET
28	SPRING
29	GEAR BOX COVER
30	SCREW M4X12
31	SCREW ST3.5X16
32	HOUSING
33	SWITCH LOCK KNOB
34	PIN
35	KNOB CONVEX CAP
36	SPRING
37	PENDULUM SWITCH KNOB
38	LIMIT PLATE
39	O-RING
40	CIRCLIP $\Phi 8$
41	SCREW ST4X25
42	BEARING PRESSURE PLATE
43	RUBBER COLUMN
44	CONNECTION FOOT
45	ALLEN WRENCH
46	MOTOR PCB
47	SWITCH
49	REAR GUIDE BUSHING
50	BEARING 6903Z
51	FRONT GUIDE BUSHING
52	MOTOR
53	BATTERY PACK
AC	CHARGER