


HSG1868

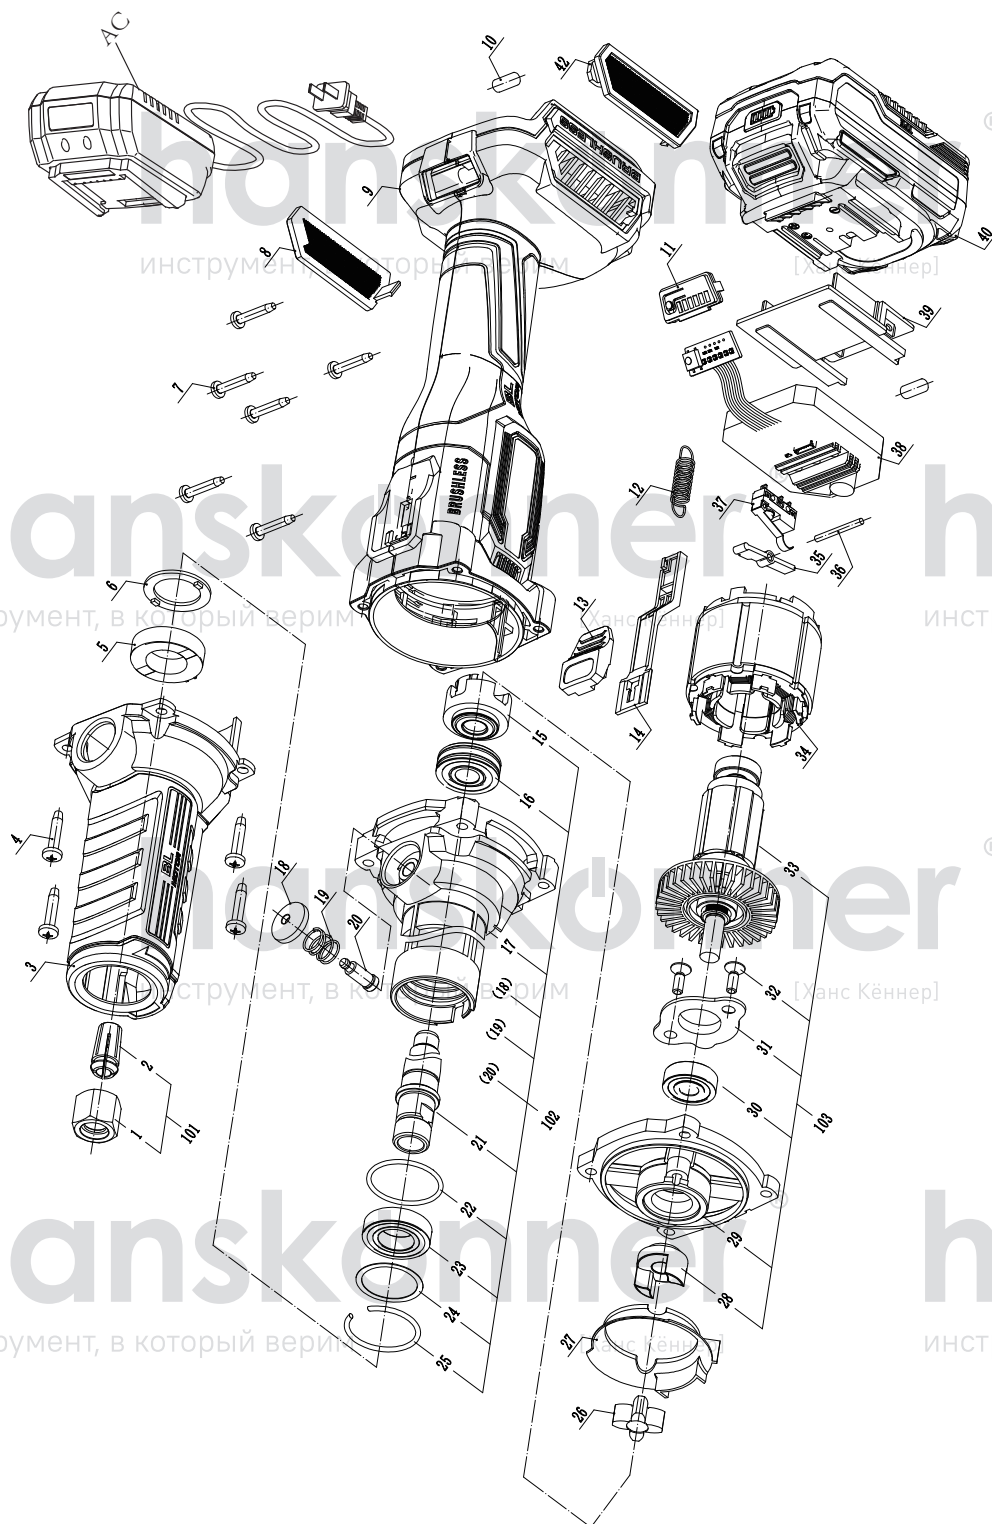

NO.	DESCRIPTION
1	CHUCK
2	CHUCK NUT
3	FRONT HOUSING
4	SCREW ST4.2X37
5	LED COVER
6	LIGHTING PANEL
7	SCREW ST3.5X19
8	RIGHT DUST FILTER
9	RIGHT HOUSING
10	RUBBER COLUMN
11	SPEED CONTROL PANEL
12	SPRING
13	SWITCH BUTTONS
14	PULL ROD
15	FRONT SHAFT SLEEVE
16	BEARING 6000Z
17	TRANSMISSION BOX
18	PIN COVER
19	SPRING
20	LOCKING PIN
21	OUTPUT SHAFTa
22	O-RING
23	BEARING 6902RS
24	GASKET
25	CIRCLIP
26	SHOCK-ABSORBING PAD
27	WIND RING
28	REAR SHAFT SLEEVE
29	MIDDLE COVER
30	BEARING 608RS
31	FIX PLATEN
32	SCREW M4X8
33	ROTOR
34	STATOR
35	SWITCH PRESSURE PLATE
36	PIN Ø2.5X25
37	SWITCH
38	MOTOR PCB
39	CONNECTION FOOT
40	BATTERY PACK
AC	CHARGER
42	LEFT DUST FILTER
101	CHUCK ASSEMBLY
102	TRANSMISSION BOX ASSEMBLY
103	MIDDLE COVER ASSEMBLY

HSG1868-EX-RU250401