


## PG10500E

NO.	DESCRIPTION	NO.	DESCRIPTION
1	FUEL TANK	38	STATOR FIXING BOLT
2	BUSHING	39	STANDARD SPRING WASHER
3	OIL TANK DAMPING RUBBER PAD	40	STATOR FIXING NUT
4	FUEL CONTROL VAVLE	41	ROTOR BOLT
5	FLAT WASHER	42	FLAT WASHER
6	BOLT	43	STATOR
7	FUEL METER	44	ROTOR
8	CROSS RECESSED CONTERSUNK HEAD SCREW	45	WIND SCOOPER
9	FUEL FILTER	46	PANEL MAIN WIRE HARNESS ASSEMBLY
10	FUEL TANK CAP	47	PANEL REAL COVER
11	FRAME	48	RECTIFIER BRIDGE
12	SHOCHPROOF FOOT(RIGHT)	49	POWER SOCKET ASSEMBLY
13	NUT-FINE THREAD	50	POWER SOCKET ASSEMBLY
14	SHOCHPROOF FOOT(LEFT)	51	TERMINAL
15	BATTERY BAND	52	TERMINAL
16	BATTERY	53N	VOLTMETER
17	NEGATIVE LINE	54N	SINGLE POLE CIRCUIT BREAKER
18	POSITIVE LINE	55	CONTROL PANEL BODY
19	NUT	56	CONTROL PANEL BODY (SWITCH BOTTOM PLATE)
20	ALTERNAOR BRACKET DAMPER BLOCK	57	SWITCH ASSEMBLY(ELECTRIC)
21	SHOCHPROOF FOOT(RIGHT)	58	BOLT
22	UNIT POWER	59	HAND TUBE SUPPORT
23	AIR FILTER BRACKET	60	HAND TUBE
24	BOLT	61	HAND TUBE RUBBER COVER
25	ALTERNATOR RIGHT COVER STOPPER	62	BOLT
26	EXHAUST GASKET	63	ALL-METAL NUT
27	MUFFLER	64	SUPPORT FOOT
28	BOLT	65	SUPPORT FOOT RUBBER COVER
29	STATOR BOLT	66	BOLT
30	CARBON BRUSH	67	NUT
31	TERMINAL	68	FLAT WASHER
32	BOLT	69	FRONT WHEEL AXLE
33	REAL COVER	70	THE FRONT WHEEL
34	NUT	71	COTTER PIN
35	BOLT	72	FLAT WASHER
36N	AVR		
37	ALTERNATOR BRACKET		

PG10500E VER2.1-EX-CK03P2026038ST

# ENGINE FOR PG10500E

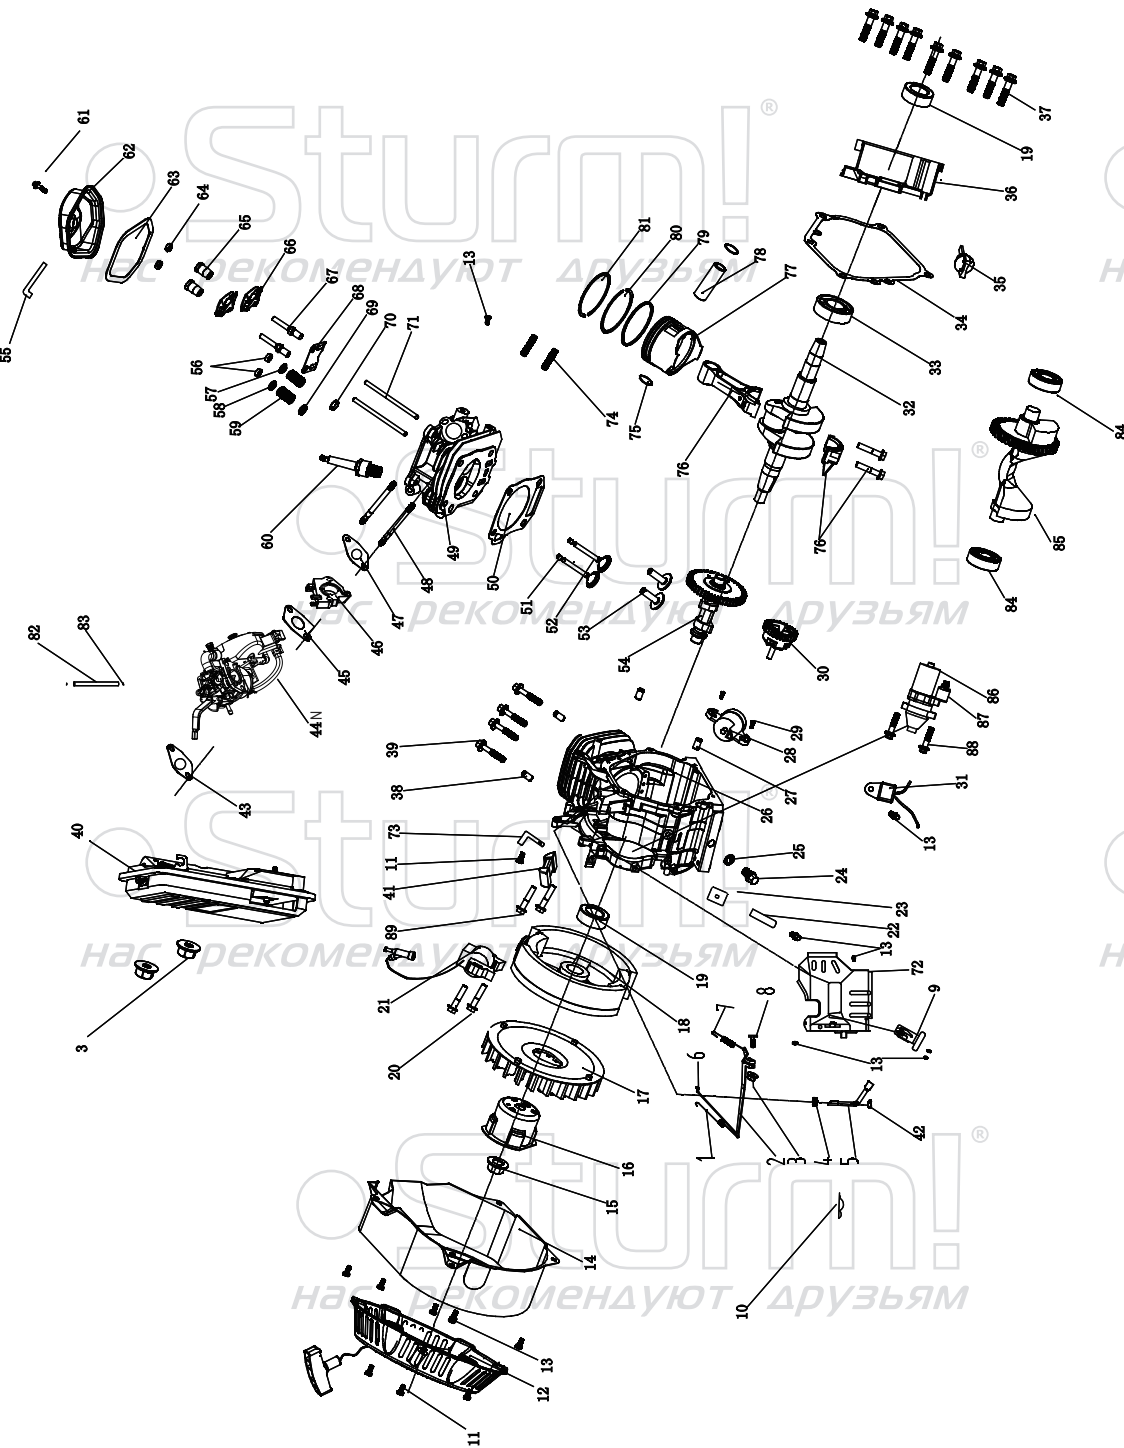

NO.	DESCRIPTION	NO.	DESCRIPTION
1	RESET SPRING (THROTTLE VALVE)	46	INSULATION BOARD (CARBURETOR)
2	CONTROL ASSEMBLY	47	AIR INLET GASKET
3	NUT	48	DOUBLE-SCREW BOLT
4	CONNECTING ROD OIL SEAL	49	CYLINDER HEAD
5	GOVERNOR ARM	50	CYLINDER HEAD GASKET
6	GOVERNING PULL ROD	51	INTAKE VALVE
7	GOVERNING SPRING	52	EXHAUST VALVE
8	FIXING BOLT OF SPEED CONTROL BRACKET	53	VALVE LIFTER
9	OIL CONTROL SET	54	CAMSHAFT ASSEMBLY
10	COTTER PIN	55	WASTE PIPE
11	BOLT	56	VALVE ADJUSTING CAP
12	RECOIL STARTER	57	EXHAUST VALVE SPRING SEAT
13	BOLT	58	EXHAUST VALVE SPRING SEAT
14	RECOIL STARTER	59	VALVE SPRING
15	NUT	60	SPARK PLUG
16	STARTING PULLEY	61	CYLINDER HEAD BOLT ASSEMBLY
17	FLY WHEEL	62	CYLINDER HEAD COVER
18	FLY WHEEL SET	63	CYLINDER HEAD GASKET
19	OIL SEAL	64	NUT
20	BOLT	65	NUT
21	IGNITOR COIL	66	VALVE ROCKER ARM
22	WIRE CLAMP	67	ROCKER SHAFT BOLT
23	RUBBER STOPPER	68	PLATE PUSH GUIDE
24	BOLT	69	OIL SHIELD
25	GASKET	70	VALVE SPRING SEAT
26	CRANKCASE	71	VALVE LIFTER
27	LOCATION PIN	72	CYLINDER HEAD WIND SCOOPER
28	OIL ALERT	73	CHARGING COIL CLAMP
29	BOLT	74	DOUBLE-SCREW BOLT
30	GOVERNOR GEAR SET	75	CLIP(PISTON PIN)
31	OIL PROTECTOR	76	CONNECTING ROD
32	CRANKSHAFT	77	PISTON
33	DEEP GROOVE BALL BEARING	78	PISTON PIN
34	GASKET(CRANKSHAFT)	79	PISTON RING
35	OIL GUAGE SET	80	PISTON RING
36	CRANKCASE COVER	81	PISTON RING
37	BOLT	82	FUEL PIPE
38	LOCATION PIN	83	CLAMP(FUEL PIPE)
39	CYLINDER HEAD BOLT	84	DEEP GROOVE BALL BEARING
40	AIR CLEANER ASSY	85	BALANCE SHAFT
41	CHARGING COIL	86	STARTING MOTOR
42	GOVERNOR ROD GASKET	87	STARTING RELAY
43	GASKET(AIR CLEANER)	88	BOLT
44N	CARBURETOR	89	BOLT
45	GASKET(CARBURETOR)		

PG10500E VER2.1-EX-CK03P2026038ST

нас рекомендуют друзья