


PW9221

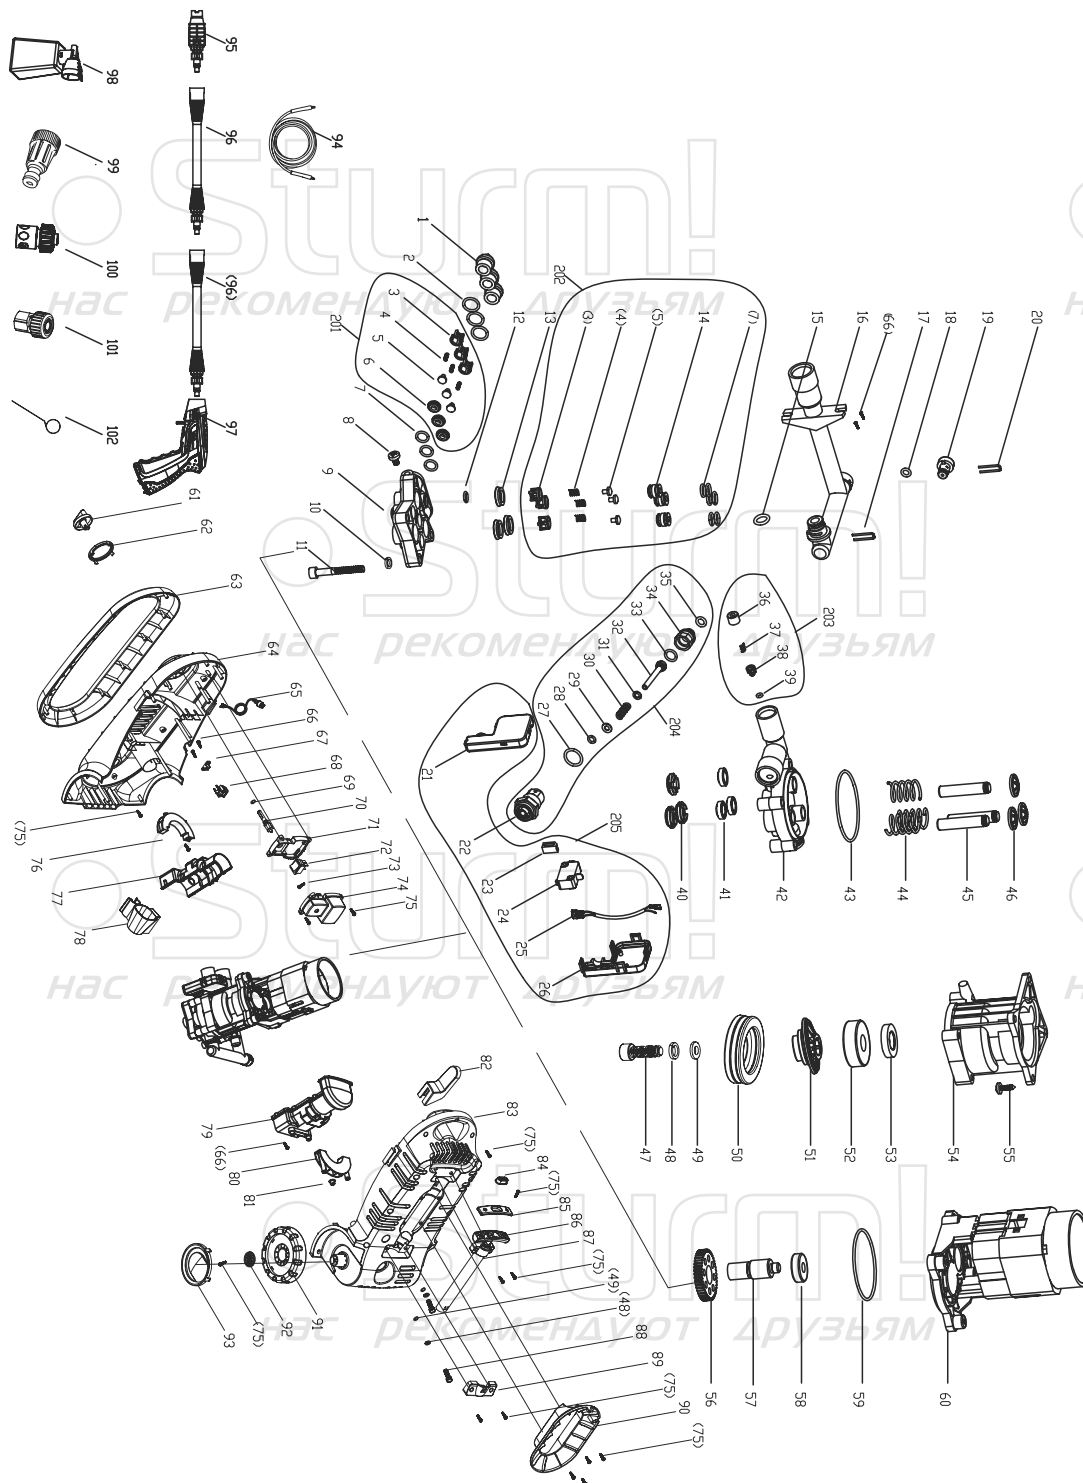

NO.	DESCRIPTION	NO.	DESCRIPTION
1	OUTLET VALVE PLUG M14*1.5	55	TAPPING SCREW
2	O-RING	56	BIG GEAR
3	CHECK VALVE SHELF	57	TRANSMISSION SHAFT
4	CHECK VALVE SPRING	58	BEARING 629
5	CHECK VALVE CORE	59	O-RING
6	OUTLET VALVE STAND	60	MOTOR ASSEMBLY
7	O-RING	61	SWITCH KNOB
8	SCREW	62	SWITCH KNOB PANEL
9	PUMP BODY	63	TRIM PANEL
10	SPRING GASKET	64	FRONT COVER
11	SCREW	65	POWER CABLE & PLUG
12	O-RING	66	TAPPING SCREW
13	Y TYPE WATER SEAL	67	CABLE CLAMP
14	WATER INLET VALVE STAND	68	CABLE SLEEVE
15	O-RING	69	O-RING
16	WATER INLET CONNECTOR	70	SWITCH LEVER
17	U PIN	71	MAIN SWITCH BOX
18	O-RING	72	MAIN SWITCH
19	WATER INLET VALVE PLUG	73	WIRING CAP
20	U PIN	74	MAIN SWITCH COVER
21	MICRO SWITCH COVER	75	TAPPING SCREW
22	OVER FLOW VALVE NUT	76	WINDSHIELD
23	SLIDE BLOCK	77	MOTOR FRONT COVER
24	MICRO SWITCH	78	GUN HOLDER
25	MICRO SWITCH LEAD WIRE	79	MOTOR BACK COVER
26	MICRO SWITCH BOX	80	WINDSHIELD
27	O-RING	81	SHOCK PAD
28	O-RING	82	PRSSURE HOSE HOOK
29	OVER FLOW VALVE GASKET	83	BACK COVER
30	OVER FLOW VALVE SPRING	84	PULL ROD BUTTON
31	OVER FLOW VALVE SHUTTER	85	PULL ROD COVER
32	OVER FLOW VALVE CORE	86	PULL ROD HANDLE
33	O-RING	87	PULL ROD
34	OVER FLOW VALVE	88	SCREW
35	O-RING	89	PULL ROD UNDER COVER
36	MAIN VALVE STAND	90	POWER CABLE SPOOL
37	MAIN VALVE SPRING	91	WHEEL
38	MAIN VALVE CORE	92	WHEEL PLATEN
39	O-RING	93	WHEEL TRIM PANEL
40	INTERMEDIATE SLEEVE	94	HIGH PRESSURE HOSE
41	OIL SEAL	95	SPEARHEAD
42	PUMP HEAD	96	GUN STOCK
43	O-RING	97	GUN HANDLE
44	PLUNGER SPRING	98	DETERGENT-BOTTLE
45	PLUNGER	99	NOZZLE CONNECTOR
46	PLUNGER SPRING STAND	100	WATER INLET QUICK CONNECTOR
47	SCREW	101	WATER OUTLET QUICK CONNECTOR
48	SPRING GASKET	102	CLEANING NEEDLE
49	M8 FLAT GASKET	201	OUTLET CHECK VALVE ASSEMBLY
50	PLANE BEARING	202	INLET CHECK VALVE ASSEMBLY
51	SWASH PLATE	203	MAIN VALVE ASSEMBLY
52	BEARING 6302	204	OVER FLOW VALVE ASSEMBLY
53	SKELETON OIL SEAL	205	MICRO SWITCH ASSEMBLY
54	CYLINDER		