


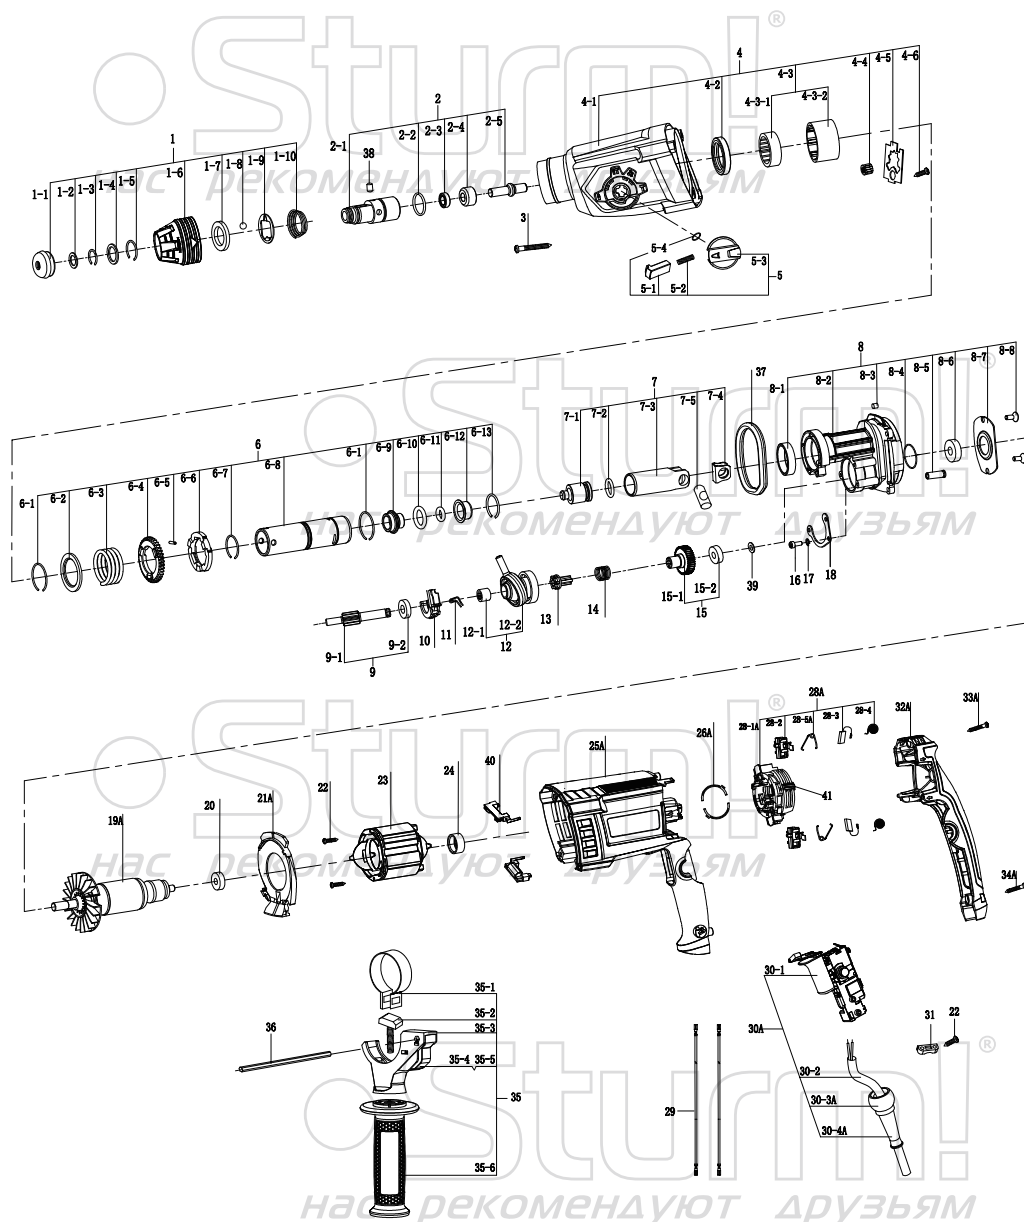

RH2526BR

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
1	PROTECTION SLEEVE ASSY	6-6	CLUTCH DISK	18	PRESSURE PLATE
1-1	PROTECTION CAP	6-7	CIRCLIP	19A	ROTOR
1-2	WASHER	6-8	ROTARY SLEEVE	20	BEARING 607RS
1-3	CIRCLIP	6-9	GUIDE BUSHING	21A	WIND GUIDE
1-4	LOCATION RING	6-10	O-RING	22	SCREW ST3.9×16
1-5	CIRCLIP 19×2	6-11	O-RING	23	STATOR
1-6	PROTECTION SLEEVE	6-12	DAMPING BUSHING	24	RUBBER BEARING SLEEVE
1-7	WASHER	6-13	CIRCLIP	25A	HOUSING
1-8	STEEL BALL Ø7.14	7	CYLINDER ASSY	26A	SWITCH CONTACT
1-9	WASHER	7-1	PISTON	28A	CARBON BRUSH HOLDER ASSY
1-10	SPRING	7-2	O-RING	28-1A	CARBON BRUSH HOLDER
2	DRILL SLEEVE ASSY	7-3	CYLINDER	28-2	BRUSH HOLDER
2-1	DRILL SLEEVE	7-4	WASHER	28-3	CARBON BRUSH
2-2	O-RING	7-5	PIN	28-4	COIL SPRING
2-3	OIL SEAL	8	BRACKET ASSY	28-5A	TORSION SPRING
2-4	THRUST RING	8-1	BUSHING	29	INNER WIRE
2-5	IMPACT ROD	8-2	BRACKET	30A	SWITCH ASSY
3	SCREW ST4.8×45	8-3	WOOL FELT	30-1	SWITCH
4	GEAR HOUSING ASSY	8-4	O-RING	30-2	CORD
4-1	GEAR HOUSING	8-5	BRACKET PIN	30-3A	CORD GUARD CONNECTOR
4-2	OIL SEAL	8-6	BALL BEARING 609RS	30-3A	CORD GUARD
4-3	BEARING SLEEVE ASSY	8-7	BEARING PRESS PLATE	31	CORD CLIP
4-3-1	NEEDLE BEARING HK3012	8-8	SCREW M4×10	32A	HOUSING COVER
4-3-2	BEARING SLEEVE	9	MIDDLE GEAR ASSY	33A	SCREW ST4×35
4-4	NEEDLE BEARING HK0709	9-1	MIDDLE GEAR	34A	SCREW ST4×16
4-5	WASHER	9-2	BEARING 699	35	AUXILIARY HANDLE ASSY
4-6	SCREW ST4.2×13	10	SHIFT FORK	35-1	CLAMPING BAND
5	SELECTOR KNOB ASSY	11	SNAP RING	35-2	T- BOLT
5-1	LOCKING BUTTON	12	ROCKER BEARING ASSY	35-3	CLAMP HOLDER
5-2	SPRING	12-1	NEEDLE BEARING HK0908	35-4	CLAMP
5-3	SELECTOR KNOB	12-2	ROCKER BEARING	35-5	SPRING
5-4	O-RING	13	CLUTCH	35-6	AUXILIARY HANDLE
6	ROTARY SLEEVE ASSY	14	SPRING	36	DEPTH RULER
6-1	CIRCLIP	15	BEVEL GEAR ASSY	37	O-RING
6-2	WASHER	15-1	BEVEL GEAR	38	PIN
6-3	SPRING	15-2	BEARING 607Z	39	GASKET
6-4	BIG GEAR	16	SCREW M4X12	40	TERMINAL BOARD
6-5	PIN	17	Φ4 SPRING WASHER	41	FORWARD/REVERSE BUTTON