


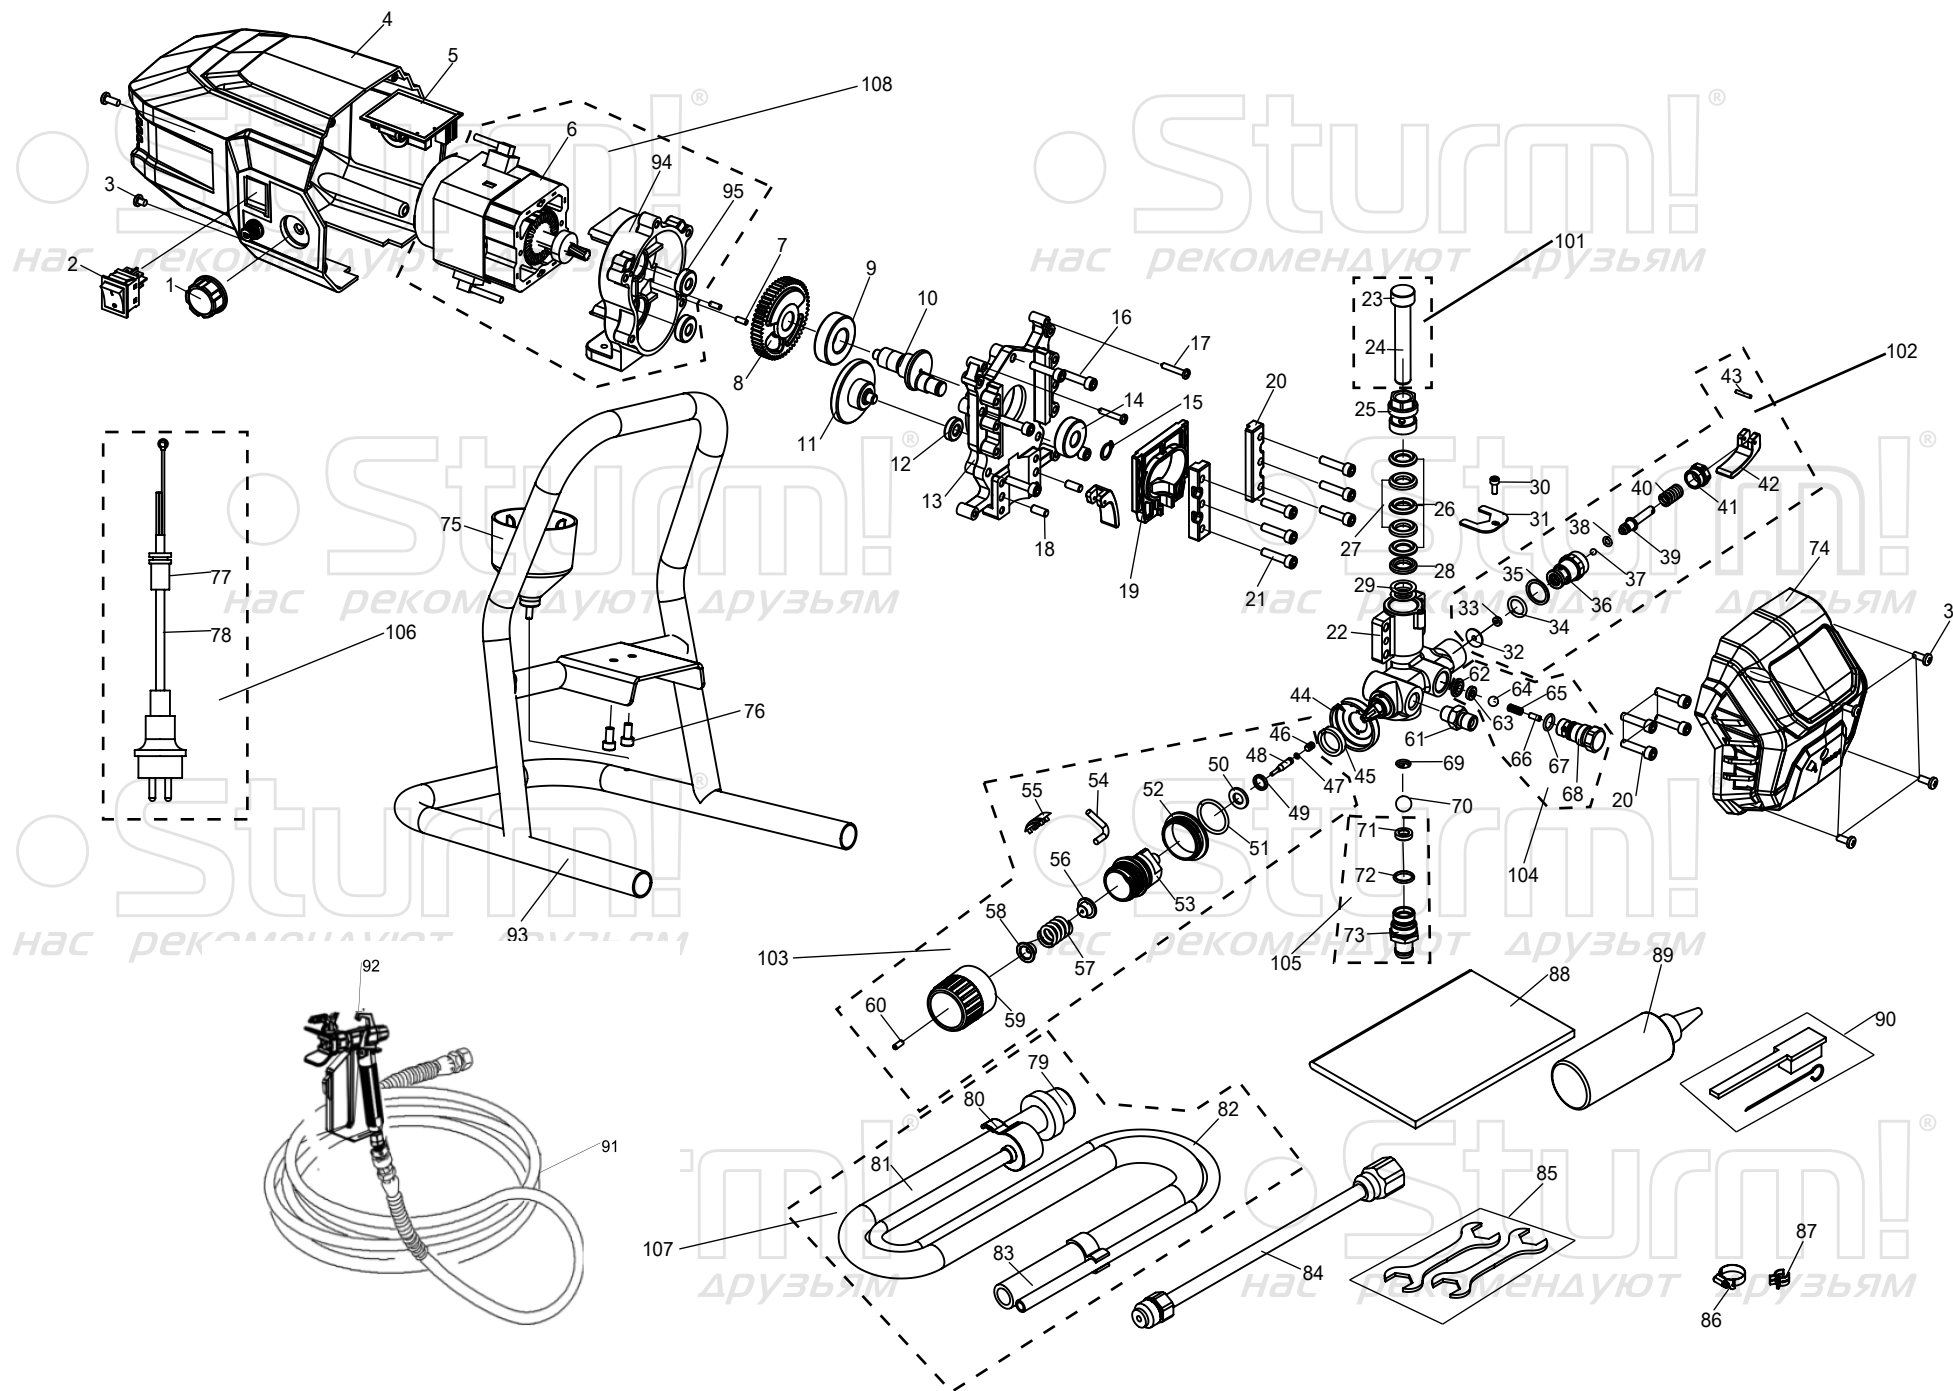

SG9650

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
1	KNOB	27	V-PACKING 2	53	FIXING THREAD SLEEVE	79	SUCTION FILTER
2	ON/OFF SWITCH	28	SEAL SUPPORT SEAT	54	MICRO SWITCH	80	CLIP
3	SCREW	29	WAVE-GAKSET	55	PLATEN	81	SUCTION TUBE
4	REAR COVER	30	SCREW	56	PRESSURE RING	82	RETURN TUBE
5	CIRCUIT BOARD 220V	31	BUSHING RETAINER	57	SPRING	83	CLIP
6	MOTOR 220V	32	SEALING GASKET	58	PRESSURE RING	84	EXTENSION POLE 30CM
7	PIN Φ4	33	SEAT	59	OUTER KNOB	85	WRENCH
8	BIG GEAR	34	O-RING	60	HEX SCREW	86	CLAMP
9	BEARING 6004Z	35	ALUMINUM GASKET	61	NIPPLE 1/4"	87	CLAMP
10	CRANKSHAFT	36	PRIME/SPRAY VALVE BODY	62	SEAL	88	MANUAL
11	GEAR	37	BALL(SILICON CARBIDE)	63	OUTLET SEAT	89	LUBRICATING OIL
12	BEARING 698Z	38	O-RING	64	CERAMIC BALL	90	CLEANING BRUSH/NEEDLE
13	GEARBOX FRONT COVER	39	SPINDLE	65	SPRING	91	PURESSURE HOSE 1/4" 7.5M
14	BEARING 6201Z	40	SPRING	66	TOP PIN	92	SPRAY GUN
15	C-CLIP	41	ADJUSTMENT COVER	67	O-RING	93	BASE FRAME
16	SCREW	42	HANDLE	68	OUTLET VALVE BODY	94	SEAT HOUSING
17	SCREW	43	PULL ROD PIN	69	SPRING	95	BEARING 608Z
18	PIN Φ6	44	COVER	70	BALL, INLET VALVE	101(23~24)	PISTON ROD ASSY
19	CONNECTING ROD	45	SUPPORT RING	71	INLET VALVE SEAT	102(32~43)	PRIME/SPRAY VAVE ASSY
20	PLATEN	46	PLASTIC SLIDE	72	O-RING	103(46~60)	PRESSURE REGULATOR ASSY
21	SCREW	47	O-RING	73	INLET VALVE BODY	104(62~68)	OUTLET VALVE ASSY
22	PUMP BODY	48	PUSH ROD	74	FRONT COVER	105(71~73)	INLET VALVE ASSY
23	SLEEVE	49	PTFE GASKET	75	CUP	106(77~78)	POWER CABLE & PLUG ASSY
24	PUSH ROD	50	ALUMINUM GASKET	76	SCREW	107(79~83)	SUCTION TUBE & RETURN TUBE ASSY
25	SLEEVE	51	O-RING	77	CLIP	108(6+94+95)	MOTOR ASSY
26	V-PACKING 1	52	INNER THREAD SLEEVE	78	POWER CABLE		