


ДУ1-1000

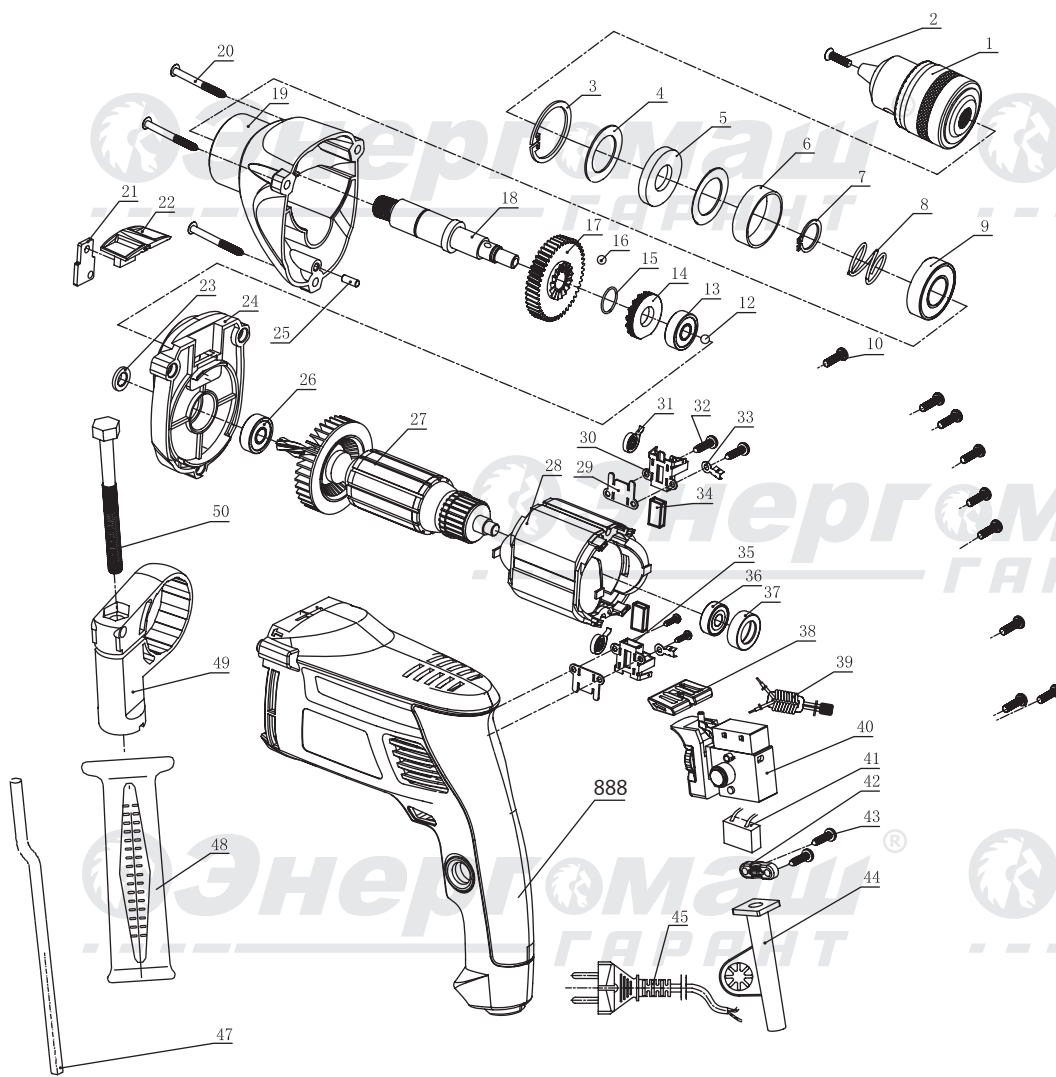

NO.	DESCRIPTION	NO.	DESCRIPTION
1	CHUCK	27	ROTOR
2	CHUCK SCREW	28	STATOR
3	CIRCLIP	29	CARBON BRUSH HOLDER WASHER
4	WASHER	30	UPPER BRUSH HOLDER
5	WOOL WASHER	31	SPRING
6	STEEL BUSH	32	SCREW
7	CIRCLIP	33	INSERT PIECE
8	SPRING	34	CARBON BRUSH
9	BEARING 6003Z	35	DOWN BRUSH HOLDER
10	SCREW	36	BEARING 607Z
12	STEEL BALL	37	BEARING BUSH
13	BEARING 608Z	38	DIRECTION SWITCH
14	IMPACT GEAR	39	INDUCTOR
15	RETAINING RING	40	SWITCH
16	STEEL BALL	41	CAPACITOR
17	GEAR	42	CORD CLAMP
18	SPINDLE	43	SCREW
19	GEAR BOX	44	CORD SLEEVE
20	SCREW	45	CORD & PLUG
21	CHANGE PLATE	47	DEPTH GAUGE
22	IMPACT/DRILL CHANGE BUTTON	48	DOWN HANDLE
23	ANTI-OIL COVER	49	UPPER HANDLE
24	MIDDLE COVER	50	BOLT
25	PIN	888	HOUSING ASSEMBLY
26	BEARING 608Z		

RU-EN20190628