



СОЮЗ®

ДШС-12П1 ДШС-12-1Л ДШС-14-1Л

NO.	DESCRIPTION	NO.	DESCRIPTION
1	LEFT SCREW M5x20	26	THE SECOND GEAR RING
2N	KEYLESS CHUCK	27	THE FIRST PLANET CARRIER
3	RINGΦ20.4	28	THE FIRST PLANET GEAR
4	PRESS BOARD	29	THE FIRST GEAR RING
5	TORQUE RING	30	LOCATING WASHER
6	BIG NUT	31	GEARBOX COVER
7	SPRING	32	MOTOR STATOR
8	TORQUE SPRING	33	MOTOR ROTOR
9	SPINDLE	34	TWO SPEED CHANGE BUTTON
10	BEARING 689Z	35	GEAR POSITION WASHER
11	TWO SPEED CHANGE SPRING	36	WIRE SPRING
12N	FRONT GEAR BOX	37	RIVET
13	SPING	38	SCREW ST2.9x14
14	GEARBOX PIN	39	HOUSING
15	RINGΦ9	40	BRUSHLESS MOTOR CONTROLLER
16	SMALL WASHER	41	DIRECTION LEVER
17	PIN	42	SWITCH
18	STEEL BALL Φ4	43	CONNECTION BOARD
19N	THE THIRD PLANET CARRIER	44	BATTERY PACK
20	THE THIRD PLANET GEAR	45	U BUCKLE
21	INNER GEAR RING	46	CHARGER
22	BIG WASHER	47	SPINDLE LOCK RING
23	THE SECOND PLANET CARRIER	48	SPINDLE LOCK PIN
24	THE SECOND PLANET GEAR	49	SPINDLE LOCK BLOCK
25	BACK GEAR BOX	100N	GEAR BOX ASSEMBLY

ДШС-12П1 ДШС-12-1Л ДШС-14-1Л-EX-RUS230313 Ver:2.0