


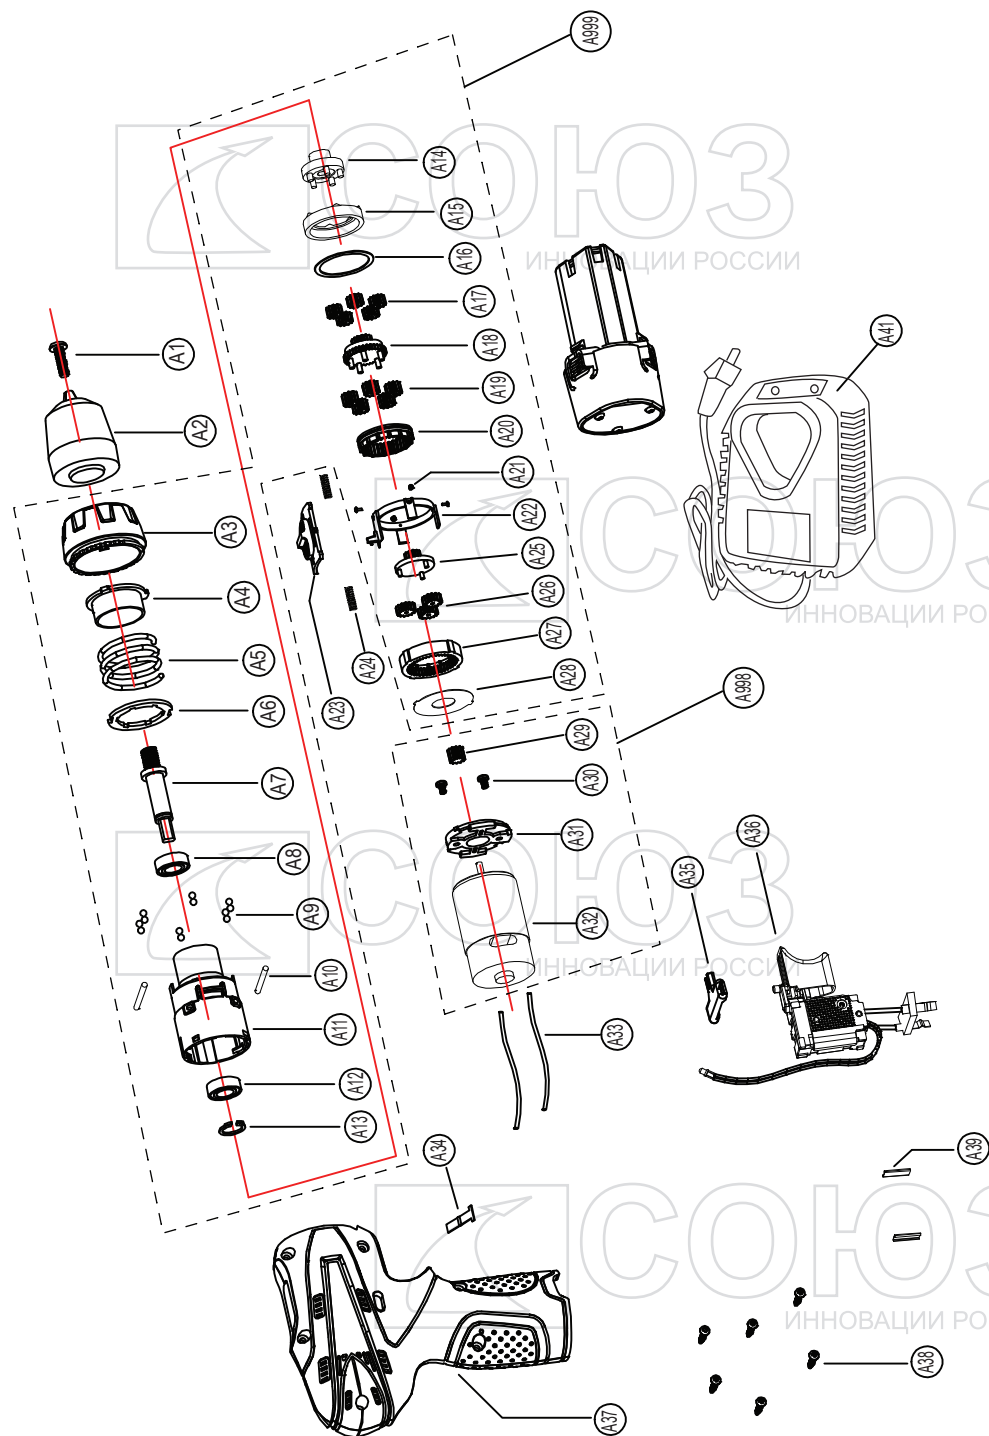

ДШС-3212Л

NO.	DESCRIPTION	NO.	DESCRIPTION
A1	CHUCK SCREW	A23	TWO SPEED CHANGE BUTTON
A2	KEYLESS CHUCK	A24	SPRING
A3	TORQUE ADJUSTMENT RING	A25	THE FIRST PLANETARY GEAR BRACKET
A4	TORQUE ADJUSTMENT NUT	A26	THE FIRST PLANETARY GEAR
A5	TORQUE ADJUSTMENT SPRING	A27	INNER GEAR RING
A6	TORQUE ADJUSTMENT WASHER	A28	WASHER
A7	SPINDLE	A29	MOTOR GEAR
A8	BEARING 688Z	A30	SCREW
A9	STEEL BALL	A31	PRESS BOARD
A10	PIN	A32	MOTOR
A11	GEAR BOX	A33	INTERNAL WIRE
A12	BEARING 688Z	A34	TORQUE POSITION SPRING
A13	CIRCLIP	A35	DIRECTION POLE
A14	THE THIRD PLANETARY GEAR BRACKET	A36	SWITCH
A15	GEAR RING	A37	HOUSING
A16	WASHER	A38	SCREW
A17	THE THIRD PLANETARY GEAR	A39	HOUSING CIRCLIP
A18	THE SECOND PLANETARY GEAR BRACKET	A40	BATTERY PACK
A19	THE SECOND PLANETARY GEAR	A41	CHARGER
A20	TWO SPEED CHANGE GEAR RING	A998	MOTOR ASSEMBLY
A21	RIVET	A999	GEAR BOX ASSEMBLY
A22	TWO SPEED CHANGE RING		

RU-SO20160831
VER:2.1