


ПР-32В

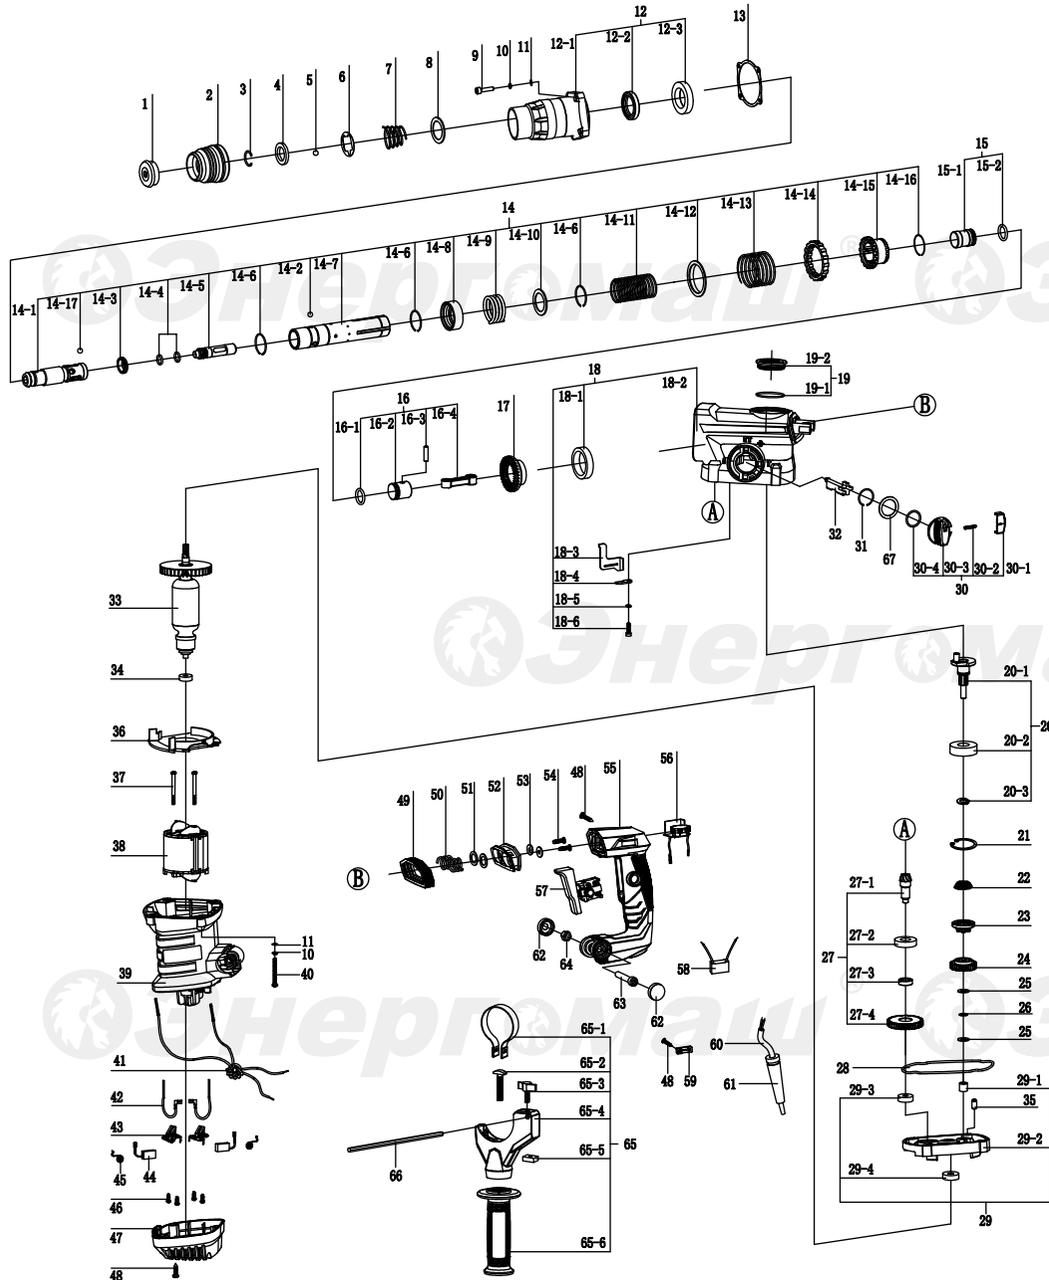

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
1	PROTECTIVE CAP	16-4	CONNECTING ROD	34	BALL BEARING 607
2	PROTECTION SLEEVE	17	BEVEL GEAR	35	PIN
3	SNAP RING	18	GEAR BOX ASSY	36	AIR-DEFLECTOR RING
4	WASHER	18-1	BUSHING	37	SCREW
5	BALL Ø7.14	18-2	GEAR BOX	38	STATOR
6	HOLDING PLATE	18-3	SHIFT PLATE 1	39	MOTOR HOUSING
7	COMPRESSION SPRING	18-4	SHIFT PLATE 2	40	M5X50 SCREW
8	WASHER	18-5	SPRING WASHER 4	41	INDUCTOR
9	SCREW M5*50	18-6	SCREW M4*16	42	CONNECTING CABLE
10	WASHER	19	OIL CAP ASSY	43	BRUSH HOLDER ASSY
11	WASHER	19-1	O-RING	44	CARBON BRUSH
12	GEAR HOUSING ASSY	19-2	OIL CAP	45	SPRING
12-1	GEAR HOUSING	20	CRANK SHAFT	46	SCREW ST3.9*12
12-2	OIL SEAL 41×7×30	20-1	CRANK SHAFT ASSY	47	REAR COVER
12-3	BALL BEARING 61906	20-2	BALL BEARING 6203	48	SCREW ST3.9*16
13	PAPER WASHER	20-3	CIRCLIP 16	49	DUST COVER
14	RATCHET SLEEVE ASSY	21	CIRCLIP	50	SPRING
14-1	DRILL BUSHING	22	SPRING	51	WASHER
14-2	BALL Ø7.14	23	SMALL CLUTCH	52	SPRING GUIDE
14-3	O-RING	24	GEAR	53	SCREW BUTTON
14-4	O-RING	25	WASHER	54	SCREW M5*12
14-5	IMPACT BOLT	26	NEEDLE BEARING AXK0816	55	HANDLE
14-6	RETAINING RING	27	PINION ASSY	56	CONTROLLER
14-7	RATCHET SLEEVE	27-1	PINION	57	SWITCH
14-8	SLEEVE	27-2	BALL BEARING 16002	58	CAPACITY
14-9	COMPRESSION SPRING	27-3	DISTANCE BUSHING	59	CORD CLIP
14-10	WASHER	27-4	BIG GEAR	60	CABLE
14-11	CLUTCH SPRING	28	O-RING	61	CORD GUARD
14-12	SPRING PLATE	29	BOTTOM COVER ASSY	62	CAP
14-13	CLUTCH SPRING	29-1	BUSHING	63	SCREW M8*40
14-14	CLUTCH SLEEVE	29-2	BOTTOM COVER	64	NUT M8
14-15	CLUTCH	29-3	BALL BEARING 608	65	AUXILIARY HANDLE ASSY
14-16	O-RING	29-4	BALL BEARING 629	65-1	CLAMPING BAND
14-17	BALL Ø8	30	SELECTOR KNOB ASSY	65-2	T-BOLT
15	STRIKER ASSY	30-1	RED BUTTON	65-3	SCREW BUTTON
15-1	STRIKER	30-2	SPRING	65-4	CLAMP HOLDER
15-2	O-RING	30-3	SELECTOR KNOB	65-5	BLOCK
16	CONNECTING ROD ASSY	30-4	O-RING	65-6	AUXILIARY HANDLE
16-1	O-RING	31	CIRCLIP Ø22	66	DEPTH GAUGE
16-2	PISTON	32	TRANSFER SHAFT	67	WASHER
16-3	PIN	33	ARMATURE		