


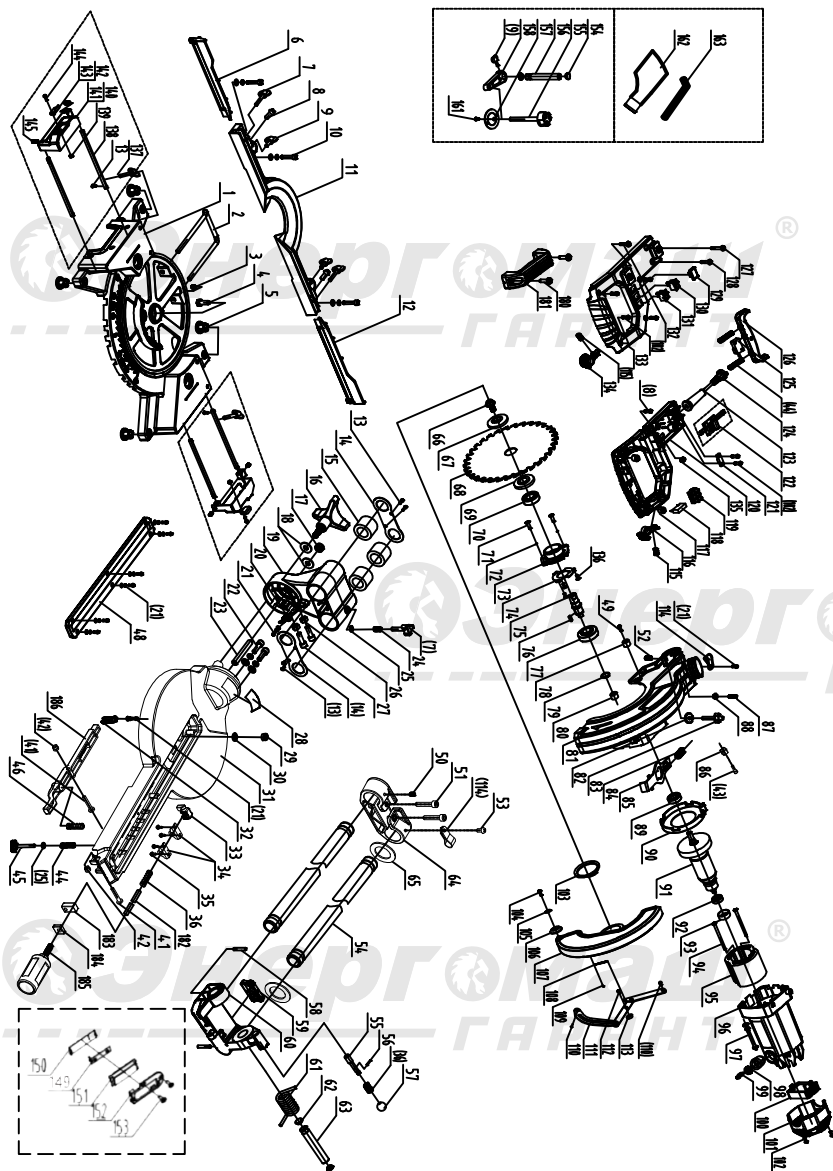

NO.	DESCRIPTION
001	Base
002	Rear support frame
003	Cross pan head screw M6×10
004	Hexagon head bolt M8 × 20
005	Rubber foot
006	Left movable support
007	Butterfly screw
008	Cross recess pan head screw
009	Butterfly screw
010	Hexagon socket head cap screw
011	Movable support
012	Right movable support
013	Cross recess pan head screw
014	Linear bearing end cover
015	Linear bearing
016	Angle locking hand wheel
017	Type 2 non-metallic hexagon lock nut
018	Gasket
019	Connection base
020	Oblique pointer
021	Cross pan head screw
022	Hexagon socket cap screws
023	Hexagon socket head cap screw
024	Pull rod locking spring
025	Flat pad
026	Nut M8
027	Hexagon socket head cap screw
028	Connecting base scale
029	Type 2 non-metallic hexagon lock nut
030	Flat gasket
031	Disc
032	Disc pointer
033	Clutch block
034	Fixed seat of disc locking rod
035	Cross pan head screw
036	Pull rod locking spring
041	Cross pan head screw
042	Type 2 non-metallic hexagon lock nut
043	Hexagon socket head cap screw
044	Switch trigger spring
045	9085 locking knob
046	Fixed rod spring
048	Slotting
049	Cross pan head screw
050	Hexagon socket head cap screw
051	Hexagon socket head cap screw
052	Hexagon socket head cap screw
053	Cross pan head screw
054	Pull rod
055	Self locking pin
056	Elastic pin

ПТ1-255ДМ

057	Ball nut
058	Elastic pin
059	Dust baffle
060	Support
061	Large torsion spring
062	Connecting shaft cover
063	Connecting shaft
064	Pull rod rear cover
065	Pull rod gasket
066	Saw blade set screw
067	External pressure plate
068	Blade
069	Internal pressure plate
070	Needle roller bearing
071	Cross recessed countersunk head screw
072	Bowl mat
073	Front cover
074	Bearing press plate
075	Output shaft
076	Flat key
077	big gear wheel
078	Limit post
079	Bearing ring 15 for shaft
080	Needle roller bearing hk1010
081	Housing shell
082	Knurled thin NUT
83	Locking knob
084	Shaft locking spring
085	Shaft lock
086	Bumper block
087	NUT M6
088	Hexagon socket flat end set screw
089	Rolling bearing 6001z3
090	Windshield
091	Rotor
092	Needle roller bearing
093	608 bearing sleeve
094	Cross pan head tapping screw
095	Stator
096	Housing shell
097	Cross pan head screw
098	Brush handle
099	Electric brush
100	Speed control module
101	Housing rear cover
102	Cross pan head tapping screw
103	Shaft bearing retainer 38
104	Cross pan head tapping screw
105	Flat pad
106	pulley
107	Movable hood
108	Movable cover spring
109	Cross pan head screw
110	Connecting rod head screw
111	Three linkage assembly
112	Connecting rod central screw
113	Connecting rod washer
114	Thread buckle

115	Knob spring
116	Switch self-lock knob
117	Self locking button sleeve
118	Capacitance 0.22 μ f
119	Wiring row (3 rows)
120	Lower handle
121	Crimping board
122	PCB board
123	Cable sheath
124	cablе
125	switch
126	Switch trigger
127	Cross pan head screw
128	Cross countersunk head tapping screw
129	Handle plastic cover
130	LED switch
131	Governor switch
132	Cross pan head screw
133	Upper handle
134	Switch self-lock knob
135	Handle plug
136	Cross pan head screw
180	Cross pan head tapping screw
181	Handle
182	Disc locking rod
183	Locking block
184	Side handle support block
185	side handle
186	Fixing rod
137	Butterfly screw
138	Extension rod
139	Type 2 non-metallic hexagon lock nut
140	Left wing
141	Right wing
142	Left wing moveable slice
143	Right wing moveable slice
144	Cross pan head screw
145	Cross pan head screw
149	LED light
150	LED board
151	LED cover
152	LED fix board
153	screw M4×14
154	Fixed rod cover
155	Hand wheel
156	Fixed rod
157	Jaw iron
158	Locking block
161	Non standard screw
162	Bag spring (+ 9105 bag)
163	Hex wrench

PT1-255DM-EX-20210406