


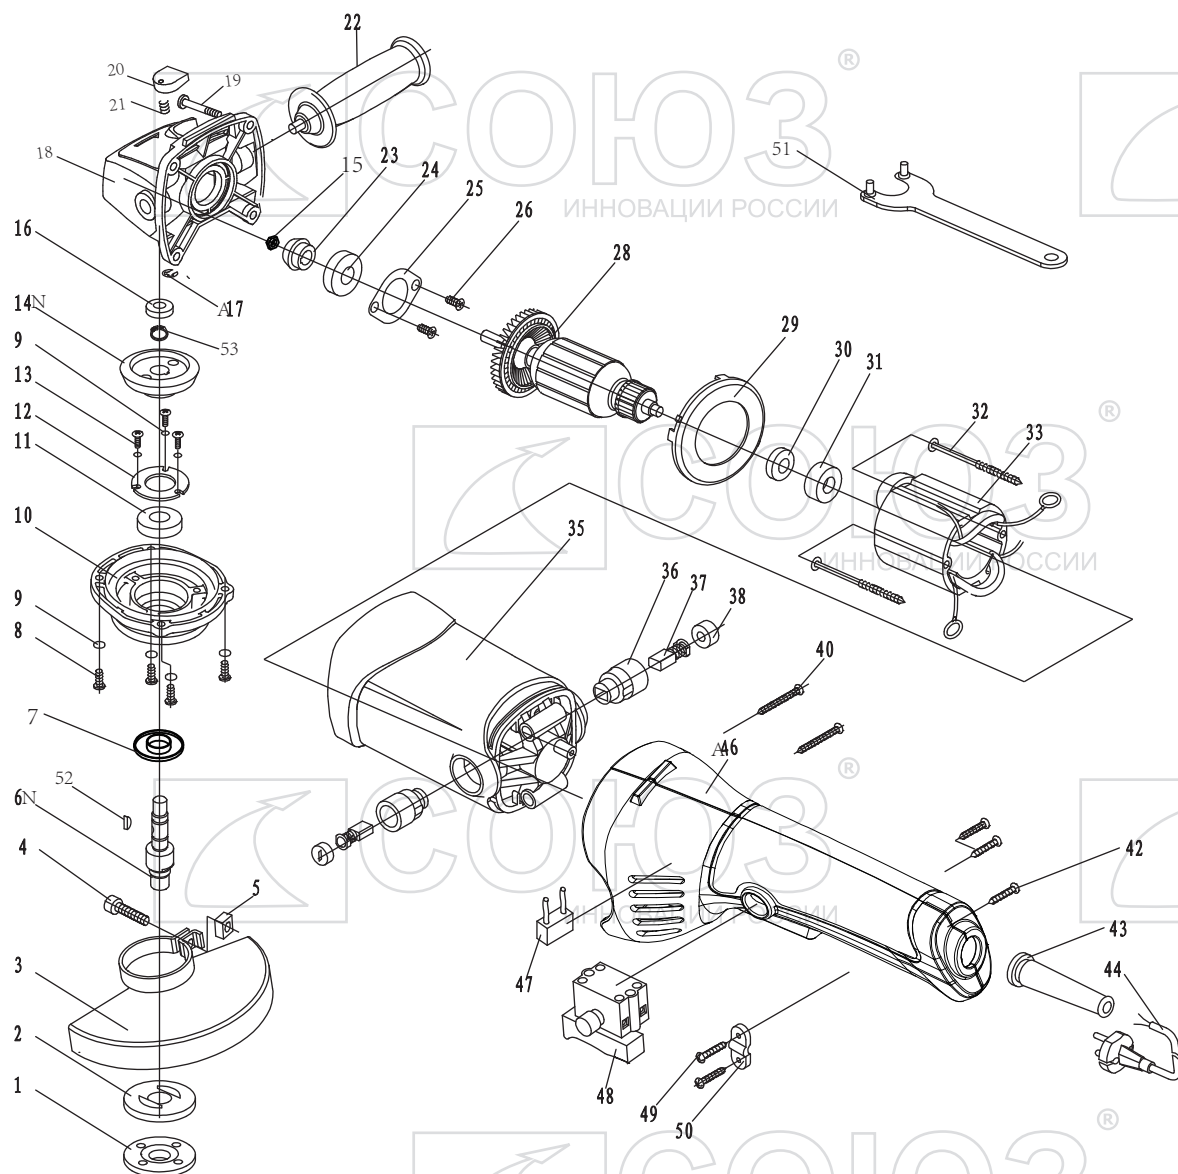

УШС-9512

NO.	DESCRIPTION	NO.	DESCRIPTION
1	OUTER FLANGE	25	BEARING COVER
2	INNER FLANGE	26	SCREW M4X10
3	WHEEL COVER	28	ROTOR
4	SCREW M8X20	29	WIND GUARD
5	NUT M8	30	BEARING 607Z
6N	SPINDLE	31	BEARING COVER
7	ANTI-DUST COVER	32	SCREW ST4.2X65
8	SCREW M4X16	33	STATOR
9	SPRING WASHER 4	35	HOUSING
10	FORE COVER	36	BRUSH HOLDER
11	BEARING 6201Z	37	CARBON BRUSH
12	PRESSURED BOARD	38	BRUSH CAP
13	SCREW M4X12	40	SCREW ST4.2X40
14N	BIG GEAR	42	SCREW ST4.2X18
15	NUT	43	CORD SLEEVE
16	BEARING 688Z	44	CORD & PLUG
17	"E" RING	46	HANDLE ASSEMBLY
18	GEAR BOX	47	CAPACITOR
19	SCREW ST4.2X22	48	SWITCH
20	LOCK PIN	49	SCREW ST4.2X14
21	SPRING	50	CORD CLAMP
22	SIDE HANDLE	51	SPANNER
23	SMALL GEAR	52	KEY
24	BEARING 629Z	53	CIRCLIP

RU-SO20181122-01