


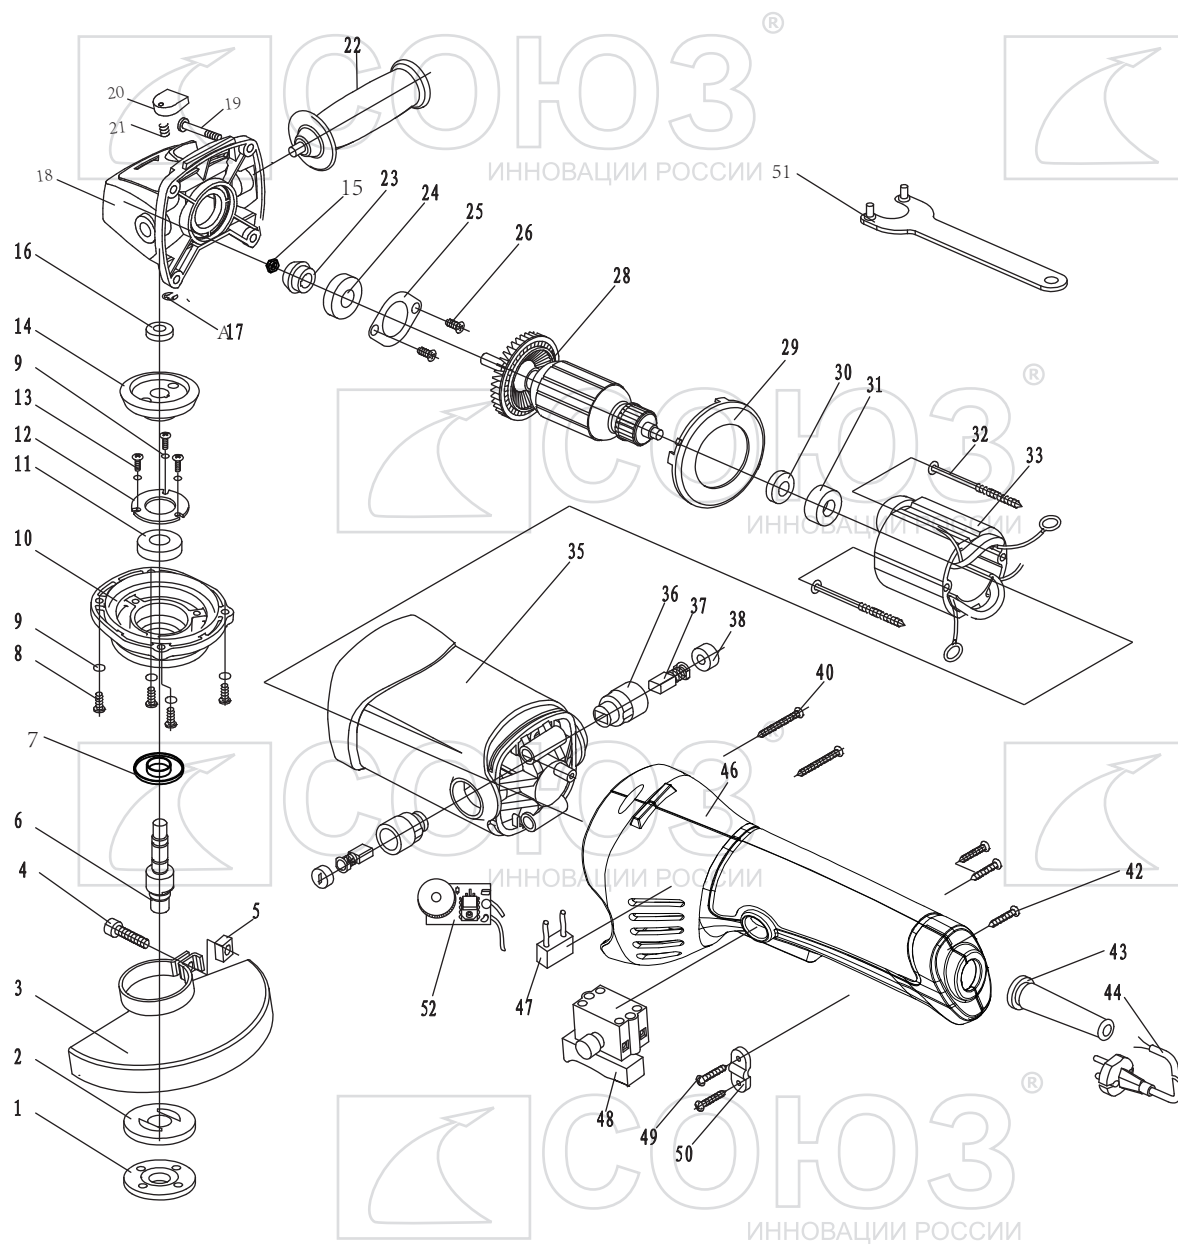

УШС-9512

NO.	DESCRIPTION	NO.	DESCRIPTION
1	OUTER FLANGE	24	BEARING 629Z
2	INNER FLANGE	25	BEARING COVER
3	WHEEL COVER	26	SCREW M4X10
4	SCREW M8X20	28	ROTOR
5	NUT M8	29	WIND GUARD
6	SPINDLE	30	BEARING 607Z
7	ANTI-DUST COVER	31	BEARING COVER
8	SCREW M4X16	32	SCREW ST4.2X65
9	SPRING WASHER 4	33	STATOR
10	FORE COVER	35	HOUSING
11	BEARING 6201Z	36	BRUSH HOLDER
12	PRESSURED BOARD	37	CARBON BRUSH
13	SCREW M4X12	38	BRUSH CAP
14	BIG GEAR	40	SCREW ST4.2X40
15	NUT	42	SCREW ST4.2X18
16	BEARING 688Z	43	CORD SLEEVE
17	"E" RING	44	CORD & PLUG
18	GEAR BOX	46	HANDLE ASSEMBLY
19	SCREW ST4.2X22	47	CAPACITOR
20	LOCK PIN	48	SWITCH
21	SPRING	49	SCREW ST4.2X14
22	SIDE HANDLE	50	CORD CLAMP
23	SMALL GEAR	51	SPANNER
		52	ADJUSTABLE SPEED SWITCH

RU-SO20170119