


HVC35P

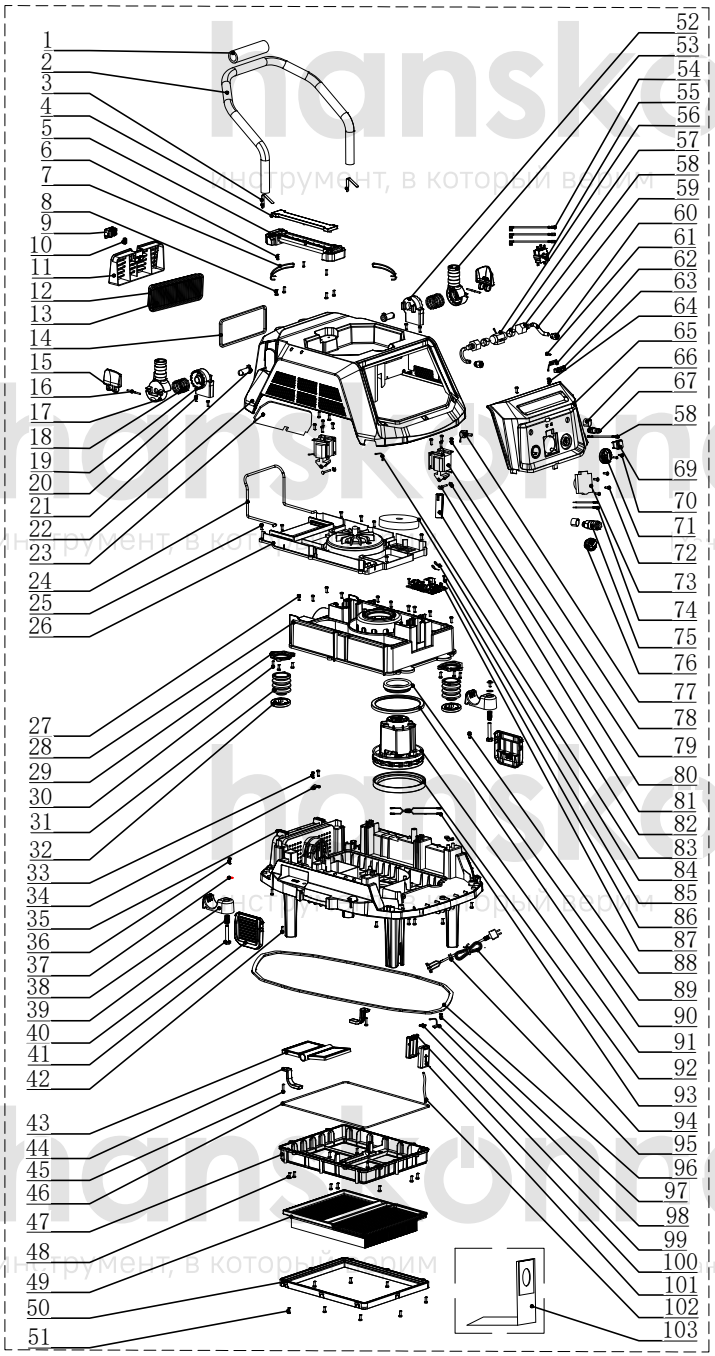

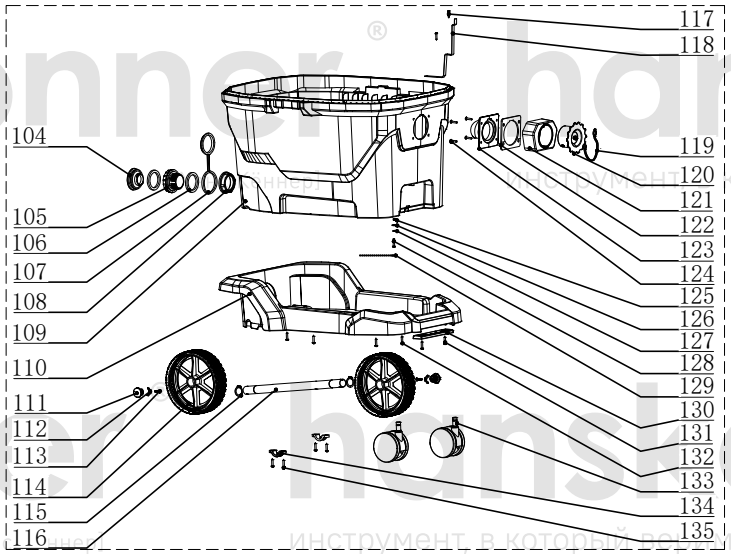

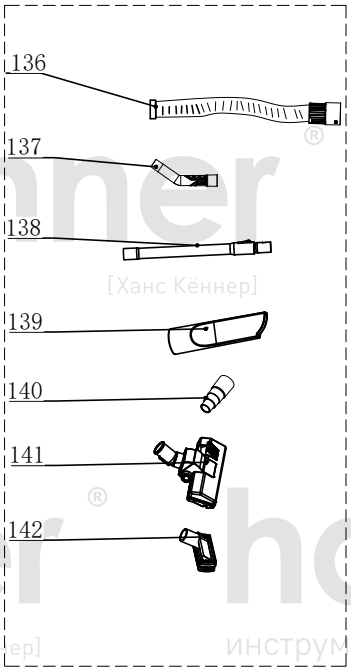

No.	Description	No.	Description
1	Push rod sleeve	73	Switch Knob
2	Push rod	74	Socket live wire
3	Push rod clip		Socket neutral wire
4	Handle cover	75	Type C Connector 20SM
5	Handle	76	Speed control knob
6	Handle cover fixing screw	77	Potentiometer
7	Elastic cord	78	Electromagnet fixing screw
8	Handle fixing screw	79	Traction Electromagnet
9	Exhaust grille latch	80	Open end gasket
10	Connector Locking Spring	81	Grooved Pin Shaft
11	Outer wind grille	82	Connection pipe
12	Air outlet Hapiframe	83	Electromagnet air wiring
13	Air outlet sea pump	84	Silencer Sponge
14	Exhaust Sea Pa Sealing Strip	85	Tie strap
15	Push rod lock buckle	86	Main control board fixing screw
16	Push rod connecting shaft	87	Main Control Board-1AY
17	Right anchor of the pushbar	88	Power line limit screw
18	Push rod spring	89	Motor Upper Seal Ring
19	Right push rod fixed seat	90	Motor Upper Seal Ring
20	Right push rod fixed seat screw	91	H2 Copper Motor
21	Wheel positioning shaft	92	Electrical shock block
22	Top cover	93	Motor Connection Wire
23	Inlet and outlet sponge	94	Power cable assembly
24	Winding hook	95	Best Power Line Protector
25	Motor upper cover fixing screw	96	Vacuum Sealing Strip
26	Motor upper cover	97	Hall Plate Fixing Screw
27	Motor cover fixing screw	98	Hall Sensor Control Board
28	Motor cover	99	Square magnetic steel
29	Pressure cover	100	Right shell of the buoyancy column
30	Pressure cover fixing screw	101	The left shell of the floating column
31	Press cover buffer pad	102	Dust fitts the transmission tube
32	Blower door (with rubber coating)	103	paper bag
33	Power cable clamp screw	104	Drain Port Seal Cover
34	Power cable clamp plate	105	Water outlet
35	Motor base	106	Drain seal ring
36	Hose dlamp self-tapping screw	107	Water outlet sealing connectionring
37	Metalgasket	108	Water outlet fixing nut
38	Hose clamp	109	barrel body
39	Protective valve spring	110	Base
40	Hose Clamp Fixed Shaft	111	Pipe Plug
41	Clasp	112	616 Plug Spring Clip
42	Motor base fixing screw	113	Spring clip fixing screw
43	Rotary block (with rubber coating)	114	Large Rear Wheel Assembly
44	Hook	115	Shaft spring clip
45	Hook Fixed Screw	116	Wheel axle
46	Hepa seatseal strip	117	Electrostatic Sheet Fixing Screw
47	Hepa seat	118	Electrostatic Detector Sheet
48	Hepa seatfixing screw	119	K-617 Dust Cover Hanging Rope
49	Inlet hepa	120	K-617 Dust Cover
50	Hepa pressure block	121	Suction seat
51	hepa pressure block fixing screw	122	Suction PortGasket
52	Left Push Rod FixedBracket	123	sucker mouth
53	Left Push Rod FixedFrame	124	Suction port fixing screw
54	Switch connectionwire	125	Stainless steel nut
55	Rotary switch (three positions)	126	Stainless steel washer
56	Flow sensor	127	Rubber gasket
57	Gasket	128	Stainless steelscrew
58	Pneumatic Quick Connector 2	129	Anti-staticchain
59	Air tube	130	Base handle cover
60	Pneumatic Quick Connector 1	131	Base handle cover fixing screw
61	Lamp board fixing screw	132	Base fixing screw
62	Indicator Light Panel Assembly	133	wheel
63	Indicator light shade	134	Rolling wheel steel tubeballast
64	Function panel fixing screw	135	Roller steel pipe pressure plate fixing screw
65	Function panel	136	hose
66	Joint sealing pad	137	Long curved pipe (with air adjustment valve)
67	C-type connector 20PM	138	Metal expansion tube
68	Press Switch Connection Wire	139	Nozzle
69	Press Switch	140	Tool Adapter
70	Switch Knob Fixing Screw	141	Floor brush
71	Switch Knob	142	small brush
72	Switch Knob Fixing Screw		